

# L 24/36 - Icon Guide





P/N:60M001A

## Display








- 1 Current Function
- 2 Select Function
- 3 Current settings
- Scanner Ready
- Scanner Scanning
- Scanner Open









## Function

-  Scan to network PC
-  Scan to USB stick
-  Copy
-  Settings

## Control

-  Home - moves to this top level COPY function in white box
-  Navigation Arrows - scroll the function displayed in the white box
-  OK - enter lower level menu of selected function or saves value
-  Paper Eject - eject doc to rear only if loaded & not scanning/calibrating.
-  Back - goes to the previous menu
-  Start - starts COPY / SCAN depending on function selected.
-  Stop - stops function

## Settings

-  Scanner calibration
-  Update firmware from USB stick
-  Scanner IP Address
-  Scanner info
-  Save current settings as default
-  Reset settings to default

## Image Adjustment



Number of copies

1 2 3 4 5 6 7 8 9



Color mode

Color, Grayscale



Quality

Standard, High, Best



Original page size

AUTO ANSI ARCH ISO



Scale factor for copy

25% 35% 50% 71% 100% 141% 200% 283% 287% 400% 432%



Brightness

None, Low, Medium, High,



Black Point

None, Low, Medium, High,



White Point

None, Low, Medium, High,



Crop borders

None, Remove Borders

## Information Messages



Scanner Working



Warning USB stick Error



Warning Printer Error



Warning PC Error



Warning Calibration Error



Warning Internal Memory Error