

Canon

PUB. DIE-303

DVD Camcorder Instruction Manual

DC330

•

•

•

Please read also the **Digital Video Software** instruction manual (on PDF file).



Important Usage Instructions

WARNING!

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING!

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

CAUTION:

DISCONNECT THE MAINS PLUG FROM THE SUPPLY SOCKET WHEN NOT IN USE.

The Mains plug is used as the disconnect device. The Mains plug shall remain readily operable to disconnect the plug in case of an accident.

While using the compact power adapter, do not wrap it or cover it with a piece of cloth, and do not place it in confined narrow spaces. Heat may build up, the plastic case may deform and it could result in electric shock or fire.

CA-570 identification plate is located on the bottom.



Using any device other than the Compact Power Adapter CA-570 may damage the camcorder.

This product has been classified under IEC60825-1:1993 and EN60825-1:1994.

CLASS 1 LASER PRODUCT

European Union (and EEA) only.

This symbol indicates that this product is not to be disposed of with your household waste, according to the WEEE Directive (2002/96/EC) and your national law. This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, approved WEEE scheme or your household waste disposal service. For more information regarding return and recycling of WEEE products, please visit www.canon-europe.com/environment. (EEA: Norway, Iceland and Liechtenstein)

How to Select a DVD Disc

There are many types of DVD discs but this camcorder uses only the following three types of 8 cm mini DVD discs: DVD-R, DVD-R DL and DVD-RW. Read the differences between them and select the disc that best fits your needs.

DVD-R

Best for Compatibility

 
DVD-Rs can be recorded only once – you cannot edit or delete the recordings. On the other hand, these discs are comparatively cheaper.

DVD-R DL

Best for Recording Time

Dual-layered discs allow writing up to 80% more data (approx. 2.6 GB) on a single recording side. However, you cannot edit or delete the recordings.

Dual-layered discs have two recording layers. The camcorder will record on layer 1 and then continue to layer 2. During the playback of a recording spanning both layers, you may notice a brief stop (about 1 second) at the point where the camcorder switches to the second layer. The switch to layer 2 will break the recording into 2 separate scenes.



DVD-RW

Best for Reusability

Recordings made on a DVD-RW disc can be edited or deleted. Also, the disc can be initialized. Initializing a DVD-RW disc clears all the recordings and restores the free space on the disc to its initial value so you can use the same disc again.

Disc specification on DVD-RWs

DVD-RW discs can be recorded using either one of two disc specifications: VIDEO mode or VR mode. When you first insert a brand new DVD-RW disc, the camcorder will automatically display the initialization screen where you can select the disc specification for the disc.

VIDEO mode: Once finalized, discs recorded in VIDEO mode can be played back in most common DVD players offering the best compatibility. However, recordings cannot be edited (deleted, rearranged, etc.).

VR mode: You can easily edit the recordings. However, discs recorded in VR mode can only be played back with DVD players compatible with DVD-RWs in VR mode.

Note: DVD-R and DVD-R DL discs can only be recorded in VIDEO mode.

Advantages of Using DVDs

No need to worry about recording over a tape.

When you use a DVD, the camcorder will automatically record on the empty space of the disc. So you don't have to worry about mistakenly recording over a precious memory.

Just select a scene from the index screen.

You don't need to bother running a tape forwards and backwards to find the scene you want to play back. Simply select a scene from the index screen and start the playback in a breeze.

Easily play back your recordings on a DVD player.

After you finalize your DVD (□ 47), you can play it on a DVD player and share your recordings with friends and family.

Playback on external devices

Make sure to finalize discs (□ 47) before you play them back on external DVD devices. The disc's type will affect its compatibility with external devices. For a summary, you can refer to the sidebar on page 48. However, to be sure, always refer to the instruction manual of the external device and make sure it is compatible before inserting the disc.

For the highest compatibility with external DVD devices we recommend using VIDEO mode.

Discs that have been tested

The camcorder's performance was tested with single-layered discs using Hitachi-Maxell HG series DVD discs; and with dual-layered discs using Canon DVD-R DL54 discs and Verbatim DVD-R DL discs (as of January 2008*). For further details, contact directly the manufacturer's customer support center. Note that attempting to record or play with this camcorder DVD discs that were recorded, initialized or finalized with other digital devices can result in damage to the camcorder or in the permanent loss of the recordings.

* For the latest information, visit your local Canon Web site or contact your nearest Canon office. The use of DVD-R DL discs that have not been tested by Canon may result in incorrect recording/playback or in not being able to remove the disc.

Available features depend on the DVD disc used

Disc type	DVD-R, DVD-R DL	DVD-RW	
		VIDEO mode	VR mode
Editing scenes with this camcorder (deleting scenes, dividing scenes, etc.) (□ 44)	—	—	● ¹
Deleting a scene after recording it (□ 33)	—	●	●
Initializing the disc in order to use it again for recording (□ 46)	—	●	●
Giving a title to the disc (□ 46)	●	●	●
Finalizing the disc in order to play it with an external DVD device (□ 47) ²	●	●	●
Adding recordings to a disc already finalized (□ 48)	—	● ³	●
Editing scenes on a computer ⁴ (□ 66)	●	●	●

¹ Only scenes in the playlist can be divided.

² Disc finalization is the processing of the free space (the unrecorded area) on the disc in order to make it playable on external DVD devices (□ 47). Playback cannot be guaranteed with all external DVD devices. To finalize a DVD-R DL disc, the camcorder has to process both layers. Therefore, and depending on the amount of free space on the disc, this process may be lengthy.

³ You will need to unfinalize the disc first.

⁴ With the supplied software you can make copies of your disc, play back and edit your video, and more. For further details, refer to the **Corel Application Disc Installation Guide and User Manual**.

Table of contents

Introduction

- 3 How to Select a DVD Disc
- 4 Advantages of Using DVDs
- 9 About this Manual
- 10 Getting to Know the Camcorder**
- 10 Supplied Accessories
- 11 Components Guide
- 14 Screen Displays



Preparations

- 17 Getting Started**
- 17 Charging the Battery Pack
- 18 Preparing the Wireless Controller and Accessories
- 20 Basic Operation of the Camcorder**
- 20 Power Switch
- 20 Operating Modes
- 20 Joystick and Joystick Guide
- 21 Using the Menus
- 23 First Time Settings**
- 23 Setting the Date and Time
- 23 Changing the Language
- 24 Changing the Time Zone
- 24 Getting Ready to Start Recording**
- 24 Opening the Lens Cover and Adjusting the LCD screen
- 25 Inserting and Removing a Disc
- 27 Inserting and Removing a Memory Card



Video

- 28 Basic Recording**
- 28 Shooting Video
- 30 Selecting the Recording Mode
- 30 Zooming: Optical, Advanced and Digital Zoom
- 32 Quick Start Function
- 32 Reviewing and Deleting the Last Scene Recorded

33 Basic Playback

- 33 Playing Back the Video
- 35 Deleting Scenes
- 35 On-Screen Displays (Data Code)

36 Additional Functions

- 36 [P] : Special Scene Recording Programs
- 38 [P] Flexible Recording: Changing the Shutter Speed
- 39 LCD Video Light
- 39 Self Timer
- 40 Manual Focus Adjustment
- 41 Manual Exposure Adjustment
- 41 White Balance
- 42 Image Effects
- 43 Digital Effects

44 Managing Scenes and the Disc

- 44 Creating a Playlist
- 45 Moving Scenes in the Playlist
- 45 Dividing Scenes
- 46 Initializing the Disc

46 Disc Playback on an External Device

- 46 Changing the Disc Title
- 47 Finalizing the Disc
- 48 Disc Playback on External Devices
- 48 Unfinalizing the Disc - Additional Recordings on a Finalized Disc



Photos

50 Basic Recording

- 50 Taking Photos
- 51 Selecting Photo Size and Quality
- 52 Erasing the Last Photo Just Recorded

52 Basic Playback

- 52 Viewing Photos
- 54 Magnifying Photos during Playback
- 54 Erasing Photos

55 Additional Functions

- 55 Continuous Shooting and Exposure Bracketing (Drive Mode)
- 56 Automatic Focus Priority
- 57 Histogram and Other Screen Displays
- 57 Protecting Photos
- 58 Initializing the Memory Card

59	Printing Photos
59	Printing Photos - Direct Print
59	Selecting the Print Settings
62	Print Orders



External Connections

64	Connecting to a TV or VCR
64	Connection Diagrams
65	Playback on a TV Screen
65	Copying your Recordings to an External Video Recorder
66	Connecting to a Computer
66	PC Connection Diagram
66	Corel Application Disc - Movie Playback/Editing and Various Disc Operations
66	Transferring Photos - Direct Transfer
68	Transfer Orders



Additional Information

70	Appendix: Menu Options Lists
70	FUNC. Menu
70	Setup menus
72	Camera Setup (Advanced Zoom, Image Stabilizer, etc.)
73	Disc Operations (Initialization, Finalization etc.)
73	Still Image Operations (Card Initialization, etc.)
74	Display Setup (LCD Brightness, Language, etc.)
75	System Setup (Volume, Beep, etc.)
76	Date/Time Setup
77	Trouble?
77	Troubleshooting
80	List of Messages
84	Do's and Don'ts
84	Handling Precautions
88	Using the Camcorder Abroad
90	General Information
90	System Diagram
91	Optional Accessories
94	Specifications
97	Index

About this Manual

Thank you for purchasing the Canon DC330. Please read this manual carefully before you use the camcorder and retain it for future reference. Should your camcorder fail to operate correctly, refer to *Troubleshooting* (77).


Conventions Used in this Manual

- ❗ **IMPORTANT:** Precautions related to the camcorder's operation.
- ℹ **NOTES:** Additional topics that complement the basic operating procedures.
- ⚠ **POINTS TO CHECK:** Restrictions that apply if the function described is not available in all operating modes (the operating mode to which the camcorder should be set, the type of disc required, etc.).
- 📖: Reference page number.
- The following terms are used in this manual:
 - “Screen” refers to the LCD and the viewfinder screen.
 - “Scene” refers to one movie unit from the point you press **[Start/Stop]** to start recording until you press again to pause the recording.
 - The terms “photo” and “still image” are used interchangeably with the same meaning.
- The photos included in this manual are simulated pictures taken with a still camera.




Buttons and switches to be operated

Names of buttons and switches other than the joystick are indicated within a “button” frame.
For example **[FUNC.]**.

Brackets [] and capital letters are used to refer to menu options as they are displayed on screen. In menu option lists and option tables the default value is shown in boldface.
For example **[ON]**, **[OFF]**.

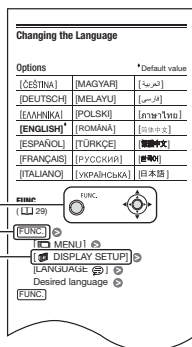


Supplied Accessories

   	CA-570 Compact Power Adapter (incl. power cord)		NB-2LH Battery Pack
WL-D86 Wireless Controller		Lithium Button Battery CR2025 for Wireless Controller	
	IFC-300PCU USB Cable		STV-250N Stereo Video Cable Yellow • Red • White plugs
Software CD-ROM* DIGITAL VIDEO Solution Disk		Software CD-ROM and User Manual Corel Application Disc	


* Includes the electronic version of the *Digital Video Software* instruction manual on PDF file.

Components Guide

Left side view

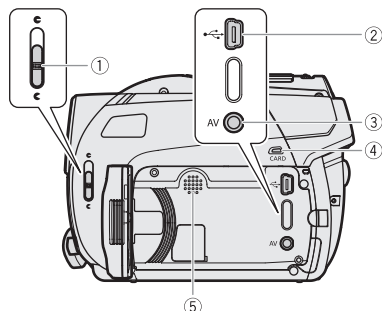

Right side view

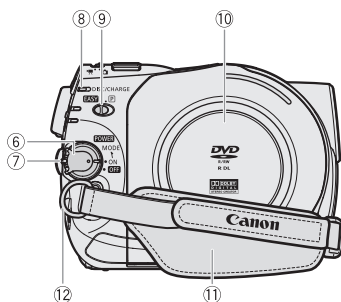


Front view




- ① Lens cover switch (28, 50)
(☐ open, ● closed)
- ② USB terminal (66)
- ③ AV terminal (64)
- ④ CARD access indicator (50)
- ⑤ Speaker
- ⑥ **POWER** switch (20)
- ⑦ Lock button
- ⑧ DISC access indicator (28) /
CHARGE indicator (17)
- ⑨ Mode switch (29)
EASY Easy recording
P Recording programs
- ⑩ Disc compartment cover (25)
- ⑪ Grip belt (19)
- ⑫ Strap mount (92)
- ⑬ Stereo microphone

Names of buttons and switches other than the joystick are indicated within a “button” frame (for example **FUNC.**).


Back view

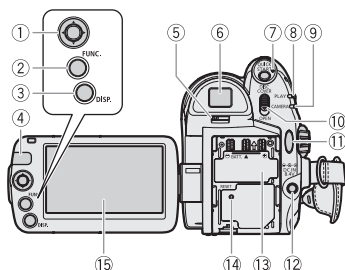

Top view

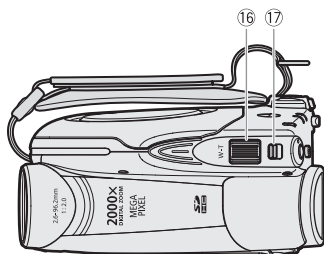


Bottom view

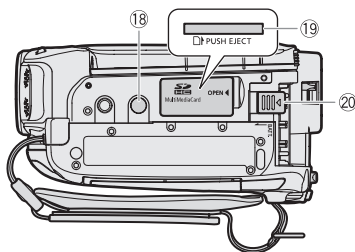

- ① Joystick (20)
- ② FUNC. button (21, 70)
- ③ DISP. button (35, 57)
- ④ Remote sensor (18)
- ⑤ Dioptic adjustment lever (29)
- ⑥ Viewfinder (29)
- ⑦ QUICK START button and standby lamp (32)
- ⑧ PLAY mode indicator (green) (20)
- ⑨ CAMERA mode indicator (red) (20)
- ⑩ OPEN (disc cover) switch (25)
- ⑪ Start/Stop button (28)
- ⑫ DC IN terminal (18)
- ⑬ Serial number/
Battery attachment unit (17)
- ⑭ RESET button (77)
- ⑮ LCD screen (24)
- ⑯ Zoom lever (30)
- ⑰ / (movies/still images) switch (20)
- ⑱ Tripod socket (19)
- ⑲ Memory card slot
(open the cover to access) (27)
- ⑳ BATT. (battery release) switch (17)

Names of buttons and switches other than the joystick are indicated within a "button" frame (for example **FUNC.**).


Wireless Controller WL-D86

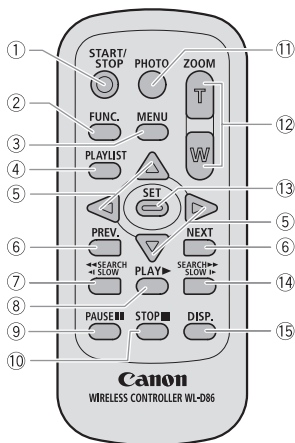

- ① START/STOP button (28)
- ② FUNC. button (21, 70)
- ③ MENU button (22)
- ④ PLAYLIST button (44)
- ⑤ Navigation buttons (▲/▼/◀/▶)
- ⑥ PREV./NEXT buttons:
Scene skip (34) /
Index screen page up/down (33)
- ⑦ Reverse ◀◀ SEARCH button (34) /
Reverse ◀ SLOW button (34)
- ⑧ PLAY ▶ button (33)
- ⑨ PAUSE || button (33)
- ⑩ STOP ■ button (33)
- ⑪ PHOTO button (50)
- ⑫ Zoom buttons (30)
- ⑬ SET button
- ⑭ Forward SEARCH ▶▶ button (34) /
Forward SLOW ▶▶ button (34)
- ⑮ DISP. (on-screen display) button
(35, 57)

Screen Displays

CAMERA Recording movies

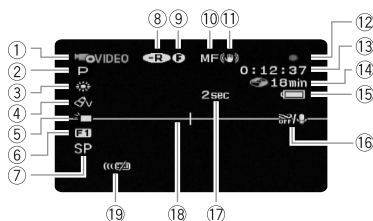


- ① Operating mode (20) / Disc specification (3)
- ② Recording program (36, 38)
- ③ White balance (41)
- ④ Image effect (42)
- ⑤ LCD video light (39)
- ⑥ Digital effects (43)
- ⑦ Recording mode (30)
- ⑧ Disc type  DVD-R,  DVD-R DL,  DVD-RW (3)
- ⑨ Finalized disc mark (47)
- ⑩ Manual focus (40)
- ⑪ Image stabilizer (72)
- ⑫ Disc operation
- ⑬ Time code/Playback time (hours : minutes : seconds)
- ⑭ Remaining recording time on the disc
- ⑮ Remaining battery charge (16)
- ⑯ Wind screen off (72)
- ⑰ Recording reminder
- ⑱ Level marker (74)
- ⑲ Remote sensor off (75)
- ⑳ Scene number
- ㉑ Joystick guide (29)
- ㉒ Data code (35)



PLAY Playing movies (during playback)



CAMERA • Recording still images

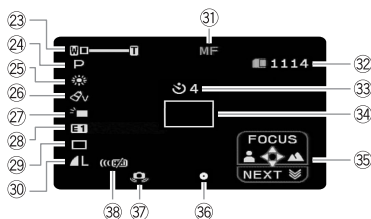

PLAY • Viewing still images

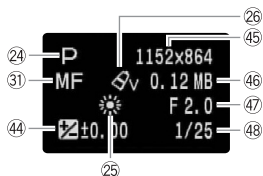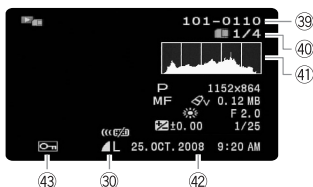

- 23 Zoom (□ 30), Exposure  (□ 41)
- 24 Recording program (□ 36, 38)
- 25 White balance (□ 41)
- 26 Image effect (□ 42)
- 27 LCD video light (□ 39)
- 28 Digital effects (□ 43)
- 29 Drive mode (□ 55)
- 30 Still image quality/size (□ 51)
- 31 Manual focus (□ 40)
- 32 Number of still images available on the memory card
- 33 Self timer (□ 39)
- 34 AF frame (□ 56)
- 35 Joystick guide (□ 20)
- 36 Focus/exposure automatically set and locked (□ 50)
- 37 Camcorder shake warning (□ 72)
- 38 Remote sensor off (□ 18)
- 39 Image number (□ 16)
- 40 Current image / Total number of images
- 41 Histogram (□ 57)
- 42 Date and time of recording
- 43 Image protection mark (□ 57)
- 44 Manual exposure (□ 41)
- 45 Image size (□ 51)
- 46 File size
- 47 Aperture value (□ 38)
- 48 Shutter speed (□ 38)

12 Disc operation

- Record, ● ■■ Record pause,
- Playback, ■■ Playback pause,
- Fast playback,
- ◄◄ Fast reverse playback,
- Slow playback,
- ◄ Slow reverse playback

14 Remaining recording time

When there is no more disc space available, “END” will be displayed and the recording will stop.

15 Remaining battery charge estimate



- When  is displayed in red, replace the battery pack with a fully charged one.
- When you attach an empty battery pack, the power may turn off without displaying .
- Depending on the conditions under which the camcorder and the battery pack are used, the actual battery charge may not be indicated accurately.

17 Recording reminder

The camcorder counts from 1 to 10 seconds when you start recording. This is helpful to avoid scenes that are too short.

32 Number of still images available on the card

 displayed in red: No card

 in green: 6 or more images

 in yellow: 1 to 5 images

 in red: No more images can be recorded

- When viewing the still images, the display will always be in green.
- Depending on the recording conditions, the number of available still images displayed may not decrease even after a recording has been made, or may decrease by 2 still images at once.

Card access display

►  is displayed next to the number of images available while the camcorder is writing on the memory card.

39 Image number

The image number indicates the name and location of the file on the memory card. For example, the file name of image 101-0107 is “IMG_0107.JPG”, stored under the folder “DCIM\101CANON”.



Preparations


This chapter describes basic operations, such as navigating the menus, and first time settings to help you learn more about your camcorder.

Getting Started

Charging the Battery Pack

The camcorder can be powered with a battery pack or directly using the compact power adapter. Charge the battery pack before use.


For approximate charging times and recording/playback times with a full battery pack, refer to the tables on page 91.

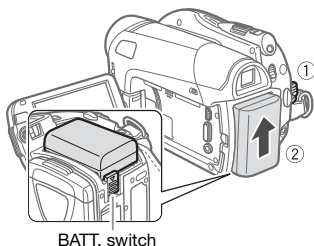

1 Turn off the camcorder.

2 Attach the battery pack to the camcorder.

Press the battery pack lightly and slide it up until it clicks.

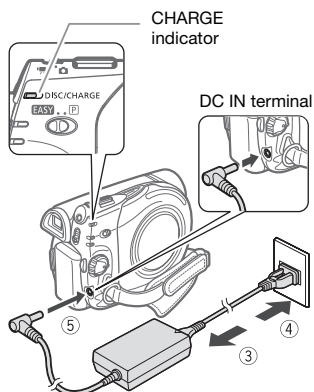

3 Connect the power cord to the compact power adapter.

4 Plug the power cord into a power outlet.

5 Connect the compact power adapter to the camcorder's DC IN terminal.

- The CHARGE indicator starts flashing. The indicator will stay on when the charging is completed.
- You can also use the compact power adapter without attaching a battery pack.
- When the compact power adapter is connected, the power of the battery pack will not be consumed.

ONCE THE BATTERY PACK IS FULLY CHARGED

- 1 **Disconnect the compact power adapter from the camcorder.**
- 2 **Unplug the power cord from the power outlet and the compact power adapter.**

TO REMOVE THE BATTERY PACK

Press **[BATT.]** to release the battery pack. Slide the battery pack down and then pull it out.

! IMPORTANT

- Turn off the camcorder before connecting or disconnecting the compact power adapter. After you turn the **[POWER]** switch to **OFF**, important file allocation data is updated on the disc. Be sure to wait until the **PLAY** and **CAMERA** mode indicators are completely off.
- You may hear some noise from the compact power adapter during use. This is not a malfunction.
- We recommend charging the battery pack in temperatures between 10 °C and 30 °C. Outside the temperature range of 0 °C to 40 °C, the charging will not start.
- Do not connect to the camcorder's DC IN terminal or to the compact power adapter any electrical equipment that is not expressly recommended for use with this camcorder.
- To prevent equipment breakdowns and excessive heating, do not connect the supplied compact power adapter to voltage converters for overseas travels or special power sources such as those on aircraft and ships, DC-AC inverters, etc.


i NOTES

- The **CHARGE** indicator also serves as a rough estimate of the charge status.
Continuously on: Battery pack fully charged.
Two quick flashes at 1-second intervals: Battery pack at least 50% charged. If the indicator flashes quickly but not exactly in this pattern, refer to *Troubleshooting* (□ 77).
One flash at 1-second intervals: Battery pack less than 50% charged.
- We recommend that you prepare battery packs to last 2 to 3 times longer than you think you might need.

Preparing the Wireless Controller and Accessories


Using the Wireless Controller

First, insert the supplied lithium button battery CR2025 into the wireless controller.

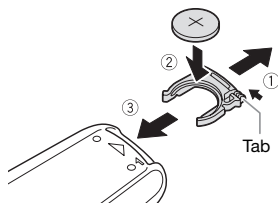

- 1 **Press the tab in the direction of the arrow and pull out the battery holder.**
- 2 **Place the lithium button battery with the + side facing up.**
- 3 **Insert the battery holder.**

TO USE THE WIRELESS CONTROLLER

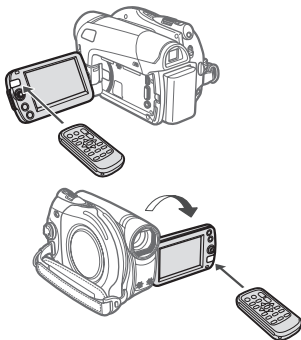


Point the wireless controller at the camcorder's remote sensor when you press the buttons.

You can rotate the LCD panel 180 degrees to use the wireless controller from the front of the camcorder.

i NOTES

- The wireless controller may not work properly when the remote sensor is situated under strong light sources or direct sunlight.
- If the wireless controller does not work, check that [WL.REMOTE] is not set to [OFF OFF (OFF)] (p. 75). Otherwise, replace the battery.

Accessories

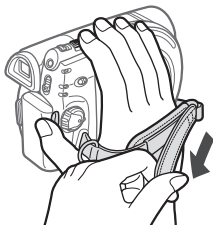


Fasten the grip belt.

Adjust the grip belt so that you can reach the zoom lever with your index finger, and the [Start/Stop] button with your thumb.


WHEN YOU MOUNT THE CAMCORDER ON A TRIPOD

 Do not leave the viewfinder exposed to direct sunlight as it may melt (due to concentration of the light by the lens). Do not use tripods with fastening screws longer than 5.5 mm. Doing so may damage the camcorder.



Basic Operation of the Camcorder

 Power Switch



In addition to turning the camcorder on and off, the **POWER** switch also toggles the camcorder's operating mode.

To turn on the camcorder: Hold the lock button pressed down and turn the **POWER** switch to ON.

To change the operating mode: From the ON position, turn the **POWER** switch momentarily toward MODE and release it. This action will toggle the operating mode between recording (CAMERA - red indicator) and playback (PLAY - green indicator).

 
Operating Modes

The camcorder's operating mode is determined by the **POWER** switch and the position of the **PLAY/RECORD** switch. In this manual, **CAMERA** indicates that a function is available in the operating mode shown and **PLAY** indicates that the function is not available. When no operating mode icons are given, the function is available in all operating modes.

Joystick and Joystick Guide

Use the joystick to operate the camcorder's menus.

Push the joystick up, down, left or right (**▲**, **▼**, **◀**, **▶**) to select an item or change settings.



Press the joystick itself (**⊙**) to save the settings or confirm an action. On menu screens, this is indicated by the icon **SET**.

Operating mode	Operating mode indicator	PLAY/RECORD switch	Icon display	Operation	
CAMERA (Red)	CAMERA (Red)	(movies)		Recording movies on a disc	28
CAMERA (Green)	(Red)	(still images)		Recording still images on a memory card	50
PLAY (Red)	PLAY (Red)	(movies)		Playing movies from a disc	33
PLAY (Green)	(Green)	(still images)		Viewing still images from a memory card	52



The functions assigned to the joystick change according to the operation mode and the camcorder's settings. Press  to display/hide the joystick guide (when recording, the joystick guide will appear only when the mode switch is set to ). In the illustrations of this manual, positions other than those relevant to the function explained are marked with a striped pattern.

Depending on the operating mode, these positions may be empty or show a different icon than the one on the illustration.




When the guide contains multiple "pages", [NEXT] and the page number icon (▼) will appear at the bottom position. Push the joystick (▼) toward [NEXT] to display the next "page" of the guide.

Using the Menus

Many of the camcorder's functions can be adjusted from the menus that open after pressing the FUNC. button (FUNC.).

For details about the available menu options and settings, refer to the *Menu Options Lists* (70).


Selecting a FUNC. Menu Option

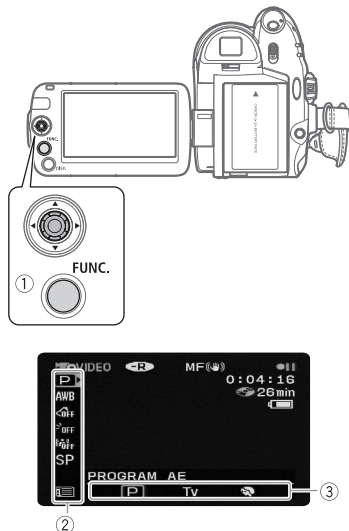

- 1 Press **[FUNC.]**.
- 2 Select () the icon of the function you want change from the left side column.
Menu items not available will appear grayed out.
- 3 Select () the desired setting from the available options at the bottom bar.
 - The selected option will be highlighted in light blue. Menu items not available will appear grayed out.
 - With some settings, you will need to make further selections and/or press . Follow the additional operation guides that will appear on the screen (such as the **[SET]** icon, small arrows, etc.).
- 4 Press **[FUNC.]** to save the settings and close the menu.

You can press **[FUNC.]** to close the menu at any time.

Selecting an Option from the Setup Menus

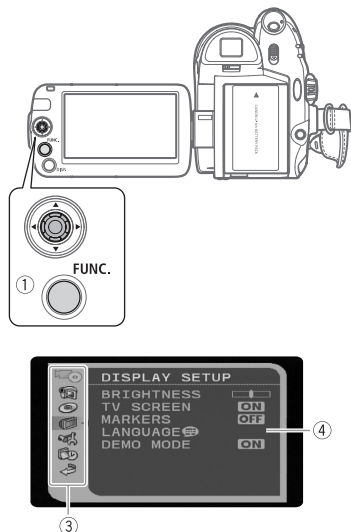

1 Press **[FUNC.]**.

In the index screen (VIDEO mode) and still image index screen, the setup menus will open. Skip to step 3.

2 Select (**▲▼**) the icon and press to open the setup menus.

- You can also hold **[FUNC.]** pressed down for more than 1 second or press **[MENU]** on the wireless controller to open directly the setup menu screen.
- In the index screen (DVD-RW discs in VR mode), push the joystick (**◀▶**) to select the  icon.

3 Select (**▲▼**) the desired menu from the left side column and press .

The title of the selected menu appears on top of the screen and under it the list of settings.

4 Select (**▲▼**) the setting you want to change and press .

- The orange selection bar indicates the menu setting currently selected. Items not available appear in black.
- Push the joystick (**◀**) to return to the menu selection screen (step 3).

5 Select (**▲▼**) the desired option and press to save the setting.

6 Press **[FUNC.]**.

You can press **[FUNC.]** to close the menu at any time.

Abbreviation of Menu Selections in this Manual

In this manual, the  arrow is used to abbreviate menu selections. Below is an example of changing a setting using the setup menus.

[FUNC.] 
[ MENU] 
[ DISPLAY SETUP] 
[LANGUAGE  
 Desired language 
[FUNC.]

For selections in the FUNC. menu, the abbreviated form will always show the initial default value. In recording mode, its icon will appear on the left side column when you first open the menu. If the setting was changed, the icon of the currently selected option will appear instead.

[FUNC.] 
[ OFF IMAGE EFFECT OFF] 
 Desired image effect 
[FUNC.]



First Time Settings

Setting the Date and Time

You will need to set the date and time of the camcorder before you can start using it. The [DATE/TIME] screen will appear automatically when the camcorder's clock is not set.



When the [DATE/TIME] screen appears, the year will be displayed in orange and indicated with up/down arrows.

- 1 Change (▲▼) the year and move (▶) to the month.
- 2 Change the rest of the fields (month, day, hour and minutes) in the same way.
- 3 Move (▶) the cursor to the [OK] button and press  to start the clock and close the menu.

! IMPORTANT

- When you do not use the camcorder for about 3 months, the built-in rechargeable lithium battery may discharge completely and the date and time setting may be lost. In such case, recharge the built-in lithium battery ( 86) and set the time zone, date and time again.
- The date appears in a year-month-day format only in the first setup screen. In subsequent screen displays the date and time will appear as day-month-year

(for example, [1.JAN.2008 12:00 AM]). You can change the date format ( 76).

- You can also change the date and time later on (not during the initial setup). To open the [DATE/TIME] screen, press **[FUNC.]** and select  [DATE/TIME SETUP]  [DATE/TIME].

Changing the Language

Options		◆ Default value
[ČEŠTINA]	[MAGYAR]	[العربية]
[DEUTSCH]	[MELAYU]	[فارسی]
[ΕΛΛΗΝΙΚΑ]	[POLSKI]	[ภาษาไทย]
[ENGLISH]◆	[ROMÂNĂ]	[简体中文]
[ESPAÑOL]	[TÜRKÇE]	[繁體中文]
[FRANÇAIS]	[РУССКИЙ]	[한국어]
[ITALIANO]	[УКРАЇНСЬКА]	[日本語]

FUNC.

( 22)

FUNC.



[FUNC.] 

[ MENU] 

[ DISPLAY SETUP] 

[LANGUAGE ] 

Desired language 

[FUNC.]

i NOTES

- If you changed the language by mistake, follow the  mark next to the menu item to change the setting.
- The display **[SET]** that appears in some menu screens refers to the name of buttons on the camcorder and will not change, regardless of the language selected.

Changing the Time Zone

Change the time zone to match your location. The default setting is Paris.

FUNC.
(22)



FUNC. []

[MENU]

[DATE/TIME SETUP]

[T.ZONE/DST]

Desired time zone*

FUNC.

* To adjust for daylight saving time, select the area name marked with a ☀.

World Time Zones

Once you have set the time zone, date and time, you do not need to reset the clock every time you travel to another time zone. Select the time zone to match the local time at your destination, referring to the date and time displayed on the screen.

1 Open the date and time setup screen.

FUNC. [MENU]

[DATE/TIME SETUP]

[T.ZONE/DST]

2 Move the orange selection frame (▼) to the ☀ time zone.

3 Select (◀▶) the area that corresponds to the local time at your destination and press [].


- Refer to the changing date and time displayed on the screen.
- To adjust for daylight saving time, select the area name marked with a ☀.

4 Press **FUNC.** to close the menu.

Getting Ready to Start Recording

Opening the Lens Cover and Adjusting the LCD screen

Before you start recording, open the lens cover.

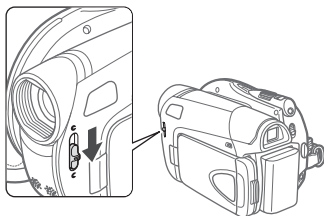


Move the lens cover switch down to [] to open the lens cover.

Rotating the LCD Panel


Open the LCD panel 90 degrees.

You can rotate the panel 90 degrees downward.

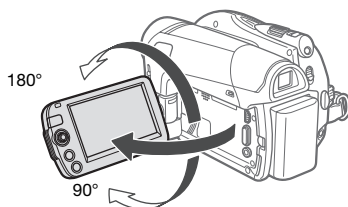

You can rotate the panel 180 degrees toward the lens (allowing the subject to monitor the LCD screen while you use the viewfinder). This is the only case where you can use the viewfinder and the LCD screen simultaneously. Rotating the LCD panel 180 degrees can be useful in the following cases:

- When you wish to include yourself in the picture when recording with the self timer.
- To allow the camcorder to be operated with the wireless controller from the front.

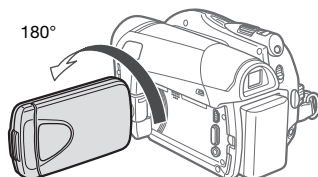


Subject can monitor the LCD screen

i NOTES

About the LCD and viewfinder screen: The screens are produced using extremely high-precision manufacturing techniques, with more than 99.99% of the pixels operating to specification. Less than 0.01% of the pixels may occasionally misfire or appear as black, red, blue or green dots. This has no effect on the recorded image and does not constitute a malfunction.

LCD Backlight

You can set the brightness of the LCD screen to normal or bright.

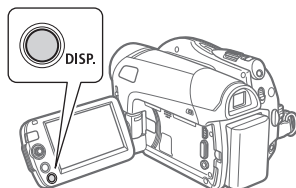

Hold **[DISP.]** pressed down for more than 2 seconds.

Repeat this action to toggle between the normal and bright settings.

i NOTES


- This setting does not affect the brightness of the recording.
- Using the bright setting will shorten the effective usage time of the battery pack.

Inserting and Removing a Disc

Use only 8 cm mini DVD discs marked with the DVD-R **DVD** logo (including DVD-R DL) or the DVD-RW **DVD** logo. Refer also to *Discs that have been tested* (p. 4).

Before inserting the disc be sure to check that the recording surface is clean. If necessary, use a soft lens-cleaning cloth to remove any fingerprints, dirt buildup or smudges from the disc surface.

Inserting the Disc

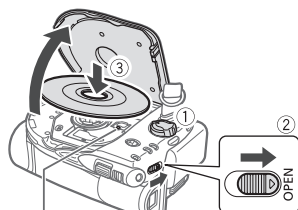


Pick up lens

- 1 Turn the **POWER** switch to **ON** to set the camcorder in **CAMERA** mode.
- 2 Slide **[OPEN]** fully in the direction of the arrow and gently open the disc cover completely until it stops.

Retract the grip belt under the camcorder so it will not get in the way of the disc cover.

3 Insert the disc and press its center firmly until it clicks in place.

- Insert the disc with the recording side facing down (single sided discs – label side facing out).
- Be careful not to touch the recording surface of the disc or the pick up lens.

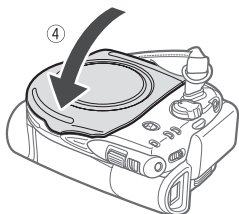

4 Close the disc cover.

Do not force the cover closed if the disc is not correctly inserted and firmly set in place.

i NOTES

The process of recognizing a disc may take a moment. The display will move while the disc is being read. Wait until the camcorder finishes recognizing the disc before you start recording.

WHEN USING DVD-R/DVD-R DL DISCS

You can start recording movies once the record pause indicator appears.


WHEN USING DVD-RW DISCS

You need to initialize new discs before you can start recording. The disc initialization screen will appear when a

new DVD-RW disc is first inserted if the / switch is set to (movies). If the disc is already initialized, you can start recording movies once the record pause indicator appears. Otherwise, perform the following steps to initialize the disc.

- ① Select () the desired disc specification and press . For a comparison between the VIDEO and VR specifications, see *How to Select a DVD Disc* (p. 3).
- ② A confirmation message will appear on the screen. Select () [YES] and press to start the disc initialization, or select [NO] and press to return and select a different disc specification.
 - The disc initialization will take approximately one minute. Avoid moving the camcorder while the operation is in progress.
 - You can start recording movies once the record pause indicator appears.

Removing the Disc

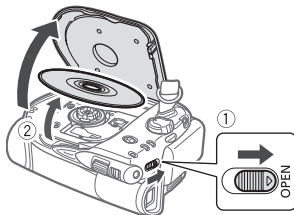

- 1 Slide **OPEN** fully in the direction of the arrow and gently open the disc cover completely until it stops.

- Do not subject the camcorder to strong impacts while the DISC access indicator is on or flashing.

- Retract the grip belt under the camcorder so it will not get in the way of the disc cover.
- It may take a moment after sliding **OPEN** for the disc cover to open.

2 Grab the edge of the disc and gently pull it out.

Be careful not to touch the recording surface of the disc or the pick up lens.


3 Close the disc cover.

! IMPORTANT

When you slide **OPEN** after making a recording, important file allocation data is updated on the disc before the disc cover opens. While the DISC access indicator is on or flashing do not subject the camcorder to shocks such as forcefully laying it on a table.

Inserting and Removing a Memory Card

You can use commercially available SDHC (SD High Capacity) memory cards, SD memory cards or MultiMedia Cards (MMC) with this camcorder.

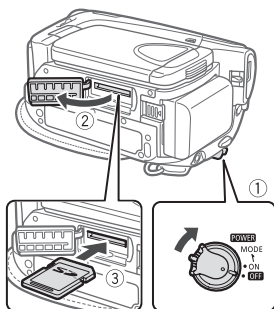

1 Turn off the camcorder.

2 Open the memory card slot cover.

3 Insert the memory card straight all the way into the memory card slot.

4 Close the cover.

Do not force the cover closed if the memory card is not correctly inserted.

TO REMOVE THE MEMORY CARD

First push the memory card once to release it, and then pull the card out.

! IMPORTANT

- Make sure to initialize all memory cards before using them with this camcorder (p. 58).
- Memory cards have front and back sides that are not interchangeable. Inserting a memory card facing the wrong direction can cause a malfunction of the camcorder.

i NOTES

- Compatibility with all SD, SDHC or MMC memory cards cannot be guaranteed.
- **About SDHC Memory Cards:** SDHC is the new type of SD memory card with capacities over 2 GB. Please note that the specifications of SDHC memory cards are different from those of regular SD memory cards and you will not be able to use memory cards of over 2 GB with devices that do not support SDHC. However, SDHC devices (including this camcorder) are backward compatible and support regular SD memory cards.



Video


This chapter covers functions related to shooting and playing back movies - from basic recording and zooming to more advanced manual picture adjustments.

Basic Recording

Shooting Video

Before You Begin Recording

Make a test recording first to check if the camcorder operates correctly. Since recordings made on a DVD-R or DVD-R DL disc cannot be deleted, we recommend you use a DVD-RW disc to make the test recordings.

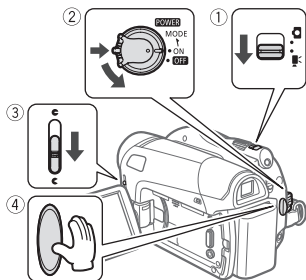

- 1 Move the switch to (movies).
- 2 Turn the **POWER** switch to ON to set the camcorder in CAMERA mode.

The red CAMERA indicator will turn on.

- 3 Move the lens cover switch down to to open the lens cover.
- 4 Press **Start/Stop** to begin recording.
 - The recording starts; press **Start/Stop** again to pause the recording.
 - The DISC access indicator will flash while recording and will stay on briefly after pausing while the scene is recorded on the disc.

WHEN YOU HAVE FINISHED RECORDING

- 1 Make sure that the DISC access indicator is off.
- 2 Turn off the camcorder.
- 3 Close the lens cover and the LCD panel.
- 4 Remove the disc.

! IMPORTANT

- **When recording movies, try to get a calm, stable picture.**
Excessive camcorder movement while shooting and extensive use of fast zooms and panning can result in jittery scenes. In extreme cases, the playback of such scenes may result in visually induced motion sickness. If you experience such a reaction, immediately stop the playback and take a rest break as necessary.


- Observe the following precautions while the DISC access indicator is on or flashing. Failing to do so may result in permanent data loss.
 - Do not subject the camcorder to vibrations or strong impacts.
 - Do not open the disc cover and do not remove the disc.
 - Do not disconnect the power source or turn off the camcorder.
 - Do not change the operating mode.

NOTES

- **About the recording time:** By changing the recording mode you can change the recording time available on the disc (□ 30).
- **About the Power Save mode:** To save power when the camcorder is powered by a battery pack, the camcorder will automatically shut off if left without any operations for 5 minutes (□ 75). To restore the power, turn the **POWER** switch toward **MODE** and release it, or turn the **POWER** switch to **OFF** and back to **ON** again.
- When recording in very loud places (such as fireworks shows or concerts), sound may become distorted or it may not be recorded at the actual levels. This is not a malfunction.

Using the viewfinder

When recording in bright places it may be difficult to use the LCD screen. In such case, change the brightness of the LCD screen (□ 25) or use the viewfinder instead. To use the viewfinder, keep the LCD panel closed*.

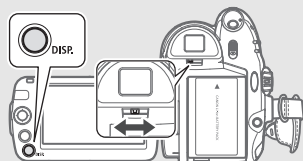

Adjust the viewfinder as necessary with the dioptic adjustment lever.

* The LCD screen and the viewfinder can be used simultaneously when the LCD panel is turned 180 degrees to face the subject (□ 25).

About the mode switch and recording programs

Set the mode switch to **EASY** to let the camcorder adjust all the settings for you, allowing you to just point the camcorder and start shooting.



Set the mode switch to **P** to select one of the recording programs. The Special Scene recording programs (□ 36) offer a convenient way to select the optimal settings to match special recording conditions. Conversely, with flexible recording programs (□ 38) you can set the shutter speed you want, or enjoy the flexibility to change other settings.



Selecting the Recording Mode

Changing the recording mode will change the recording time available on the disc. Select XP or SP mode for better movie quality; select LP mode for longer recording times.

The following table gives approximate recording times with a brand new DVD disc (on a single recording side).

♦ Default value

Recording mode	Disc type	
	DVD-R, DVD-RW	DVD-R DL
XP	20 min.	36 min.
SP ♦	30 min.	54 min.
LP	60 min.	108 min.



FUNC.
(21)



FUNC. (21)

[**SP** STANDARD PLAY]

Desired recording mode

FUNC.

NOTES

The camcorder uses a variable bit rate (VBR) when encoding the video data so the actual recording times will vary depending on the content of the scenes.

Zooming: Optical, Advanced and Digital Zoom

The camcorder offers three types of zoom: optical, advanced and digital zoom when recording movies. (In

CAMERA mode only the optical zoom is available.) You can also change the zoom speed.

Selecting the Zoom Type



Options

♦ Default value

[OPTICAL] (37x)

The zoom range is limited to the optical magnification ratio of the lens.

[ADVANCED] ♦ (Advanced Zoom)

In addition to the optical zoom range, the camcorder processes the image digitally to obtain a larger zoom range without any deterioration in image quality. When recording movies with a 16:9 aspect ratio, the field of view (picture angle) will change. Refer to the table in the NOTES section.

[DIGITAL] (2000x)

When this option is selected, the camcorder will switch to digital zoom (light blue area on the zoom indicator) when you zoom in beyond the optical zoom range (white area on the zoom indicator). With the digital zoom the image is processed digitally so image quality will deteriorate the more you zoom in.

FUNC.
(21)

FUNC.





FUNC.  MENU 
 CAMERA SETUP 
 [ZOOM TYPE]  Desired option 

FUNC.

NOTES

The zoom range of the advanced zoom will change depending on the aspect ratio of the scene ( 72).

[WIDESCREEN] set to [ON ON] (16:9)
45x*
* The picture angle will be wider at both full telephoto and full wide-angle.
[WIDESCREEN] set to [OFF OFF] (4:3)
46x

Selecting the Zoom Speed

CAMERA  CAMERA  | PLAY  PLAY  ( 20)

Options

♦ Default value

[VAR VARIABLE]♦
The variable zoom speed depends on how you operate the zoom lever: Press gently for slower zooms; press harder for faster zooms. With this option, the zoom speed will be faster in record pause mode.
[>] SPEED 1, [>>] SPEED 2, [>>>] SPEED 3
Constant zoom speeds. [>>>] SPEED 3 is the fastest, and [>] SPEED 1 is the slowest.

FUNC.
( 21)



FUNC. 
 [MENU] 
 [CAMERA SETUP] 
 [ZOOM SPEED] 
 Desired option 


FUNC.

NOTES

The fastest zoom speed can be achieved with the [VAR VARIABLE] setting.

Using the Zoom

CAMERA  CAMERA  | PLAY  PLAY  ( 20)

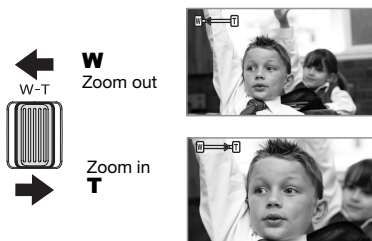

Move the zoom lever toward **W** to zoom out (wide-angle). Move it toward **T** to zoom in (telephoto).


NOTES

- Keep at least 1 m to the subject. At full wide-angle, you can focus on a subject as close as 1 cm.
- You can also use the **T** and **W** buttons on the wireless controller. The zoom speed with the wireless controller will be the same as with the camcorder or fixed at [>>>] SPEED 3 (when [VAR VARIABLE] is selected).

Quick Start Function

When you press **QUICK START** the camcorder enters the  standby mode. In standby mode the camcorder consumes only about half the power used when recording, saving energy when you are using a battery pack. Additionally, when you press **QUICK START** again the camcorder is ready to start recording within approx. 1 second*, ensuring you do not miss important shooting opportunities.

* The exact time required until the camcorder is ready to start recording may vary depending on the shooting conditions.

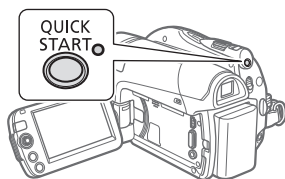

1 Press **QUICK START** firmly.

The standby lamp flashes at first while the camcorder is preparing and then stays on when it enters the standby mode.

2 When you wish to resume recording, press **QUICK START** again.

Within approx. 1 second, the camcorder is ready to record.

NOTES

- When you wake up the camcorder from standby mode, the following settings will be changed automatically:

- Manual focus returns to automatic focus (AF).
- Manual exposure adjustment returns to automatic exposure.
- Zoom position returns to full wide angle **W**.
- The camcorder will shut off if left in standby mode for 10 minutes, regardless of the [POWER SAVE] setting ( 75). You can select the length of time until shut-off with the [ STANDBY OFF] setting ( 75). To restore the power if the camcorder shut off, turn the **POWER** switch toward **MODE** and release it, or turn the camcorder off and then on again.
- If you perform any of the following actions while in standby mode (while the standby lamp is on), the camcorder will be woken up from standby mode.
 - Open the disc compartment cover.
 - Change the position of the /  switch.
 - Turn the **POWER** switch toward **MODE**.

Reviewing and Deleting the Last Scene Recorded

Even in **CAMERA**  mode you can play back the last scene recorded in order to check it. If you are using a DVD-RW disc, you can also delete the scene while reviewing it.



1 If the joystick guide does not appear on screen, press to display it.

If does not appear on the joystick guide, repeatedly push the joystick () toward [NEXT] to display it.

2 Push the joystick () toward .

- The camcorder plays back the last scene (but without sound) and returns to record pause mode.
- While reviewing the scene, select the icon and press to return to the recording mode.

Deleting a Scene After Recording It

POINTS TO CHECK

Disc type: DVD-RW

After recording a scene:


- 1 Review the scene as described in the previous section.
- 2 While reviewing the scene, select () and press .
- 3 Select () [YES] and press .

NOTES

- Avoid any other operations on the camcorder while the scene is being deleted.
- You will not be able to delete the last scene if after the scene was recorded you changed the operating mode, turned off the camcorder or removed the disc.

Basic Playback

Playing Back the Video

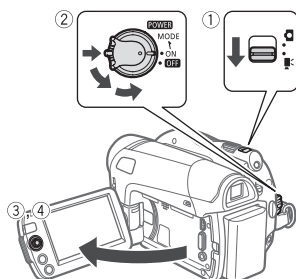

- 1 Move the switch to **PLAY** (movies).
- 2 Turn the **POWER** switch to **ON**, then turn it toward **MODE** and release it to set the camcorder in **PLAY** mode.
 - The green **PLAY** indicator will turn on.
 - The scene index screen appears.
- 3 Move (,) the selection frame to the scene you want to play back.
- 4 Press to begin the playback.
The playback will start from the scene selected and continue until the end of the last scene recorded.

TO PAUSE/STOP PLAYBACK

- 5 If the joystick guide does not appear on screen, press  to display it.
- 6 Push the joystick (▲) toward ►/|| to pause the playback.
- 7 Push the joystick (▼) toward ■ to stop the playback and return to the scene index screen.

NOTES

- Depending on the recording conditions, you may notice brief stops in video or sound playback between scenes.

- This camcorder can play back discs recorded with this camcorder. Discs recorded with other camcorders or discs created with a computer may not play back correctly.
- Be sure to finalize discs to play them back on external DVD devices (p. 47).

TO ADJUST THE VOLUME

During the playback of a scene:

  [ SPEAKER VOL.] 
Adjust (◀▶) the volume 


Special playback modes

Use the joystick guide or the wireless controller (p. 13) to enter the special playback modes. There is no sound during the special playback modes.

Special playback mode	Initial mode	 : Camcorder operation  : Wireless controller operation
Fast playback	Normal playback	 : Push the joystick (◀) toward ◀◀ or (▶) toward ▶▶.  : Press ◀◀SEARCH or SEARCH▶▶. Perform operation again to increase playback speed 5x → 15x the normal speed.
Slow playback	Playback pause	 : Push the joystick (◀) toward ◀◀ or (▶) toward ▶▶.  : Press ◀◀SLOW or SLOW▶▶. Perform operation again to increase playback speed 1/8x → 1/4x the normal speed.
Skip to the beginning of: the next scene the current scene the previous scene	Normal playback	 : Press NEXT. Press PREV. Press PREV. twice.
End special playback mode	Special playback	 : Push the joystick (▲) toward ►/ .  : Press PLAY▶.

During some special playback modes, you may notice some anomalies (blocky video artifacts, banding, etc.) in the playback picture.

- The sound from the built-in speaker will be muted when you close the LCD panel or while the STV-250N Stereo Video Cable is connected to the AV terminal.
- If you turn down the volume completely, the icon will change to .

Deleting Scenes

If you are using a DVD-RW disc, you can delete those scenes that you are not interested in keeping.

Deleting a Single Scene



POINTS TO CHECK

Disc type: DVD-RW • VR mode

From the original index screen, select (,) the scene to delete. To delete a scene only in the playlist, switch to the playlist first (45), and then select the scene.



Deleting All Scenes




POINTS TO CHECK

Disc type: DVD-RW • VR mode

To delete all the scenes from the original index screen, perform the following procedure. This will delete also the

whole playlist. If you want to delete only the playlist (without affecting the original recordings), switch to the playlist first (45), and then continue as follows.

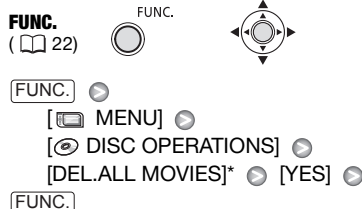

* When you are deleting the playlist, this menu option will be replaced by [DEL.PLAYLIST].

IMPORTANT


Be careful when deleting original recordings. Once deleted, an original scene cannot be recovered.

NOTES

- You may not be able to delete scenes shorter than 5 seconds. To delete such scenes you must initialize the disc (46), in the process deleting all the recordings on the disc.
- Do not change the position of the **POWER** switch or the / switch while the scene is being deleted (while the DISC access indicator is on or flashing).

On-Screen Displays (Data Code)

The camcorder keeps a data code containing the date and time and other camera data (shutter speed, aperture, etc.) registered at the time of recording. You can select the data to be displayed. For details about on-screen displays for still images, refer to *Histogram and Other Screen Displays* (57).

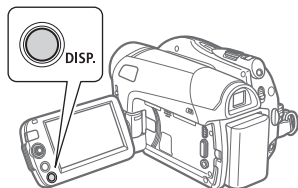

Repeatedly press **[DISP.]** to turn the on-screen displays on/off in the following sequence:

CAMERA

- All displays on
- All displays off¹

PLAY

- All displays on
- Data code² only
- All displays off

¹ However, the markers and the icons and will still appear on the screen.

² Data code: Time, date and camera data at the time of recording. The contents to be displayed can be selected with the [DATA CODE] setting (74).

Additional Functions

: Special Scene Recording Programs

Recording in a very bright ski resort or capturing the full colors of a sunset or a fireworks display becomes as easy as selecting a Special Scene recording program. For details about the available options, refer to the sidebar on page 37.



POINTS TO CHECK

Mode switch: **[P]**



[FUNC.] **[] PROGRAM AE**

Desired recording program

[FUNC.]

[] **PORTRAIT**

The camcorder uses a large aperture, achieving a focus on the subject while blurring other distracting details.



[] **SPORTS**

Use this mode to record sports scenes such as tennis or golf.



[] **NIGHT**

Use this mode to record in dimly lit places.



[] **SNOW**

Use this mode to record in bright ski resorts. It prevents the subject from being underexposed.



[] **BEACH**

Use this mode to record on a sunny beach. It prevents the subject from being underexposed.



[] **SUNSET**

Use this mode to record sunsets in vibrant colors.



[] **SPOTLIGHT**

Use this mode to record spotlight scenes.



[] **FIREWORKS**

Use this mode to record fireworks.



NOTES

- Do not set the mode switch to **EASY** during the actual recording of a scene; the brightness of the picture may change abruptly.
- [] **PORTRAIT** / [] **SPORTS** / [] **BEACH** / [] **SNOW**
 - The picture may not appear smooth during playback.
- [] **PORTRAIT**
 - The blur effect of the background increases the more you zoom in (**T**).
- [] **NIGHT**
 - Moving subjects may leave a trailing afterimage.
 - Picture quality may not be as good as in other modes.
 - White points may appear on the screen.
- Autofocus may not work as well as in other modes. In such case, adjust the focus manually.
- [] **SNOW** / [] **BEACH**
 - The subject may become overexposed on cloudy days or in shaded places. Check the image on the screen.
- [] **FIREWORKS**
 - To avoid camcorder shake, we recommend using a tripod. Make sure to use a tripod especially in **CAMERA** mode, as the shutter speed slows down.

P Flexible Recording: Changing the Shutter Speed

Use the automatic exposure (AE) program to use functions like the white balance or image effects, or give priority to the shutter speed.

Use faster shutter speeds to record subjects moving quickly. Use slower shutter speeds to add motion blur, emphasizing the feel of movement.



POINTS TO CHECK

 
Mode switch: **P**

Options

♦ Default value

[P PROGRAM AE] ♦
The camcorder automatically adjusts the aperture and shutter speed to obtain the optimal exposure for the subject.
[TV SHUTTER-PRIO.AE]
Set the shutter speed value. The camcorder automatically sets the appropriate aperture value.

FUNC.
(21)



TO SET THE SHUTTER SPEED

When you select **[TV SHUTTER-PRIO.AE]**, a numeric value will appear next to the recording program icon.

- 1 If the joystick guide appears on the screen, press to hide it.
- 2 Adjust () the shutter speed to the desired value.

Shutter speed guidelines

Note that on screen only the denominator is displayed – **[TV 250]** indicates a shutter speed of 1/250 second, etc.

1/2*, 1/3*, 1/6, 1/12, 1/25
To record in dimly lit places.
1/50
To record under most ordinary conditions.
1/120
To record indoor sports scenes.
1/250, 1/500, 1/1000**
To record from within a moving car or train or to shoot fast-moving subjects such as roller coasters.
1/2000**
To record outdoor sports scenes on sunny days.

* mode only.

** mode only.

NOTES

- Do not set the mode switch to **EASY** during the actual recording of a scene; the brightness of the picture may change abruptly.
- **[TV SHUTTER-PRIO.AE]**
 - When setting the shutter speed, the number display will flash if the value is not appropriate for the recording conditions. In such case, select a different value.
 - If you use a slow shutter speed in dark places, you can obtain a brighter

image, but the image quality may be lower, and the autofocus may not work well.

- The image may flicker when recording with fast shutter speeds.

LCD Video Light

You can use the LCD video light to record in completely dark places. For a brighter picture, we recommend keeping a distance of about 20 cm - 60 cm from the subject and/or using the [NIGHT] recording program. When you activate the LCD video light, rotate the LCD panel to face the subject and use the viewfinder instead (29).



FUNC.
(21)



FUNC.

[OFF] LCD LIGHT OFF

[ON] LCD LIGHT ON*

Press

FUNC.

- * Using the viewfinder, select [OFF] LCD LIGHT OFF instead to turn the LCD video light off. Closing the LCD panel will also turn the LCD video light off.

The LCD display turns entirely white when used as the video light. Use the viewfinder instead.

Self Timer



POINTS TO CHECK

CAMERA: Set the camcorder to record pause mode.

FUNC.

(21)

FUNC.



1 Activate the self timer.

FUNC. [MENU]

[CAMERA SETUP]

[SELF TIMER] [ON] ON

2 Press **FUNC.** to close the menu.

- appears.
- Set [SELF TIMER] to [OFF] OFF to cancel the self timer.

3 Press **Start/Stop** on the camcorder to start recording.

- The camcorder starts recording video (CAMERA mode) or takes a still image (CAMERA mode) after a 10-second countdown. The countdown appears on the screen.
- You can also press **START/STOP** (CAMERA mode) or **PHOTO** (CAMERA mode) on the wireless controller. In that case, the countdown will be only 2 seconds.

NOTES

Once the countdown has begun, you can press **Start/Stop** again or turn off the camcorder to cancel the self timer.

Manual Focus Adjustment

Autofocus may not work well on the following subjects. In such case, focus manually.

 
- Reflective surfaces
- Subjects with low contrast or without vertical lines
- Fast moving subjects
- Through wet windows
- Night scenes



POINTS TO CHECK

Adjust the zoom before you start the procedure.

Mode switch: [P]



- 1 If the joystick guide does not appear on screen, press to display it.**

If [FOCUS] does not appear on the joystick guide, repeatedly push the joystick (▼) toward [NEXT] to display it.

- 2 Push the joystick (▲) toward [FOCUS].**

“MF” appears.

- 3 Adjust (◀▶) the focus as necessary.**

- Push the joystick (▶) toward ▲ for a farther focal distance or push it (◀) toward ■ for a closer focal distance.

- Pushing the joystick (▲) toward [FOCUS] again will return the camcorder to autofocus.

- 4 Push the joystick (▼) toward [NEXT] to save the focus adjustment.**

Infinity Focus

Use this function when you wish to focus on faraway subjects such as mountains or fireworks.

POINTS TO CHECK

Adjust the zoom before you start the procedure.

Mode switch: [P]



- 1 If the joystick guide does not appear on screen, press to display it.**
- 2 Keep the joystick pushed (▲) toward [FOCUS] for more than 2 seconds.**
 - ∞ appears.
 - Pushing the joystick (▲) toward [FOCUS] again will return the camcorder to autofocus.
 - If you operate the zoom or the joystick (◀▶), ∞ changes to “MF” and the camcorder returns to manual focusing mode.
- 3 Push the joystick (▼) toward [NEXT] to save the focus adjustment.**

 
Manual Exposure Adjustment

At times, backlit subjects may appear too dark (underexposed) or subjects under very strong lights may appear too bright or glaring (overexposed). To correct this, you can manually adjust the exposure.



POINTS TO CHECK

Mode switch: [P] (except for the [FIREWORKS] recording program).



- 1 If the joystick guide does not appear on screen, press to display it.

If [EXP] does not appear on the joystick guide, repeatedly push the joystick (▼) toward [NEXT] to display it.

- 2 Push the joystick (▲) toward [EXP].

The exposure adjustment indicator and the neutral value “±0” appear on the screen.

- 3 Adjust (◀▶) the brightness of the image as required.

- The adjustment range and the length of the exposure adjustment indicator will vary depending on the initial brightness of the picture.
- Pushing the joystick (▲) toward [EXP] again will cancel the exposure lock and return the camcorder to automatic exposure.

- 4 Push the joystick (▼) toward [NEXT] to lock and save the exposure setting.

If you operate the zoom during exposure lock, the brightness of the image may change.

White Balance

The white balance function helps you to accurately reproduce colors under different lighting conditions so that white objects will always look truly white in your recordings.



POINTS TO CHECK

Mode switch: [P] (except for the Special Scene recording programs)

Options

◆ Default value

[AWB AUTO]◆
Settings are automatically set by the camcorder. Use this setting for outdoor scenes.
[DAYLIGHT]
For recording outdoors on a bright day.
[TUNGSTEN]
For recording under tungsten and tungsten type (3-wavelength) fluorescent lighting.
[SET]
Use the custom white balance setting to make white subjects appear white under colored lighting.

FUNC.
(21)



FUNC.

[AUTO] Desired option*

FUNC.

* When you select [SET], do not press **FUNC.** and continue instead with the following procedure.

TO SET THE CUSTOM WHITE BALANCE

- Point the camcorder at a white object, zoom in until it fills the whole screen and press .**
When the adjustment is completed, stops flashing and stays on. The camcorder retains the custom setting even if you turn off the camcorder.
- Press **FUNC.** to save the setting and close the menu.**

NOTES

- When you select the custom white balance:**
 - Set the custom white balance in a sufficiently illuminated place.
 - Select a zoom type other than [DIGITAL] (30).
 - Reset the white balance when the lighting conditions change.
 - Depending on the light source, may keep flashing. The result will still be better than with [AUTO].
- Custom white balance may provide better results in the following cases:
 - Changing lighting conditions
 - Close-ups
 - Subjects in a single color (sky, sea or forest)
 - Under mercury lamps and certain types of fluorescent lights

Image Effects

You can use the image effects to change the color saturation and contrast to record images with special color effects.



(20)

POINTS TO CHECK

Mode switch: [] (except for the Special Scene recording programs)

Options ♦ Default value

[IMAGE EFFECT OFF] ♦
Records with no image enhancing effects.
[VIVID]
Emphasizes the contrast and color saturation.
[NEUTRAL]
Tones down the contrast and color saturation.
[SOFT SKIN DETAIL]
Softens the details in the skin tone area for a more complimentary appearance. To obtain the best effect, use this setting when recording a person in close-up. Note that areas similar to the skin color may lack in detail.

FUNC.
(21)



FUNC.

[IMAGE EFFECT OFF]

Desired option

FUNC.

Digital Effects



POINTS TO CHECK

Mode switch: [P]

[CAMERA] : [E1] BLK&WHT, [E2] SEPIA only.

Options


◆ Default value

[D.EFFECT OFF]	◆
Select this setting when you do not intend to use the digital effects.	
[F1 FADE-T] (fade trigger), [F2 WIPE]	
Select one of the faders to begin or end a scene with a fade from or to a black screen.	
[E1 BLK&WHT]	
Records images in black and white.	
[E2 SEPIA]	
Records images in sepia tones for an "old" look.	
[E3 ART], [E4 MOSAIC]	
Select one of these digital effects to add "flavor" to your recordings.	

NOTES

- When you apply a fader, not only the picture but also the sound will fade in or out. When you apply an effect, the sound will be recorded normally.
- The camcorder retains the last setting used even if you turn off the digital effects or change the recording program.

Setting

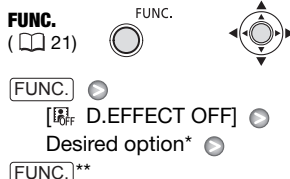

* You can preview the effect on the screen.

** The icon of the selected effect appears.

Applying



1 If the joystick guide does not appear on screen, press [D.EFFECT OFF] to display it.

If [D.EFFECT OFF] does not appear on the joystick guide, repeatedly push the joystick (▼) toward [NEXT] to display it.

2 Push the joystick (▲) toward [E1].

- The icon of the selected effect turns green.
- Push the joystick (▲) toward [E1] again to deactivate the fader/effect.

TO FADE IN

Push the joystick (▲) toward [E1] in record pause mode (●||), then press [Start/Stop] to start recording with a fade in.

TO FADE OUT

Push the joystick (▲) toward [E1] while recording (●), then press [Start/Stop] to fade out and pause the recording.

TO ACTIVATE AN EFFECT

CAMERA  : Push the joystick (▲) toward  while recording or in record pause mode.

CAMERA  : Push the joystick (▲) toward  and then press Start/Stop to record the still image.

Managing Scenes and the Disc

Creating a Playlist

Create a playlist to easily edit your movies. Include in your playlist only the scenes you prefer or change the order in which they will be played back, without affecting your original recordings. After you add scenes to the playlist, you can switch between the original scenes and the playlist.

Adding Scenes to the Playlist

You can choose to add to the playlist all the original scenes at once or only the selected scene.



POINTS TO CHECK

Disc type:  DVD-RW • VR mode

From the original index screen, select (▲▼, ◀▶) the scene to add to the playlist. To add all scenes, there is no need to select any particular scene.



To delete scenes from the playlist, refer to *Deleting Scenes* (📖 35).

Switching Between Original and Playlist Scenes



 
 
POINTS TO CHECK

Disc type: DVD-RW • VR mode



* Appears in the original index screen. In the playlist, [TO ORIGINAL] appears instead.

Original index screen (original recordings)



Playlist index screen


 
Moving Scenes in the Playlist



POINTS TO CHECK

Disc type: DVD-RW • VR mode

From the original index screen, switch to the playlist (21). From the playlist index screen, select (,) the scene to move.

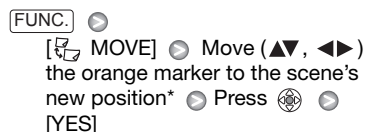

* The original position of the scene and the current position of the marker are displayed at the bottom of the screen.

Dividing Scenes


You can divide scenes in order to leave only the best parts and later cut out the rest. Remember that when you divide scenes in the playlist, you do not affect your original recordings.



POINTS TO CHECK

Disc type: DVD-RW • VR mode

From the original index screen, switch to the playlist (45). From the playlist index screen, select (,) the scene to divide.

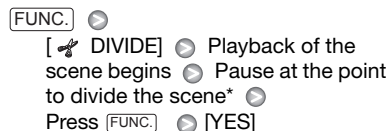

* You can use the following icons and the special playback modes (34) except for skipping scenes to bring the scene to a precise point. Slow playback mode requires the wireless controller.
 / : Frame jump forward/backward.

NOTES

- Very short scenes (shorter than 2 seconds) cannot be divided.
- The new scene will be added to the playlist after the scene that was divided.


Initializing the Disc

You need to initialize all new DVD-RW discs when you first insert them into the camcorder and you may have to initialize them if you get the message "UNABLE TO RECOGNIZE THE DATA". You can also initialize a DVD-RW disc when you want to completely erase the disc to reuse it or in order to change the disc specification.



POINTS TO CHECK

Disc type: DVD-RW

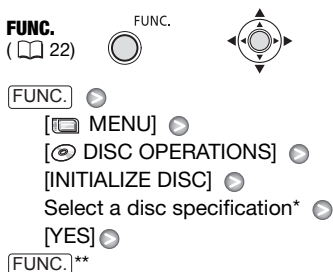

* For details about disc specifications, refer to *Disc specification on DVD-RWs.* (book icon 3)

** Close the menu only after the screen display returns to the [DISC OPERATIONS] menu.

IMPORTANT


Initializing the disc will permanently erase all recordings. The lost original recordings cannot be recovered.

Disc Playback on an External Device

Changing the Disc Title

Before you finalize your disc, you can give it a title¹. The disc title will be displayed on the index screen when playing the finalized disc in most DVD players. You can check the disc's title with the [DISC INFO] menu option (book icon 73).

¹ You can change the title of DVD-RW discs recorded in VR mode also after having finalized them.

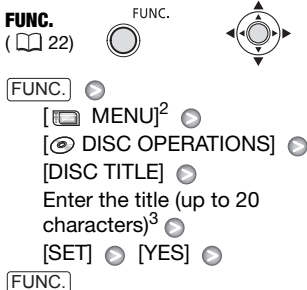

² Only when using a DVD-RW recorded in VR mode. Otherwise, pressing will open the menu directly on the setup menus screen.

³ Select one character at a time and press to add it to the title. Select and press to delete the character to the left of the cursor's position.

Finalizing the Disc

To play the disc you recorded on a DVD player, a computer's DVD drive or other digital device, **you need to finalize it first**. You do not need to finalize the disc to play back your recordings with the camcorder connected to the TV.



POINTS TO CHECK

Power the camcorder using the compact power adapter or a fully charged battery pack.

FUNC.

(22)



FUNC.

[MENU]*

[DISC OPERATIONS]

[FINALIZE] [YES]**

Press when the confirmation screen appears

FUNC.

* Only when using a DVD-RW recorded in VR mode. Otherwise, pressing **FUNC.** will open the menu directly on the setup menus screen.

**During the disc finalization a progress bar is displayed.

IMPORTANT

- Be sure to finalize the disc in normal room temperatures. If the procedure was not completed correctly due to high temperature, let the camcorder cool off before resuming operation.
- Place the camcorder on a table or other stable surface before starting the procedure. Subjecting the camcorder even to slight impacts (for example to place it on a table or to disconnect a cable) after the finalization process started may result in permanent data loss.
- Do not disconnect the power source while the operation is in progress. Doing so can interrupt the process and result in permanent data loss.
- Depending on the type of disc and the disc specification, after finalizing the disc you may not be able to initialize the disc, edit your recordings or add new recordings to the disc.
- Do not use this camcorder to finalize discs that were not recorded using it.

NOTES

- The time required to finalize the disc depends on the scenes recorded and the remaining free space on the disc.
- After the disc is finalized, **(F)** will appear on the playback screen.

Disc Playback on External Devices

After finalizing the disc with your recordings, you can play it on DVD players compatible with the type of disc used (DVD-R, DVD-R DL or DVD-RW). You cannot play back discs on an external DVD device if the discs have not yet been finalized.

For a summary, you can refer to the sidebar on page 48. For details about disc compatibility refer to the instruction manual of the DVD player or DVD drive.

ON A DVD PLAYER

- 1 Turn on the TV and DVD player.
- 2 Insert the finalized disc in the DVD player.
- 3 Select the scene you want to play from the index screen.

ON A COMPUTER'S DVD DRIVE

- 1 Insert the finalized disc in the DVD drive.
- 2 Run the DVD playback software.
Refer also to the instruction manual and help modules of your DVD playback software.

NOTES

- DVD-RW discs recorded in VR mode can be played only on VR mode-compatible DVD players.
- Depending on your DVD device you may not be able to play the disc.
- In order to play the disc on a computer you need to have DVD playback software installed and running. Also, in order to play back a DVD-R DL you must have a DVD drive capable of reading dual-layered DVD discs.

Unfinalizing the Disc - Additional Recordings on a Finalized Disc

Unfinalize a disc to allow recording additional movies on the disc even after it was finalized.



(20)



POINTS TO CHECK

Disc type: DVD-RW • VIDEO mode • Finalized

Power the camcorder using the compact power adapter or a fully charged battery pack.

Restrictions after disc finalization

	Additional recordings	Editing recordings	Initializing the disc	Unfinalizing the disc
DVD-R/DVD-R DL in VIDEO mode	—	—	—	—
DVD-RW in VIDEO mode	● ¹	—	●	●
DVD-RW in VR mode	●	● ²	●	—

¹ You will need to unfinalize the disc first.

² Only scenes in the playlist can be divided.

FUNC.
(22)



FUNC.

[DISC OPERATIONS]

[UNFINALIZE] [YES]*

Press when the confirmation screen appears

FUNC.

* During the disc unfinalization a progress bar is displayed.

IMPORTANT

- **Be sure to unfinalize the disc in normal room temperatures. If the procedure was not completed correctly due to high temperature, let the camcorder cool off before resuming operation.**
- **Place the camcorder on a table or other stable surface before starting the procedure. Subjecting the camcorder even to slight impacts (for example to place it on a table or to disconnect a cable) after the unfinalization process started may result in permanent data loss.**
- Do not disconnect the power source while the operation is in progress. Doing so can interrupt the process and result in permanent data loss.
- Only discs that were finalized using this camcorder can be unfinalized with it.

Discs that can be unfinalized

DVD-R/DVD-R DL in VIDEO mode	—
DVD-RW in VIDEO mode	●
DVD-RW in VR mode	— You can record additional scenes even without unfinalizing the disc




Photos

Refer to this chapter for details on shooting photos – from capturing and playing back images to printing them.

Basic Recording

Taking Photos

Before using a memory card for the first time, be sure to initialize it with this camcorder (see 58).

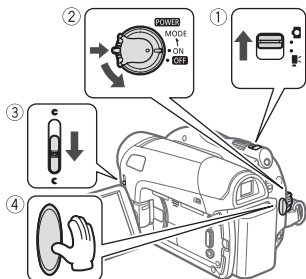

- 1 Move the **VIEW/PHOTO** switch to **PHOTO** (still images).
- 2 Turn the **POWER** switch to **ON** to set the camcorder in **CAMERA** mode.
The red **CAMERA** indicator will turn on.

- 3 Move the lens cover switch down to **OPEN** to open the lens cover.

- 4 Press **Start/Stop**.
 - Once the focus is automatically adjusted, **AF** will turn green and one or more AF frames will appear.
 - The **CARD** access indicator will flash as the still image is being recorded.
 - When you press **PHOTO** on the wireless controller, the still image is recorded after the autofocus is activated and locked.

IMPORTANT

Observe the following precautions while the card access display (▶ ) appears on screen, and when the **CARD** access indicator is on or flashing. Failing to do so may result in permanent data loss.

- Do not subject the camcorder to vibrations or strong impacts.
- Do not open the memory card slot cover and do not remove the memory card.
- Do not disconnect the power source or turn off the camcorder.
- Do not change the position of the **VIEW/PHOTO** switch or the operating mode.

NOTES

If the subject is not suitable for autofocus, **AF** turns yellow. Adjust the focus manually (see 40).


Selecting Photo Size and Quality

Still images are recorded on the memory card using JPEG compression. As a general rule select a larger image size for higher quality. Select the [LW 1152x648] size for photos with an aspect ratio of 16:9.



Options

Image size options and the approximate number of still images that can be recorded on memory cards of various sizes are given in the table below.

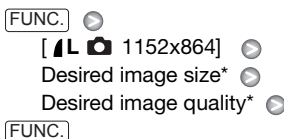

* Press  to move back and forth between size and quality selection. The number displayed on the right corner indicates the approximate number of images that can be recorded with the current quality/size setting.

NOTES

- Depending on the number of images on the memory card (Windows: 1,800 images or more; Macintosh: 1,000 images or more), you may not be able to transfer images to a computer. Try using a card reader.
- Connection to a PictBridge-compatible printer will not work when the memory card contains 1,800 images or more. For best performance, we recommend keeping the number of images on the memory card under 100.
- When printing still images, use the following guidelines as a reference for selecting the print size.

Approximate number of still images on a memory card

♦ Default value

Memory card	128 MB			512 MB			1 GB		
Image quality ¹ →									
Image size ↓									
LW 1152x648	245	360	695	970	1,435	2,745	1,945	2,875	5,490
L 1152x864♦	185	280	545	735	1,115	2,155	1,470	2,235	4,315
S 640x480	585	850	1,530	2,320	3,355	6,040	4,645	6,715	12,085 ²

¹ : [SUPER FINE], : [FINE], : [NORMAL]

² This is the number of images that can be recorded. However, the maximum number of remaining still images displayed on the screen will be 9999.

Image size	Recommended use
LW 1152x648	To print photos with a 16:9 aspect ratio. Wide-sized photo paper is required.
L 1152x864	To print photos up to L size (9 x 13 cm) or postcard size (10 x 14.8 cm).
S 640x480	To send images as e-mail attachments or to post on the Web.

Erasing the Last Photo Just Recorded

You can erase the still image recorded last while reviewing it within the time set for the [REVIEW] option (or immediately after recording it, if [REVIEW] is set to [OFF OFF]).




While reviewing the image immediately after recording:

- 1 Push the joystick (▼) toward .
- 2 Select (◀▶) [ERASE] and press .

Basic Playback

Viewing Photos

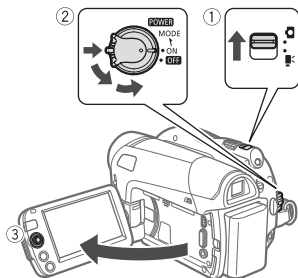

- 1 Move the switch to (still images).
- 2 Turn the **POWER** switch to ON, then turn it toward **MODE** and release it to set the camcorder in **PLAY** mode.
The green **PLAY** indicator will turn on.
- 3 Use the joystick (◀▶) to move between images.

Image Jump Function

You can locate a specific image without having to browse all of them one by one.

 


TO RUN THROUGH THE STILL IMAGES




Push the joystick (◀▶) and hold it pressed down to run quickly through the still images.

TO SKIP 10 OR 100 STILL IMAGES



 - 1 If the joystick guide does not appear on screen, press to display it.
- 2 Push the joystick (▲) toward .



- 3 Select (▲▼) [JUMP 10 IMAGES] or [JUMP 100 IMAGES].
- 4 Jump (◀▶) the number of images selected and press . You can press again to hide the joystick guide.

! IMPORTANT

- Observe the following precautions while the card access display (▶) appears on screen, and when the CARD access indicator is on or flashing. Failing to do so may result in permanent data loss.
 - Do not subject the camcorder to vibrations or strong impacts.
 - Do not open the memory card slot cover and do not remove the memory card.

- Do not disconnect the power source or turn off the camcorder.
- Do not change the position of the / switch or the operating mode.
- The following may not be displayed correctly.
 - Images not recorded with this camcorder.
 - Images edited on or transferred from a computer.
 - Images whose file names have been changed.

Slideshow

FUNC.

(21)

FUNC.



FUNC.



[SLIDESHOW] [[START]

- Images are played back one after another.
- Press **FUNC.** to stop the slideshow.

Index Screen

1 Move the zoom lever toward **W**.

The still images index screen appears.

2 Select (▲▼, ◀▶) an image.

- Move the green selection frame to the image you want to view.
- If you have a lot of still images, you may find it easier to browse entire index pages instead. Move the zoom lever toward **W** to extend the green selection frame to the whole page, and move (◀▶) between index pages. Move the zoom lever toward **T** to return to moving between single images.

3 Press .

The index screen closes and the selected image is displayed.

Magnifying Photos during Playback

During playback, still images can be magnified up to 5 times.



1 Move the zoom lever toward **T**.

- The image is magnified by 2 times and a frame appears indicating the position of the magnified area.
- To further enlarge the image, move the zoom lever toward **T**. To reduce the magnification to less than 2 times, move the zoom lever toward **W**.
- will appear for images that cannot be enlarged.

2 Move (, , ,) the frame to the part of the image you want to see enlarged.

To cancel the magnification, move the zoom lever toward **W** until the frame disappears.

Erasing Photos

You can erase still images recorded on the memory card. You can erase either a single still image or all the still images.

Erasing a Single Image



- 1 If the joystick guide does not appear on screen, press to display it.
- 2 Select () the image you want to erase.
- 3 Push the joystick () toward .
- 4 Select () [ERASE] and press .

Erasing All Images



FUNC.

() 22)

FUNC.



[FUNC.]

[MENU]

[STILL IMG OPER.]

[ERASE ALL IMAGES]

[YES]

[FUNC.]

IMPORTANT

Be careful when erasing images. Erased images cannot be recovered.

NOTES

Protected images on the memory card cannot be erased.

Additional Functions

Continuous Shooting and Exposure Bracketing (Drive Mode)

Take a series of pictures of a moving subject or record the same picture in 3 levels of exposure in order to choose later the picture you like the best.



POINTS TO CHECK

Mode switch: (except for the FIREWORKS] recording program).

Options

◆ Default value

[SINGLE]◆

Records a single still image.

[CONT.SHOOT.] (Continuous Shooting),
[HISPEED CONT.SHOOT.]
(High-Speed Continuous Shooting)

Captures a series of still images as long as you hold pressed down. For the number of frames per second, refer to the sidebar on page 55.

[AEB] (Auto Exposure Bracketing)

The camcorder records a still image in three different exposures (dark, normal, light in 1/2 EV steps), allowing you to choose the shot you like the best.

FUNC.

(21)

FUNC.



FUNC.

[SINGLE]

Desired option

FUNC.

Maximum number of continuous shots

Number of frames (shots) per second	
Normal speed	2.5 frames
High speed	4.2 frames

Maximum number of continuous shots	
LW 1152x648, L 1152x864	20 images
S 640x480	60 images

These figures are approximate and vary with the recording conditions and subjects. The actual number of frames per second will be lower when (camcorder shake warning) is displayed on the screen.

CONTINUOUS SHOOTING/ HIGH-SPEED CONTINUOUS SHOOTING

Press **[Start/Stop]** and hold it pressed down.

Once the focus is automatically adjusted,  will turn green. A series of still images will be recorded as long as you hold the button pressed.

AUTO EXPOSURE BRACKETING

Press **[Start/Stop]**.

Once the focus is automatically adjusted,  will turn green. Three still images in different exposures will be recorded on the memory card.

Automatic Focus Priority

When the focus priority is activated, the camcorder records a still image only after the focus has been adjusted automatically.



POINTS TO CHECK

Mode switch at **[EASY]**: The focus priority cannot be turned off.

Mode switch at **[P]**: You can turn off the focus priority and you can also select the AF (autofocus) frame to be used.

Options

◆ Default value

[AF AF ON: AiAF]◆

(Mode switch: **[P]***, **[EASY]**)

Depending on the shooting conditions, one or more AF frames out of the nine frames available are automatically selected and the focus is fixed on them.

[ON: CENTER]

(Mode switch: **[P]***)

In this mode, a single focusing frame appears in the center of the screen and the focus is automatically fixed on it. This is convenient for making sure the focus is exactly where you want it.

[OFF OFF]

Select this option if you wish to record a still image as soon as you press **[Start/Stop]**.

* Except for the **[FIREWORKS]** recording program.

FUNC.

( 22)

FUNC.



[FUNC.] 

[MENU] 

[CAMERA SETUP] 

[FOCUS PRI.] 

Desired option 

[FUNC.]


NOTES

In the **[FIREWORKS]** recording program the focus priority is automatically set to **[OFF OFF]**.

Histogram and Other Screen Displays

When viewing still images you can display the histogram and the icons of all the functions used at the time of recording. Use the histogram as a reference to verify the correct exposure of the still image.

The area to the right of the histogram represents highlights and the left side represents shadows. A still image whose histogram skews to the right is relatively bright; while one whose histogram peaks to the left, is relatively dark.

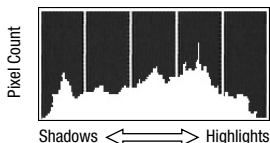

NOTES

The histogram will appear also after recording a still image, while reviewing it within the time set for the [REVIEW] option (or immediately after recording it, if [REVIEW] is set to [OFF OFF]). You can choose to turn off the histogram by pressing [DISP].

TO SELECT THE ON-SCREEN DISPLAYS

Repeatedly press [DISP.] to turn the on-screen displays on and off in the following sequence.

CAMERA

- All displays on
- All displays off¹

PLAY


- All displays on
- Regular displays only (removes the histogram and information icons)

- All displays off

¹ However, the markers and the icon and AF frames when the autofocus is locked will still appear on the screen.

Protecting Photos

You can protect still images recorded on the memory card from accidental erasure.

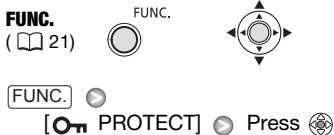

[PROTECT] Press

[PROTECT]: The image selection screen appears.

FROM THE IMAGE SELECTION SCREEN

- 1 Select () the still image you want to protect.
- 2 Press to protect the still image. appears on the bottom bar and the image cannot be erased. Press again to cancel the image protection.
- 3 Repeat steps 1-2 to protect additional images or press [FUNC.] twice to close the menu.

IMPORTANT

Initializing the memory card (58) will permanently erase all recorded still images, even the protected ones.

Initializing the Memory Card

Initialize memory cards when you use them with this camcorder for the first time, or to erase all the still images on them.

Options

[INITIALIZE]
Clears the file allocation table but does not physically erase the stored data.
[COMPL.INIT.]
Erases all data completely.



FUNC.
(22)



FUNC. ➤

[MENU] ➤

[STILL IMG OPER.] ➤

[INITIALIZE CARD] ➤

Select the card initialization method ➤

[YES]* ➤

FUNC.

* Press  to cancel the complete initialization while it is in progress. All the image files will be erased and the memory card can be used without any problem.

! IMPORTANT

Initializing the memory card will erase all still images, even the protected ones. The original still images cannot be recovered.

You can also use the following functions...

The following functions and features of the camcorder can be used either for shooting video or for taking photos. The way to set and use them was already explained in detail, so we refer you to the relevant page in the “Video” section.

- Quick Start (32)
- Zoom (30)
- Special Scene recording programs (36)
- Flexible recording programs (38)
- LCD video light (39)
- Self timer (39)
- Manual focus (40)
- Manual exposure adjustment (41)
- White balance (41)
- Image effects (42)
- Digital effects (43)

Printing Photos

Printing Photos - Direct Print

The camcorder can be connected to any PictBridge-compatible printer. You can mark in advance the still images you want to print and set the desired number of copies as a print order (□ 62).



Canon printers: SELPHY printers of the CP, DS and ES series and inkjet printers marked with the PictBridge logo.

Connecting the Camcorder to the Printer



- 1 Insert the memory card containing the still images you want to print.**
- 2 Turn on the printer.**
- 3 Connect the camcorder to the printer using the supplied USB cable.**
 - Refer to *PC Connection Diagram* (□ 66).
 - appears and changes to .

! IMPORTANT

- If continues to flash (for more than 1 minute) or if does not appear, the camcorder is not correctly connected to the printer. In such case, disconnect the USB cable and turn off the camcorder and the printer. After a short while, turn them on again, set the camcorder to

PLAY mode and restore the connection.

- During the following operations, even if you connect a printer to the camcorder it will not be recognized.
 - Erasing all still images
 - Erasing all transfer orders
 - Erasing all print orders

i NOTES

- will appear for images that cannot be printed.
- We recommend powering the camcorder using the compact power adapter.
- For more information, refer to the printer's instruction manual.

Selecting the Print Settings

You can select the number of copies and other settings for printing. The setting options vary depending on your printer model.

Options

[PAPER]
[] PAPER SIZE: Available paper sizes vary depending on the printer model.
[] PAPER TYPE: Select [PHOTO], [FAST PHOTO], [PLAIN] or [DEFAULT].
[] PAGE LAYOUT: Select [DEFAULT] or one of the following available page layouts. [BORDERED]: Prints the whole image area almost exactly as the recorded still image. [BORDERLESS]: Enlarges the center portion of the still image to fit the width/height ratio of the selected paper size. The top, bottom and sides of the still image may be slightly trimmed out. [2-UP], [4-UP], [8-UP], [9-UP], [16-UP]: Refer to the sidebar on page 60.

[] (Date print)
Select [ON], [OFF] or [DEFAULT].
[] (Print Effect)
The print effect can be used with printers compatible with the Image Optimize function to achieve higher quality prints. Select [ON], [OFF] or [DEFAULT]. Canon inkjet printers and SELPHY DS printers: You can also select [VIVID], [NR] and [VIVID+NR].
[] (Number of Copies)
Select 1-99 copies.

NOTES

Print setting options and [DEFAULT] settings vary depending on the printer model. For details, refer to the printer's instruction manual.

Printing multiple images on the same sheet [2-UP], [4-UP], etc.

When using Canon printers you can print the same still image multiple times on the same sheet of paper. Use the following table as a guideline for the recommended number of copies depending on the [] PAPER SIZE] setting.

[] PAPER SIZE]→	[CREDITCARD]	[9 x 13 cm]	[10 x 14.8 cm]	[A4]
Canon printer ↓				
Inkjet printers SELPHY DS	-	-	2, 4, 9 or 16 ¹	4
SELPHY CP	2, 4 or 8 ²	2 or 4	2 or 4	-
SELPHY ES	2, 4 or 8 ³	2 or 4	2 or 4	-

¹ You can also use the special sticker sheets.


² When you use the wide-sized photo paper with the [DEFAULT] setting, you can also use [2-UP] or [4-UP].

³ With the [8-UP] setting, you can also use the special sticker sheets.

Printing after Changing the Print Settings



- 1 If the joystick guide does not appear on screen, press to display it.
- 2 Push the joystick () toward . The print settings menu appears.

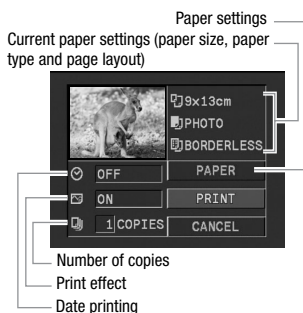

- 3 In the print settings menu, select (,) the setting you want to change and press .
- 4 Select () the desired setting option and press .
- 5 Select (,) [PRINT] and press .
 - Printing starts. The print settings menu disappears when the printing is completed.
 - To continue printing, select () another still image.

TO CANCEL THE PRINTING

- 1 Press while printing.
- 2 Select () [OK] and press .

PRINTING ERRORS

If an error occurs while printing, an error message appears (82).

- Canon's PictBridge-compatible printers: Resolve the error. When printing does not resume automatically, select [CONTINUE] and press . If [CONTINUE] cannot be selected, select [STOP], press and retry printing. Refer also to the printer's instruction manual for details.
- If the error still persists and printing does not restart, disconnect the USB cable and turn off the camcorder and the printer. After a short while, turn them on again, set the camcorder to mode and restore the connection.

WHEN YOU HAVE FINISHED PRINTING

Disconnect the cable from the camcorder and printer and turn off the camcorder.

! IMPORTANT

- The following still images may not be printed correctly with a PictBridge-compatible printer.
 - Images created or changed on a computer and transferred to the memory card.
 - Images recorded with the camcorder but edited on a computer.
 - Images whose file names were changed.
 - Images not recorded with this camcorder.
- Observe the following precautions during printing:
 - Do not turn off the camcorder or the printer.
 - Do not change the position of the switch.
 - Do not disconnect the USB cable.
 - Do not open the memory card slot cover and do not remove the memory card.

- If the message “BUSY” does not disappear, disconnect the USB cable and restore the connection after a short while.

Print Orders


You can mark in advance the still images you want to print and set the desired number of copies as a print order. Later, you can easily print out the print orders by connecting the camcorder to a PictBridge-compatible printer (□ 59). You can set print orders for up to 998 still images.

Selecting Still Images for Printing (Print Order)



POINTS TO CHECK

Set the print orders before connecting the USB cable to the camcorder.

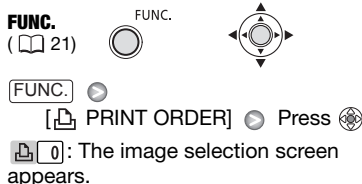

FROM THE IMAGE SELECTION SCREEN

- 1 Select (◀▶) the still image you want to mark with a print order.
- 2 Press to set the print order. The number of copies appears in orange in the box next to the print order symbol .
- 3 Set (▲▼) the number of copies desired and press .

To cancel the print order, set (▲▼) the number of copies to 0.

- 4 Repeat steps 1-3 to mark additional images with print orders or press **FUNC.** twice to close the menu.

Printing the Still Images Marked with Print Orders



- 1 Connect the camcorder to the printer using the supplied USB cable.

Refer to *PC Connection Diagram* (□ 66).

- 2 Open the print settings menu.



The print settings menu appears. The error message “SET PRINT ORDER” appears if you connect a printer with direct print function and select [PRINT] without having set any print orders beforehand.

- 3 Select (▲▼, ◀▶) [PRINT] and press .

Printing starts. The print settings menu disappears when the printing is completed.

NOTES

- Depending on the connected printer, you can change some print settings before step 3 (□ 59).
- **Cancel Printing/Printing Errors** (□ 61).
- **Restarting Printing:** Open the print settings menu as explained in step 2. In the print settings menu, select [RESUME]* and

press . The remaining images will be printed.

Printing cannot be restarted when the print order settings have been changed or if you deleted a still image with print order settings.

- * In case the print order was interrupted after the first still image, this menu option will appear as [PRINT] instead.

Erasing All Print Orders



FUNC.

(22)

FUNC.



FUNC.



[MENU]

[STILL IMG OPER.]

[ERASE ALL ORD]

[YES]


FUNC.



External Connections

This chapter explains step-by-step how to connect your camcorder to an external device such as a TV, VCR, or computer.

Connecting to a TV or VCR

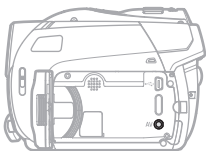

Open the LCD panel to access.



① AV Terminal

Sound from the built-in speaker will be muted while the STV-250N Stereo Video Cable is connected to the camcorder.

Connection Diagrams

Turn off all the devices when making the connection and refer also to the instruction manual of the connected device.

Terminal on the camcorder	Connecting cable	Terminal on the connected device
---------------------------	------------------	----------------------------------

1 Output connection (signal flow →) to a TV or VCR with AV terminals.



2 Output connection (signal flow →) to a TV or VCR with SCART terminal.

First, connect a SCART adapter to the SCART terminal on the TV or VCR and then connect the STV-250N Stereo Video Cable to the adapter.



Playback on a TV Screen

This section explains how to play back the disc or still images with this camcorder by connecting it to a TV. To play back the disc with another DVD device refer to *Disc Playback on an External Device* (□ 46).



POINTS TO CHECK

Before connecting the camcorder, select the [TV TYPE] setting according to the TV set to which you will connect the camcorder (□ 75).

Connecting

Connect the camcorder to the TV following one of the connection diagrams shown in the previous section *Connection Diagrams* (□ 64).

Playback

1 Turn on the camcorder and the connected TV or VCR.

On a TV: Select as the video input the same terminal to which you connected the camcorder.

On a VCR: Set the input selector to the external video input (usually labeled LINE IN).

2 Start the playback of the movies (□ 33) or still images (□ 52).

NOTES

- Turn off all the devices before starting the connections.
- Sound from the built-in speaker will be muted while the STV-250N Stereo Video Cable is connected to the camcorder.
- We recommend powering the camcorder using the compact power adapter.

- Refer also to the instruction manual of the connected TV.

Copying your Recordings to an External Video Recorder

You can copy your recordings by connecting the camcorder to a VCR or a digital video device.



Connecting

Connect the camcorder to the device following one of the connection diagrams shown in the previous section *Connection Diagrams* (□ 64).


Recording

- 1 Connected device: Load a blank cassette or disc and set the device to record pause mode.**
- 2 This camcorder: Locate the scene you wish to copy and pause playback shortly before the scene.**
- 3 This camcorder: Resume the movie playback.**
- 4 Connected device: Begin recording when the scene you wish to copy appears. Stop recording when copying is complete.**
- 5 This camcorder: Stop playback.**

NOTES

- We recommend powering the camcorder using the compact power adapter.
- By default, the on-screen displays will be embedded in the output video signal, but you can change the displays by repeatedly pressing [DISP.] (□ 35).

Connecting to a Computer

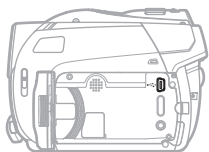

Open the LCD panel to access.



① USB Terminal

Use the USB connection to print still images and transfer them to a computer.

 
PC Connection Diagram

Terminal on the
camcorder

Connecting cable

Terminal on the
connected device

1 Output connection (signal flow →) to a computer or PictBridge-compatible printer with a USB port.



Corel Application Disc - Movie Playback/Editing and Various Disc Operations

The supplied CD-ROM **Corel Application Disc** includes software that will allow you to play back movies, transfer movies to a computer and easily edit them, make copies of your disc or create (author) new personalized discs, and more.

For further details, refer to the **Corel Application Disc Installation Guide and User Manual**.

Transferring Photos - Direct Transfer

With the supplied USB cable and software (on the **DIGITAL VIDEO Solution Disk** CD-ROM) you can transfer still images to a computer.

Preparations

Install the software before you connect the camcorder to the computer for the first time. (Windows users only: you also need to select CameraWindow's auto-launch setting.) After that, just connect the camcorder to the computer (steps 2



and 3) and proceed directly to transfer the still images (□ 67).

1 Install the supplied Digital Video Software.

See *Installing the Software* in the *Digital Video Software* instruction manual (electronic version on PDF file).

2 Set the camcorder to mode.

3 Connect the camcorder to the computer using the USB cable.

- Refer to *PC Connection Diagram* (□ 66).
- The direct transfer menu appears on the camcorder screen.

FIRST-TIME CONNECTION TO A COMPUTER RUNNING WINDOWS

Windows users only: The first time you connect the camcorder to the computer, you need also to select the CameraWindow auto-launch setting. See *Connecting the Camcorder to a Computer* in the *Digital Video Software* instruction manual (electronic version on PDF file).

! IMPORTANT

- Observe the following precautions when the CARD access indicator is on or flashing. Failing to do so may result in permanent data loss.
 - Do not subject the camcorder to vibrations or strong impacts.
 - Do not open the memory card slot cover and do not remove the memory card.
 - Do not disconnect the USB cable.
 - Do not turn off the camcorder or the computer.
 - Do not change the position of the /  switch or the operating mode.

- Operation may not work correctly depending on the software and the specifications/settings of your computer.
- If you wish to use the image files on your computer, make copies of them first. Use the copied files, retaining the originals.
- During the following operations, even if you connect the camcorder to the computer it will not be recognized.
 - Erasing all still images from the card
 - Erasing all transfer orders
 - Erasing all print orders

i NOTES

- We recommend powering the camcorder using the compact power adapter.
- Refer also to the computer's instruction manual.
- Users of Windows Vista, Windows XP and Mac OS X:
Your camcorder is equipped with the standard Picture Transfer Protocol (PTP) allowing you to transfer still images (JPEG only) simply by connecting the camcorder to a computer using the USB cable without having to install the supplied software.

Transferring Images

 ALL IMAGES
Transfers all still images.
 NEW IMAGES
Transfers only those images that have not yet been transferred to the computer.
 TRANSFER ORDERS
Transfers still images marked with transfer orders (□ 68).
 SELECT & TRANSFER
Allows you to select the still image.

[WALLPAPER]

Allows you to select the still image and set it as your computer's desktop background.



AUTOMATIC TRANSFER OPTIONS

When you select [ALL IMAGES], [NEW IMAGES] or [TRANSFER ORDERS], all the relevant still images will be transferred to the computer in one batch and their thumbnails will be displayed on the computer.

1 Select () a transfer option and press .

2 Select () [OK] and press .

- The camcorder returns to the transfer menu once the transfer is complete.
- To cancel the transfer, select () [CANCEL] and press or press [FUNC.].

MANUAL TRANSFER OPTIONS

When you select [SELECT & TRANSFER] or [WALLPAPER]:

1 Select () a transfer option and press .

2 Select () the image you want to transfer and press .

- [SELECT & TRANSFER]: The selected image is transferred and displayed on the computer. To continue transferring, select () another image.

- [WALLPAPER]: The selected image is transferred to the computer and displayed as the desktop's background.
- Press [FUNC.] to return to the transfer menu.

NOTES

When the camcorder is connected to the computer and the image selection screen is displayed, press [FUNC.] to return to the transfer menu.

Transfer Orders


You can mark in advance the still images you want to transfer to the computer as transfer orders. You can set transfer orders for up to 998 still images.



Selecting Still Images to Transfer (Transfer Order)

POINTS TO CHECK

Set the transfer orders before connecting the camcorder to the computer.

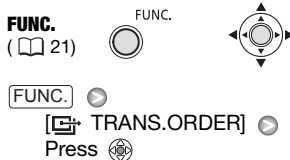

: The image selection screen appears.

FROM THE IMAGE SELECTION SCREEN

1 Select () the still image you want to mark with a transfer order.

2 Press to set the transfer order.

A checkmark ✓ appears in the box next to the transfer order symbol  .
Press  again to cancel the transfer order.

3 Repeat steps 1-2 to mark additional images with transfer orders or press **FUNC.** twice to close the menu.

Erasing All Transfer Orders

FUNC.

( 22)



FUNC.



[ MENU]



[ STILL IMG OPER.]



[ERASE ALL  ORD]



[YES]



FUNC.



Additional Information

This chapter contains troubleshooting advice, screen messages, handling and maintenance tips, and other information.

Appendix: Menu Options Lists

Menu items not available appear grayed out. For details about how to select an item, refer to *Using the Menus* (p. 21). For details about each function, see the reference page. Menu options without a reference page are explained below the tables.

FUNC. Menu

Menu item	Setting options	CAMERA		PLAY		
Recording programs ¹	[] PROGRAM AE], [] SHUTTER-PRIO.AE], [] PORTRAIT], [] SPORTS], [] NIGHT], [] SNOW], [] BEACH], [] SUNSET], [] SPOTLIGHT], [] FIREWORKS]	●	●	—	—	36
White balance ¹	[] AUTO], [] DAYLIGHT], [] TUNGSTEN], [] SET]	●	●	—	—	41
Image effects ¹	[] IMAGE EFFECT OFF], [] VIVID], [] NEUTRAL], [] SOFT SKIN DETAIL]	●	●	—	—	42
LCD video light	[] LCD LIGHT OFF], [] LCD LIGHT ON]	●	●	—	—	39
Digital effects ¹	[] D.EFFECT OFF], [] FADE-T], [] WIPE], [] BLK&WHT], [] SEPIA], [] ART], [] MOSAIC]	●	—	—	—	43
	[] D.EFFECT OFF], [] BLK&WHT], [] SEPIA]	—	●	—	—	
Recording mode	[] HIGH QUALITY], [] STANDARD PLAY], [] LONG PLAY]	●	—	—	—	30
Drive mode ¹	[] SINGLE], [] CONT.SHOOT], [] HISPEED CONT.SHOOT], [] AEB]	—	●	—	—	55

FUNC. Menu (cont.)

Menu item	Setting options	CAMERA		PLAY		
Still image size/quality	Size: [LW 1152x648], [L 1152x864], [S 640x480] Quality: [SUPER FINE], [FINE], [NORMAL]	—	●	—	—	51
[TO PLAYLIST] ²	—	—	—	●	—	45
[TO ORIGINAL] ³	—	—	—	●	—	45
[ADD TO PLAYLIST] ²	[ALL SCENES], [ONE SCENE], [CANCEL]	—	—	●	—	44
[MOVE] ³	—	—	—	●	—	45
[DIVIDE] ³	—	—	—	●	—	45
[DELETE] ⁴	[NO], [YES]	—	—	●	—	35
[SPEAKER VOL.] ⁵		—	—	●	—	34
[SLIDESHOW]	—	—	—	—	●	53
[PROTECT]	—	—	—	—	●	57
[PRINT ORDER]	[0] - [99] COPIES	—	—	—	●	62
[TRANS.ORDER]	—	—	—	—	●	68

¹ Option available only when the mode switch is set to .

² Option available only in the original index screen with DVD-RW discs in VR mode.

³ Option available only in the playlist index screen with DVD-RW discs in VR mode.

⁴ Option available only in the index screen with DVD-RW discs in VR mode.

⁵ Option available only during playback.

CAMERA SETUP

Menu item	Setting options	CAMERA		
				
[A.SL SHUTTER] ¹	[ON ON], [OFF OFF]	●	●	—
[ZOOM TYPE]	[37x OPTICAL], [45x ADVANCED] ³ , [2000x DIGITAL]	●	—	30
[ZOOM SPEED]	[VAR VARIABLE], [3 SPEED 3], [2 SPEED 2], [1 SPEED 1]	●	●	31
[FOCUS PRI.] ²	[AiAF ON: AiAF], [ON ON: CENTER], [OFF OFF]	—	●	56
[REVIEW]	[OFF OFF], [2sec 2 sec], [4sec 4 sec], [6sec 6 sec], [8sec 8 sec], [10sec 10 sec]	—	●	—
[IMG STAB] ²	[ON ON ()], [OFF OFF]	●	—	—
[WIDESCREEN]	[ON ON], [OFF OFF]	●	—	—
[SELF TIMER]	[ON ON ()], [OFF OFF]	●	●	39
[WIND SCREEN] ²	[A AUTO], [OFF OFF ()]	●	—	—

¹ Option available only when the recording program is set to **EASY** or **P** (only in the **P** PROGRAM AE) recording program).

² Option available only when the mode switch is set to **P**.

³ [**46x** ADVANCED] when [WIDESCREEN] is set to [**OFF** OFF].

[A.SL SHUTTER]: The camcorder automatically uses slow shutter speeds to obtain brighter recordings in places with insufficient lighting.

- The camcorder uses shutter speeds down to 1/25 (1/12 in **CAMERA**  mode).
- If a trailing afterimage appears, set the slow shutter to [**OFF** OFF].
- If  (camcorder shake warning) appears, we recommend stabilizing the camcorder, for example, by mounting it on a tripod.

[REVIEW]: Selects the time to display a still image after it has been recorded.

- This menu item will not be available when the drive mode ( 55) is set to [ CONT.SHOOT.], [ HISPEED CONT.SHOOT.] or [ AEB].
- If you press [DISP.] while reviewing a still image it will continue to be displayed indefinitely. Press [Start/Stop] to return to the normal display.

[IMG STAB]: The image stabilizer compensates for camcorder shake even at full telephoto.

- The image stabilizer is designed to compensate for a normal degree of camcorder shake.
- The image stabilizer may not be effective when recording in dark places with [A.SL SHUTTER] set to [**ON** ON] or using the [ NIGHT] recording program.
- The image stabilizer cannot be turned off when the mode switch is set to **EASY**.
- We recommend setting the image stabilizer to [**OFF** OFF] when using a tripod.

[WIDESCREEN]: The camcorder uses the full width of the image sensor providing high-resolution 16:9 recordings.

- Since the screens on the camcorder have an aspect ratio of 16:9, recordings with a 4:3 aspect ratio will appear in the center of the screen with black sidebars.

- **Playing back a widescreen recording:** TV sets compatible with the WSS system will automatically switch to wide (16:9) mode. Otherwise, change the aspect ratio of the TV manually. To play back on a TV with normal aspect ratio (4:3) change the [TV TYPE] setting accordingly (75).

[WIND SCREEN]: The camcorder automatically reduces the background sound of wind when recording outdoors.

- The wind screen cannot be turned off when the mode switch is set to **EASY**.
- Some low-frequency sounds will be suppressed along with the sound of wind. When recording in surroundings unaffected by wind or if you want to record low-frequency sounds, we recommend setting the wind screen to [OFF OFF OFF].

DISC OPERATIONS

Menu item	Setting options	CAMERA	PLAY	
[DISC INFO]	—	●	●	—
[INITIALIZE DISC] ¹	[VIDEO], [VR], [CANCEL]	●	●	46
[FINALIZE]	[NO], [YES]	—	●	47
[UNFINALIZE] ²	[NO], [YES]	—	●	48
[DEL.ALL MOVIES] ³	[NO], [YES]	—	●	35
[DEL.PLAYLIST] ⁴	[NO], [YES]	—	●	35
[DISC TITLE]	—	—	●	46

¹ Option available only with DVD-RW discs.

² Option available only with finalized DVD-RW discs in VIDEO mode.

³ Option available only in the original index screen with DVD-RW discs in VR mode.

⁴ Option available only in the playlist index screen with DVD-RW discs in VR mode.

[DISC INFO]: Displays a screen where you can verify the details regarding the disc.

- The disc information includes the disc title, the disc type (DVD-R, DVD-R DL or DVD-RW), the disc specification (VIDEO mode or VR mode), and an icon to indicate whether the disc is finalized (F).

STILL IMG OPER.

Menu item	Setting options	PLAY	
[ERASE ALL ORD]	[NO], [YES]	●	63
[ERASE ALL ORD]	[NO], [YES]	●	63
[ERASE ALL IMAGES]	[NO], [YES]	●	54
[INITIALIZE CARD]	[INITIALIZE], [COMPL.INIT.], [CANCEL]	●	58

DISPLAY SETUP

Menu item	Setting options	CAMERA		PLAY		
						
[BRIGHTNESS]		●	●	●	●	—
[TV SCREEN]	[ON ON], [OFF OFF]	●	●	—	—	—
[MARKERS]	[OFF OFF], [ LEVEL(WHT)], [ LEVEL(GRY)], [ GRID(WHT)], [ GRID(GRY)]	●	●	—	—	—
[DATA CODE]	[ DATE], [ TIME], [ DATE & TIME], [ CAMERA DATA]	—	—	●	—	35
[LANGUAGE]	[ČEŠTINA], [DEUTSCH], [ΕΛΛΗΝΙΚΑ], [ENGLISH], [ESPAÑOL], [FRANÇAIS], [ITALIANO], [MAGYAR], [MELAYU], [POLSKI], [ROMÂNĂ], [TÜRKÇE], [РУССКИЙ], [УКРАЇНСЬКА], [العربية], [فارسی], [ภาษาไทย], [简体中文], [繁體中文], [한국어], [日本語]	●	●	●	●	23
[DEMO MODE]	[ON ON], [OFF OFF]	●	●	—	—	—

[BRIGHTNESS]: Adjust (◀▶) the brightness of the LCD display with the joystick.

- Changing the brightness of the LCD display does not affect that of the viewfinder or the recordings.

[TV SCREEN]: When set to [**ON** ON], the camcorder's on-screen displays will appear also on the screen of a connected TV or monitor.

[MARKERS]: You can display a grid or a horizontal line at the center of the screen. The markers are available in white or gray. Use the markers as a reference to make sure your subject is framed correctly (vertically and/or horizontally).

- Using the markers will not affect the recordings.

[DEMO MODE]: The demonstration mode displays the camcorder's main features. It starts automatically when the camcorder is powered with the power adapter if you leave it turned on without loading a recording media for more than 5 minutes.

- To cancel the demo mode once it started, press any button, turn off the camcorder or load a disc.

SYSTEM SETUP

Menu item	Setting options	CAMERA		PLAY		
[WL.REMOTE]	[ON ON], [OFF OFF ()]	●	●	●	●	—
[SPEAKER VOL.]	  	—	—	●	—	—
[BEEP]	[ HIGH VOLUME], [ LOW VOLUME], [OFF OFF]	●	●	●	●	—
[POWER SAVE]	[ON ON], [OFF OFF]	●	●	●	●	—
[ STANDBY OFF]	[10min 10 min], [20min 20 min], [30min 30 min]	●	●	—	—	—
[FILE NOS.]	[ RESET], [ CONTINUOUS]	—	●	—	—	—
[TV TYPE]	[4:3 NORMAL TV], [16:9 WIDE TV]	●	●	●	●	—
[FIRMWARE]	—	—	—	—	●	—

[WL. REMOTE]: Allows the camcorder to be operated with the wireless controller.

[SPEAKER VOL.]: Adjust (◀▶) the volume of the playback.

[BEEP]: A beep will accompany some operations like turning on the camcorder, the self-timer countdown, etc. It also serves as a warning beep under unusual conditions.

[POWER SAVE]: In order to save power when the camcorder is powered by a battery pack, it will automatically shut off if left without any operation for 5 minutes. Approximately 30 seconds before the camcorder shuts off, the message “  **AUTO POWER OFF** ” will appear.

[ **STANDBY OFF]:** Select the length of time after which the camcorder will end the standby mode and shut off automatically.

[FILE NOS.]: Select the image numbering method to be used when you insert a new memory card.

Images are automatically assigned consecutive image numbers from 0101 to 9900, and stored in folders containing up to 100 images. Folders are numbered from 101 to 998.

[ **RESET**]: Image numbers will restart from 101-0101 every time you insert a new memory card.

[ **CONTINUOUS**]: Image numbers will continue from the number following that of the last image recorded with the camcorder.

- If the memory card you insert already contains an image with a larger number, a new image will be assigned a number one higher than that of the last image on the memory card.
- We recommend using the [ **CONTINUOUS**] setting.

[TV TYPE]: In order to display the picture in full and in the correct aspect ratio, select the setting according to the type of television to which you will connect the camcorder.

[**4:3** **NORMAL TV**]: TV sets with 4:3 aspect ratio.

[**16:9** **WIDE TV**]: TV sets with 16:9 aspect ratio.

[FIRMWARE]: You can verify the current version of the camcorder's firmware. This menu option is usually grayed out.

DATE/TIME SETUP

Menu item	Setting options	CAMERA		PLAY		
						
[T.ZONE/DST]	List of world time zones.	●	●	●	●	24
[DATE/TIME]	—	●	●	●	●	23
[DATE FORMAT]	[Y.M.D (2008.1.1 AM 12:00)], [M.D,Y (JAN. 1, 2008 12:00 AM)], [D.M.Y (1.JAN.2008 12:00 AM)]	●	●	●	●	—

[DATE FORMAT]: Changes the date format for on-screen displays and for date printing.

Troubleshooting

If you have a problem with your camcorder, refer to this section. Consult your dealer or a Canon Service Center if the problem persists.

Power Source

- **The camcorder will not turn on or it turns off by itself.**
- **The disc compartment cover will not open.**
- **The LCD/viewfinder switches on and off.**

- Battery pack is exhausted. Replace or charge the battery pack (□ 17).
- Attach the battery pack correctly.
- Use the compact power adapter.

The charge indicator flashes rapidly.

- (one flash at 0.5-second intervals)
Charging has stopped because the compact power adapter or the battery pack is faulty. Consult a Canon Service Center.
- (two quick flashes at 1-second intervals)
Battery pack at least 50% charged (□ 18). This is not a malfunction.

- **Battery pack will not charge.**
- **The charge indicator flashes very slowly (one flash at 2-second intervals).**
 - Charge the battery pack in temperatures between 0 °C and 40 °C.
 - Battery packs become hot with use and may not charge. When the battery pack is outside the charging temperature range, the CHARGE indicator will flash irregularly. The charging will start once the battery pack temperature is below 40 °C.
 - The battery pack is damaged. Use a different battery pack.
 - If you connect a faulty power adapter or battery pack, the CHARGE indicator flashes approx. twice per second and the charging stops.
 - Check that the compact power adapter is correctly connected to the camcorder.

Camcorder is on but is unresponsive.

- The camcorder has exceeded its operational temperature (ERR appears). Turn off the camcorder and let it cool down before resuming use.

Recording/Playback

Buttons will not work.

- Turn on the camcorder.
- Load a disc (□ 25).

Abnormal characters appear on the screen. The camcorder does not operate properly.

- Disconnect the power source and reconnect it after a short time. If the problem still persists, disconnect the power source and press the RESET button with a pointed item. Pressing the RESET button resets all settings.

appears on the screen.

- Load a disc (□ 25).

appears on the screen.

- Battery pack is exhausted. Replace or charge the battery pack (□ 18).

The wireless controller will not work.

- Set [WL.REMOTE] to [ON] (□ 75).
- The battery of the wireless controller is exhausted. Replace the battery (□ 18).

Video noise appears on screen.

- When using the camcorder close to devices that emit strong electromagnetic fields (plasma TVs, cellular phones, etc.), keep a distance between the camcorder and these devices.

Video noise appears on the TV screen.

- When using the camcorder in a room where a TV is located, keep a distance between the compact power adapter

and the power or antenna cables of the TV.

Even without a disc loaded, when closing the disc compartment cover a motor sound can be heard.

- The camcorder is checking if a disc is loaded or not. This is not a malfunction.

Cannot open the disc cover to remove the disc.

- Turn off the camcorder, disconnect the compact power adapter and remove the battery pack. Restore the power supply and try again.
- The camcorder has exceeded its operational temperature. Turn off the camcorder and let it cool down before resuming use.

The disc cannot be recognized.

- The disc is dirty. Clean the disc with a soft lens-cleaning cloth (□ 85). If the problem persists replace the disc.
- The disc is not correctly loaded. Check the disc (□ 25).
- Verify that the camcorder supports the type of DVD disc you inserted (□ 3).

The camcorder vibrates.

- Depending on the condition of the disc, the camcorder might vibrate occasionally. This is not a malfunction.

• The disc's rotation can be faintly heard.

• Occasionally the operation sound can be heard.

- The disc is activated from time to time. This is not a malfunction.

• After using the camcorder for a long time, it becomes hot.

• lights up in red.

- This is not a malfunction. Turn the camcorder off and let it cool for a while before resuming operation.

Recording

Image will not appear on the screen.

- Set the camcorder to  mode (□ 28).
- Open the lens cover.

Pressing will not start recording.

- Set the camcorder to  mode (□ 28).
- Load a disc that has been tested (□ 4).
- The disc is full (" END" appears on the screen). Delete some recordings (DVD-RW in VR mode) to free some space (□ 35) or replace the disc.
- The camcorder has exceeded its operational temperature. Turn off the camcorder and let it cool down before resuming use.
- Unfinalize (□ 48) the disc (DVD-RW in VIDEO mode).

Even after stopping recording, the disc access indicator does not go off.

- The scene is being recorded on the disc. This is not a malfunction.

The point where was pressed does not match the beginning/end of the recording.

- There is a slight interval between pressing  and the actual start of the recording on the disc. This is not a malfunction.

The recording suddenly stops shortly after starting recording.

- The disc is dirty. Clean the disc with a soft lens-cleaning cloth (□ 85). If the problem persists replace the disc.
- The camcorder has exceeded its operational temperature. Turn off the camcorder and let it cool down before resuming use.

Camcorder will not focus.

- Autofocus does not work on that subject. Focus manually (□ 40).
- If you are using the viewfinder, adjust it with the diopter adjustment lever (□ 29).
- Lens is dirty. Clean the lens with a soft lens-cleaning cloth (□ 85). Never use tissue paper to clean the lens.

Sound is distorted.

- When recording near loud sounds (such as fireworks or concerts), sound may become distorted.



A vertical light bar appears on the screen.

- Bright light in a dark scene may cause a vertical light bar (smear) to appear. This is not a malfunction.

Viewfinder picture is blurred.

- Adjust the viewfinder with the dioptic adjustment lever (□ 29).

Playback/Editing

Playback does not start.

- Load a disc (□ 25).
- Set the camcorder to **PLAY** mode (□ 33).
- You may not be able to play with this camcorder, discs recorded or edited with other DVD recorders or computer DVD drives.
- If using a single-sided disc, check that the disc is inserted with the label side facing up.
- The camcorder has exceeded its operational temperature. Turn off the camcorder and let it cool down before resuming use.

• During playback there is video noise and the sound is distorted.

• The disc cannot be read.

- The disc is dirty. Clean the disc with a soft lens-cleaning cloth (□ 85).
- You may not be able to play with this camcorder, discs recorded or edited with other DVD recorders or computer DVD drives.

Cannot add scenes to the playlist.

- The disc is full ("END" appears on the screen). Delete some recordings to free some space (□ 35).
- You cannot add more than 999 scenes to the playlist.

Cannot divide the scene.

- You cannot edit or delete scenes on a disc that was recorded in another digital device.
- You cannot divide the scene if there are already 999 scenes on the disc.
- You cannot divide original scenes.
- You cannot divide the scene if it is too short (2 seconds or less).

Cannot edit the disc title.

- You cannot add a title to a DVD-R/DVD-R DL disc after it was finalized (□ 47).
- Unfinalize (□ 48) the disc first (DVD-RW in VIDEO mode).
- You may not be able to edit the title if you entered it with another digital device.

Cannot edit or delete scenes.

- You cannot edit or delete scenes on a disc that was protected with another digital device.
- Scenes cannot be deleted in a DVD-R/DVD-R DL disc or a DVD-RW disc recorded in VIDEO mode.

Cannot finalize the disc.

- The camcorder has exceeded its operational temperature. Turn off the camcorder and let it cool down before resuming use.
- When using a battery pack, make sure it is fully charged.

No sound from the built-in speaker.

- Open the LCD panel.
- Speaker volume is turned off. Adjust the volume with the [SPEAKER VOL.] setting (□ 34).

Playing Back the Disc in an External DVD Device

There is a brief stop between scenes.

- Depending on the DVD player, there might be a very short stop between scenes during playback.

Disc is running, but image will not appear on the TV screen.

- The video input on the TV is not set to the video terminal to which you connected the camcorder. Select the correct video input.
- You attempted to play back an incompatible disc. Stop playback.

The disc cannot be recognized by the device. Or, even though the disc is read, cannot play back the disc or the picture is distorted.

- The disc is dirty. Clean the disc with a soft lens-cleaning cloth (□ 85).

- Finalize the disc using the camcorder (□ 47).
- DVD-RW discs in VR mode can only be played back with VR mode-compatible DVD players. Refer to the instruction manual of your DVD device.

Cannot edit my recordings or add recordings to the disc with the DVD device.

- It may not be possible to edit or add recordings with an external DVD recorder on a disc recorded with this camcorder.

Memory Card Operation

Memory card cannot be inserted.

- Memory card is not facing the correct direction. Turn the memory card over and reinsert it (□ 27).

Cannot record on the memory card.

- Memory card is full. Erase still images (□ 54) to free some space or replace the memory card.
- Memory card was not initialized. Initialize the memory card (□ 58).
- The folder and file numbers have reached their maximum value. Set [FILE NOS.] to [RESET] (□ 75) and insert a new memory card.
- The write-protect switch on an SD or SDHC memory card is set to prevent accidental erasure. Change the position of the write-protect switch.

Memory card cannot be played back.

- Set the camcorder to  mode (□ 52).

Image cannot be erased.

- Image is protected. Cancel the protection (□ 57).
- The write-protect switch on an SD or SDHC memory card is set to prevent accidental erasure. Change the position of the write-protect switch.

appears in red.

- A memory card error occurred. Turn off the camcorder. Remove and reinsert the memory card. Initialize the memory card (□ 58) if the icon still appears in red.

Printing

The printer is not operating even though the camcorder and printer are correctly connected.

- Disconnect the USB cable and turn off the camcorder and the printer. After a short while, turn them on again, set the camcorder to  mode and restore the connection.

List of Messages (in alphabetical order)

CANNOT ENTER THE STANDBY MODE NOW

- The camcorder cannot enter the Quick Start standby mode (□ 32) while the disc is being recognized after it was inserted or if the remaining battery charge is too low.

CANNOT PLAY BACK

- The disc is dirty or you attempted to play back a disc type not supported by this camcorder (not DVD-R/RW) or a disc that is dirty or scratched.
- This message can also appear if condensation has formed. Wait until the camcorder dries completely before resuming use (□ 88).

CANNOT READ THE DISC CHECK THE DISC

- Disc could not be read. Try cleaning it or replace the disc (□ 85).
- This message can also appear if the camcorder has exceeded its operational temperature. Turn off the camcorder and let it cool down before resuming use.
- This message can also appear if condensation has formed. Wait until the camcorder dries completely before resuming use (□ 88).
- The disc may not be loaded correctly. Try removing the disc and reinserting it (□ 25).



• CANNOT RECORD

• CANNOT RECORD

CHECK THE DISC

- There is a problem with the disc. Replace the disc (□ 25).
- This message can also appear if condensation has formed. Wait until the camcorder dries completely before resuming use (□ 88).
- The disc's recording surface may be dirty or scratched.
- This message may appear when the camcorder is repeatedly subject to vibration.

CANNOT USE DISC

USE OF A RECOMMENDED DISC IS ADVISED

- The disc cannot be used. We recommend that you use a disc that has been tested (□ 4).

CARD ERROR

- A memory card error occurred. The camcorder cannot record or display the image. The error may be temporary. If the message disappears after 4 seconds and □ appears in red, turn the camcorder off, remove the card and reinsert the card. If □ changes to green, you can resume recording/playback.

CARD FULL

- Memory card is full. Erase some images (□ 54) to free some space or replace the memory card.

CHANGE THE BATTERY PACK

- Battery pack is exhausted. Replace or charge the battery pack (□ 17).

DISC ACCESS FAILURE CHECK THE DISC

- There was an error when reading the disc or attempting to write onto it. Try cleaning the disc or replace it (□ 85).
- This message can also appear if condensation has formed. Wait until the camcorder dries completely before resuming use (□ 88).
- The disc may not be loaded correctly. Try removing the disc and reinserting it (□ 25).

DISC COVER IS OPEN

- Verify the disc is correctly inserted and close the disc cover (□ 25).

DISC FULL

- The disc is full ("END" appears on the screen). Delete some recordings (DVD-RW in VR mode) to free some space (□ 35) or replace the disc.

DISC IS FINALIZED

CANNOT RECORD

- You cannot record additional scenes on a finalized DVD-R/DVD-R DL disc.
- You cannot record additional scenes or unfinalize a DVD-RW disc in VIDEO mode that was finalized with another digital device.

DISC MUST BE FINALIZED TO PLAY BACK IN COMPATIBLE PLAYERS

- Be sure to finalize the disc and check the compatibility of the device before playing back the disc on external DVD devices (□ 47).

LOADING THE DISC

- The disc is being read. Wait before you start recording.

NAMING ERROR

- The folder and file numbers have reached their maximum value. Set the [FILE NOS.] option to [RESET] and erase all the images on the memory card (□ 54) or initialize it (□ 58).

NO CARD

- There is no memory card in the camcorder (□ 27).

NO DISC

- No disc is loaded. Insert a disc (□ 25).
- This message can also appear if condensation has formed. Wait until the camcorder dries completely before resuming use (□ 88).

NO IMAGES

- No images are recorded on the memory card.

PRINT ORDER ERROR

- You attempted to set more than 998 still images in the print order (□ 62).

REACHED THE MAXIMUM NUMBER OF SCENES

- The maximum number of scenes has been reached. Delete some recordings (DVD-RW in VR mode) to free some space (□ 35) or replace the disc.

RECOVERING DATA PLEASE WAIT...

- Data on the disc is being recovered. Wait until this message disappears before resuming use.

TASK IN PROGRESS DO NOT DISCONNECT THE POWER SOURCE

- The camcorder is updating important file allocation data on the disc. Do not disconnect the compact power adapter or remove the battery pack.

• TEMPERATURE TOO HIGH CANNOT RECORD

• TEMPERATURE TOO HIGH CANNOT REMOVE DISC

- The camcorder has exceeded its operational temperature. Disconnect the compact power adapter and remove the battery and let the camcorder cool down before resuming use.

TOO MANY STILL IMAGES DISCONNECT USB CABLE

Disconnect the USB cable and decrease the number of still images on the memory card to less than 1,800. If a dialog appeared on the computer screen, close it and then restore the connection.

TRANSFER ORDER ERROR

You attempted to set more than 998 transfer orders (□ 68).

UNABLE TO RECOGNIZE THE DATA

- The disc may not be recognized by this camcorder if it was initialized with a different device.
- You inserted a disc recorded in a different Television System (NTSC).

UNABLE TO RECOVER DATA

- Could not recover a corrupted file.
- This message can also appear if condensation has formed. If you suspect condensation is the reason, do not initialize the disc and wait until the camcorder dries completely before resuming use (□ 88).

UNFINALIZE THE DISC

- You cannot record additional scenes on a finalized DVD-RW in VIDEO mode. Unfinalize the disc first (□ 48).

USE OF A RECOMMENDED DISC IS ADVISED

- The disc can be used but performance is not guaranteed. We recommend that you use a disc that has been tested (□ 4).

Direct Print Related Messages

About Canon inkjet printers and SELPHY DS Printers: If the printer's error indicator flashes or an error message appears on the printer's operation panel, refer to the printer's instruction manual.

CANNOT PRINT!

- You attempted to print an image that was recorded with another camcorder, with a different compression, or was edited on a computer.

COMMUNICATION ERROR

- The printer is experiencing a data transfer error. Cancel printing. Disconnect the USB cable and turn off the camcorder and the printer. After a short while, turn them on again, set the camcorder to  mode and restore the connection. If you attempted to print from a memory card that contains a large number of images, reduce the number of images.

COULD NOT PRINT X IMAGES

- You attempted to use the print order settings to print X images that were recorded with another camcorder, with a different compression or were edited on a computer.

FILE ERROR

- You attempted to print an image that was recorded with another camcorder,



with a different compression, or was edited on a computer.

HARDWARE ERROR

- Cancel printing. Turn off the printer and turn it back on. Check the printer status. If the printer is equipped with a battery, it might be exhausted. In such case, turn off the printer, replace the battery and turn it back on.

INCOMPATIBLE PAPER SIZE

- The paper settings of the camcorder conflict with the printer's settings.

INK ABSORBER FULL

- Select [CONTINUE] to resume printing. Consult a Canon Service Center (refer to the list included with the printer) to replace the ink absorber.

INK ERROR

- There is a problem with the ink.

LOW INK LEVEL

- The ink cartridge needs to be replaced soon. Select [CONTINUE] to restart printing.

NO INK

- The ink cartridge is not inserted or is out of ink.

NO PAPER

- Paper is not correctly inserted or there is no paper.

NO PRINTHEAD

- No print head is installed in the printer or the print head is defective.

PAPER ERROR

- There is a problem with the paper. The paper is not correctly loaded or the paper size is wrong. Alternatively, if the paper output tray is closed, open it to print.

PAPER JAM

- The paper jammed during printing. Select [STOP] to cancel printing. After removing the paper, set some paper again and retry printing.

PAPER LEVER ERROR

- Paper lever error occurred. Adjust the paper selection lever to the proper position.

PRINT ERROR

- Cancel printing, disconnect the USB cable and turn off the printer. After a while, turn the printer back on and reconnect the USB cable. Check the printer status.

PRINTER COVER OPEN

- Close the printer cover securely.

PRINTER ERROR

- Cancel printing. Turn off the printer and turn it back on. Check the printer status. If the error still persists, refer to the printer's instruction manual and contact the appropriate customer support center or service center.

PRINTER IN USE

- The printer is in use. Check the printer status.

SET PRINT ORDER

- No still image on the memory card has been marked with a print order.

Handling Precautions

Camcorder

- Do not touch the pick up lens.
- Do not subject the camcorder to vibrations or strong impacts while the DISC access indicator is on or flashing. The data may not be correctly recorded on the disc, and the recording may be permanently lost.
- Do not carry the camcorder by the LCD panel or the disc cover. Be careful when closing the LCD panel.
- Do not leave the camcorder in places subject to high temperatures (like the inside of a car under direct sunlight), or high humidity.
- Do not use the camcorder near strong electromagnetic fields such as above TVs, near plasma TVs or mobile phones.
- Do not point the lens or viewfinder at strong light sources. Do not leave the camcorder pointed at a bright subject.
- Do not use or store the camcorder in dusty or sandy places. The camcorder is not waterproof – avoid also water, mud or salt. If any of the above should get into the camcorder it may damage the camcorder and/or the lens. Be sure to close the disc compartment cover after use.
- Be careful of heat generated by lighting equipment.
- Do not disassemble the camcorder. If the camcorder does not function properly, consult qualified service personnel.
- Handle the camcorder with care. Do not subject the camcorder to shocks

or vibration as this may cause damage.

Battery Pack

DANGER!

Treat the battery pack with care.

- Keep it away from fire (or it might explode).
 - Do not expose the battery pack to temperature higher than 60 °C. Do not leave it near a heater or inside a car in hot weather.
 - Do not try to disassemble or modify it.
 - Do not drop it or subject it to shocks.
 - Do not get it wet.
- Charged battery packs continue to discharge naturally. Therefore, charge them on the day of use, or the day before, to ensure a full charge.
 - Contact of the battery pack terminals with metallic objects may cause a short circuit and damage the battery pack.
 - Dirty terminals may cause a poor contact between the battery pack and the camcorder. Wipe the terminals with a soft cloth.
 - Since storing a charged battery pack for a long time (about 1 year) can shorten its lifecycle or affect performance, we recommend to discharge the battery pack fully and to store it in a dry place at temperatures no higher than 30 °C. If you do not use the battery pack for long periods, charge and discharge it fully at least once a year. If you have more than one battery pack, perform these



 
precautions at the same time for all battery packs.

- Although the battery pack's operating temperature range is from 0 °C to 40 °C, the optimal range is from 10 °C to 30 °C. At cold temperatures, performance will temporarily decline. Warm it in your pocket before use.
- Replace the battery pack if the usable time after full charge diminishes substantially at normal temperatures.

About the battery terminal cover

The battery terminal cover has a []-shaped hole. This is useful when you wish to differentiate between charged and uncharged battery packs.


Back side of the battery pack



Terminal cover attached



 Charged



Uncharged

Mini DVD Disc

The recording surface of DVD discs is extremely delicate. If handled or stored in an incorrect manner, the camcorder may stop recognizing or may not be able to play back the disc. Be sure to observe the following precautions when storing/handling your discs.

- **Always remove the disc from the camcorder after you finish recording.**

Do not store the camcorder with a disc left inside.

- Do not bend, scratch or wet the disc and do not subject it to strong shocks.
- Do not attach any labels or stickers on the disc surfaces. The disc may not rotate in a stable manner and this may cause malfunctions.
- Keep the disc clean of dust, dirt or smudges. Even very small smudges or particles of dust can lead to problems when recording or playing back the disc. Carefully inspect the recording surface of the disc before inserting it in the camcorder. If the disc gets dirty use a dry, soft lens-cleaning cloth to remove any fingerprints, dirt buildup or smudges from the disc surface. Clean the disc in a radial motion from its center outwards.
- Never use a chemically treated cloth or flammable solvents such as paint thinner to clean the disc.
- To protect the disc, return it to its case for storage.
- When writing on the label side of the disc, avoid hard tip pens. Use waterproof soft-tipped felt pens instead.
- Moving a disc rapidly between hot and cold temperatures may cause condensation to form on its surfaces. If condensation forms on the disc, put it aside until the water droplets have evaporated completely.
- Never expose the disc to direct sunlight and do not store it in places subject to high temperatures or high humidity.
- Always finalize a disc before inserting it into an external DVD device. Failing to do so can result in the loss of the recorded data.

Memory Card

- We recommend saving backups of memory card images on your computer. Image data may be corrupted or lost due to memory card defects or exposure to static electricity. Canon makes no warranties for corrupted or lost data.
- Do not turn off the camcorder, disconnect the power source or remove the memory card while the CARD access indicator is flashing.
- Do not use memory cards in places subject to strong magnetic fields.
- Do not leave memory cards in places subject to high humidity and high temperature.
- Do not disassemble, bend, drop, or subject memory cards to shocks and do not expose them to water.
- Do not touch or expose the terminals to dust or dirt.
- Check the direction before inserting the memory card. Forcing a memory card into the slot if it is not correctly oriented may damage the memory card or the camcorder.
- Do not attach any labels or stickers on the memory card.
- When you erase image files or initialize the memory card, only the file allocation table is altered and the data itself is not actually deleted. Take the necessary precautions when you dispose of the memory card, for example by physically damaging it to prevent the leakage of private data.

Lithium Button Battery

WARNING!

- The battery used in this device may present a fire or chemical burn hazard if mishandled.
 - Do not disassemble, modify, immerse in water, heat above 100 °C or incinerate the battery.
 - Lithium battery for the wireless controller: Replace with a CR2025 battery made by Panasonic, Hitachi Maxell, Sony, Sanyo, or with Duracell2025. Use of other batteries may present a risk of fire or explosion.
 - Do not insert the battery into the mouth. If swallowed, seek medical assistance immediately. The battery case may break and the battery fluids may cause internal damage.
 - Keep the battery out of the reach of children.
 - Do not recharge, short-circuit or insert the battery in the wrong direction.
 - The used battery should be returned to the supplier for safe disposal.
- Do not pick up the battery using tweezers or other metal tools as this will cause a short circuit.
 - Wipe the battery with a clean dry cloth to ensure proper contact.

Built-in Rechargeable Lithium Battery

The camcorder has a built-in rechargeable lithium battery to keep the date/time and other settings. The built-in lithium battery is recharged while you use the camcorder; however, it will



become totally discharged if you do not use the camcorder for about 3 months.

To recharge the built-in lithium battery:

Connect the compact power adapter to the camcorder and leave it connected for 24 hours with the **POWER** switch set to

OFF.

Maintenance/Others

Storage

If you do not intend to use the camcorder for a long time, store it in a place free of dust, in low humidity, and at temperatures not higher than 30 °C.

Cleaning

Camcorder Body

- Use a soft, dry cloth to clean the camcorder body. Never use chemically treated cloths or volatile solvents such as paint thinner.

Pick Up Lens

- Remove any dust or dirt particles using a non-aerosol type blower brush. Never touch the pick up lens directly to clean it.

Lens and Viewfinder

- If the lens surface is dirty, the autofocus may not work properly.
- Remove any dust or dirt particles using a non-aerosol type blower brush.
- Use a clean, soft lens-cleaning cloth to gently wipe the lens or viewfinder. Never use tissue paper.

LCD Screen

- Clean the LCD screen using a clean, soft lens-cleaning cloth.
- Condensation may form on the surface of the screen when the temperature changes suddenly. Wipe it with a soft dry cloth.

Condensation

Moving the camcorder rapidly between hot and cold temperatures may cause condensation (water droplets) to form on its internal surfaces. Stop using the camcorder if condensation is detected. Continued use may damage the camcorder.

Condensation may form in the following cases:

- When the camcorder is moved from an air-conditioned room to a warm, humid place
- When the camcorder is moved from a cold place to a warm room
- When the camcorder is left in a humid room
- When a cold room is heated rapidly

TO AVOID CONDENSATION

- Do not expose the camcorder to sudden or extreme changes in temperature.
- Unload the disc, place the camcorder in an airtight plastic bag and let it adjust to temperature changes slowly before removing it from the bag.

WHEN CONDENSATION IS DETECTED

- If a disc is loaded, remove the disc immediately and leave the disc cover open. Leaving the disc in the camcorder may damage it.
- A disc cannot be loaded when condensation is detected.

RESUMING USE

The precise time required for water droplets to evaporate will vary depending on the location and weather conditions. As a general rule, wait for 2 hours before resuming use of the camcorder.

Using the Camcorder Abroad

Power Sources

You can use the compact power adapter to operate the camcorder and to charge battery packs in any country with power supply between 100 and 240 V AC, 50/60 Hz. Consult a Canon Service Center for information on plug adapters for overseas use.

Playback on a TV Screen

You can only play back your recordings on TVs compatible with the PAL system. The PAL system is used in the following countries/areas:

Algeria, Australia, Austria, Bangladesh, Belgium, Brunei, China, Croatia, Czech Republic, Denmark, Finland, Germany, Hong Kong Special Administrative Region, Iceland, India, Indonesia, Iran, Iraq, Ireland, Israel, Italy, Jordan, Kenya, Kuwait, Liberia, Malaysia, Malta, Montenegro, Mozambique, the Netherlands, New Zealand, North Korea, Norway, Oman, Pakistan, Poland, Portugal, Qatar, Romania, Serbia, Sierra Leone, Singapore, Slovakia, Slovenia, South Africa, Spain, Sri Lanka, Swaziland, Sweden, Switzerland, Tanzania, Thailand, Turkey, Uganda, Ukraine, United Arab Emirates, United Kingdom, Yemen, Zambia.




Trademark Acknowledgements

- The SD logo is a trademark. The SDHC logo is a trademark.
- Microsoft, Windows and Windows Vista are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
-  is a trademark of DVD Format/Logo Licensing Corporation.
- Manufactured under license from Dolby Laboratories.
"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- Corel, the Corel logo, Ulead, the Ulead logo, Ulead DVD MovieFactory, InterVideo, the InterVideo logo, WinDVD are trademarks or registered trademarks of Corel Corporation and/or its subsidiaries.
- Other names and products not mentioned above may be trademarks or registered trademarks of their respective companies.
- ANY USE OF THIS PRODUCT OTHER THAN CONSUMER PERSONAL USE IN ANY MANNER THAT COMPLIES WITH THE MPEG-2 STANDARD FOR ENCODING VIDEO INFORMATION FOR PACKAGED MEDIA IS EXPRESSLY PROHIBITED WITHOUT A LICENSE UNDER APPLICABLE PATENTS IN THE MPEG-2 PATENT PORTFOLIO, WHICH LICENSE IS AVAILABLE FROM MPEG LA, L.L.C., 250 STEELE STREET, SUITE 300, DENVER, COLORADO 80206.



System Diagram (Availability differs from area to area)

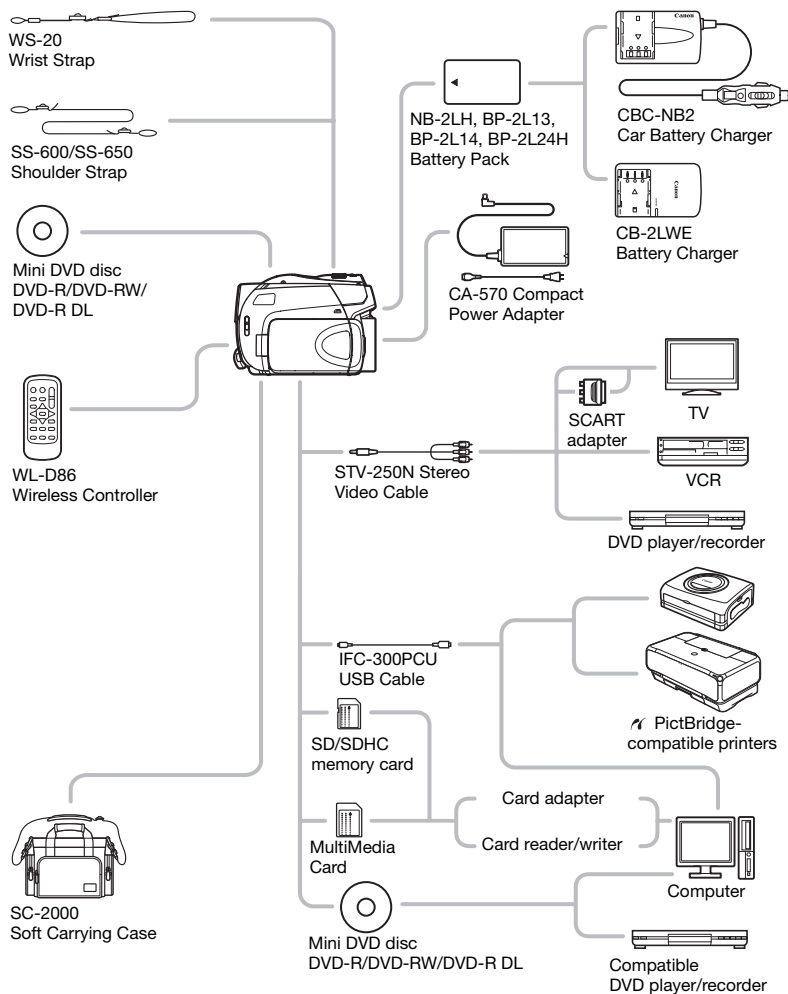

Optional Accessories


Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.

Battery Packs


When you need extra battery packs, select one of the following models: NB-2LH, BP-2L13, BP-2L14 or BP-2L24H*.

* Attaching the BP-2L24H battery pack will make using the viewfinder more difficult.

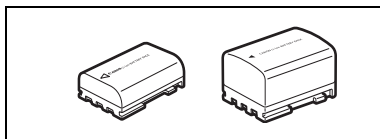

CB-2LWE Battery Charger

Use the battery charger to charge the battery packs.

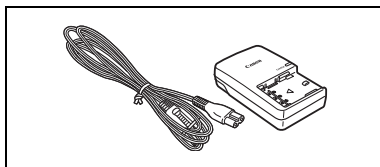

Charging Times

The charging times given in the following table are approximate and vary according to charging conditions and initial charge of the battery pack.

Battery pack →	NB-2LH	BP-2L13	BP-2L14	BP-2L24H
Charging conditions ↓				
Using the camcorder	135 min.	225 min.	240 min.	370 min.
Using the CB-2LWE Battery Charger	105 min.	175 min.	195 min.	330 min.

Recording and Playback Times


The recording and playback times given in the following table are approximate and vary according to recording mode and charging, recording or playback conditions. The effective usage time of the battery pack may decrease when recording in cold surroundings, when using the brighter screen settings, etc.

Battery pack	NB-2LH		BP-2L13		BP-2L14		BP-2L24H	
Screen used	Viewfinder	LCD	Viewfinder	LCD	Viewfinder	LCD	Viewfinder	LCD
Maximum Recording Time								
XP	105 min.	100 min.	185 min.	180 min.	220 min.	215 min.	375 min.	365 min.
SP	125 min.	125 min.	225 min.	215 min.	265 min.	260 min.	440 min.	430 min.
LP	135 min.	130 min.	235 min.	230 min.	285 min.	275 min.	470 min.	455 min.
Typical Recording Time*								
XP	60 min.	60 min.	110 min.	110 min.	135 min.	130 min.	220 min.	215 min.
SP	65 min.	65 min.	115 min.	115 min.	140 min.	135 min.	230 min.	225 min.
LP	70 min.	65 min.	120 min.	115 min.	145 min.	140 min.	240 min.	235 min.
Playback Time								
XP	—	140 min.	—	245 min.	—	290 min.	—	495 min.
SP	—	170 min.	—	300 min.	—	355 min.	—	590 min.
LP	—	185 min.	—	320 min.	—	385 min.	—	635 min.

* Approximate times for recording with repeated operations such as start/stop, zooming, and power on/off.


CBC-NB2 Car Battery Charger

Use the car battery charger to charge battery packs while you are on the go. The car battery cable plugs into your car's cigarette lighter and runs off a 12-24 V DC negative ground battery.

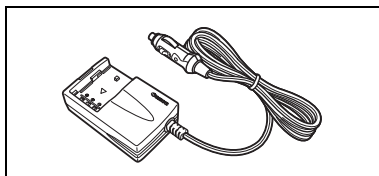


Shoulder Strap

You can attach a shoulder strap for more security and portability. Pass the ends through the strap mount and adjust the length of the strap.

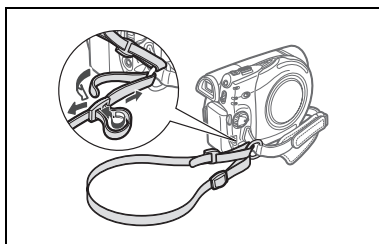

WS-20 Wrist Strap

Use this for extra additional protection for active shooting.

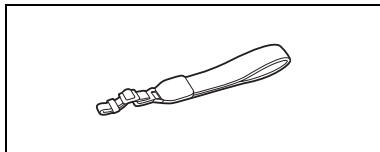

SC-2000 Soft Carrying Case

A handy camcorder bag with padded compartments and plenty of space for accessories.



This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon-brand accessories or products bearing the same mark.



Specifications

DC330

System

Disc Recording System	DVD-VIDEO (all disc types) DVD-VR (only with DVD-RW discs) Video Compression: MPEG-2 Audio Compression: Dolby Digital 2ch
Television System	CCIR standard (625 lines, 50 fields) PAL color signal
Compatible Media	8 cm mini DVD discs marked with the DVD-R, DVD-R DL or DVD-RW logo 
Maximum Recording Time	1.4 GB single sided 8 cm mini DVD disc: XP: 20 min., SP: 30 min., LP: 60 min. 2.6 GB single sided dual-layered 8 cm mini DVD disc: XP: 36 min., SP: 54 min., LP: 108 min. (All times given are approximate figures)
Image Sensor	1/6-inch CCD, approx. 1,070,000 pixels Effective pixels ¹ (all figures are approximate values) 16:9 Movies (advanced zoom) 480,000 (T) / 710,000 (W) pixels (other zoom types) 550,000 pixels 4:3 Movies (advanced zoom) 440,000 (T) / 690,000 (W) pixels (other zoom types) 690,000 pixels 16:9 Still images 600,000 pixels 4:3 Still images 800,000 pixels
LCD Screen	2.7 in., wide, TFT color, approx. 112,000 pixels
Viewfinder	0.35 in., wide, TFT color, approx. 114,000 pixels
Microphone	Stereo electret condenser microphone
Lens	f=2.6-96.2 mm, F/2.0-5.2, 37x power zoom 35 mm equivalent (all figures are approximate values) 16:9 Movies (advanced zoom) 41.7-1,877 mm (other zoom types) 47.1-1,743 mm 4:3 Movies (advanced zoom) 44.6-2,052 mm (other zoom types) 44.6-1,650 mm 16:9 Still images 45.2-1,672 mm 4:3 Still images 41.5-1,536 mm
Lens Configuration	10 elements in 8 groups (1 double-sided, aspheric element)
AF System	TTL autofocus, manual focus available
Minimum Focusing Distance	1 m; 1 cm on maximum wide angle
White Balance	Auto white balance, preset white balance (DAYLIGHT, TUNGSTEN) or custom white balance
Minimum Illumination	1.6 lx (NIGHT) recording program, Shutter speed at 1/6) 6.5 lx (EASY mode, Auto slow shutter [ON], Shutter speed at 1/25)



Recommended Illumination More than 100 lx

Image Stabilization Electronic

¹ When two values are given, the first indicates the value at full telephoto (T) and the second indicates the value at full wide-angle (W).

Memory Card

Recording Media	SDHC (SD High Capacity) memory card, SD memory card, MultiMedia Card (MMC)*
Size of Still Images	1,152 x 648 / 1,152 x 864 / 640 x 480 pixels
File Format	Design rule for Camera File system (DCF), Exif 2.2 compliant**, DPOF compliant
Image Compression Method	JPEG (compression: Super Fine, Fine, Normal)

* This camcorder has been tested with SD/SDHC cards up to 8 GB. Performance cannot be guaranteed for all memory cards.

** This camcorder supports Exif 2.2 (also called "Exif Print"). Exif Print is a standard for enhancing the communication between camcorders and printers. By connecting to an Exif Print-compliant printer, the camcorder's image data at the time of shooting is used and optimized, yielding extremely high quality prints.

Terminals

AV Terminal	Ø 3.5 mm minijack, output only Video: 1 Vp-p/75 ohms unbalanced Audio: -10 dBV (47 kohms load/3 kohms or less)
--------------------	---

USB Terminal	mini-B
---------------------	--------

Power/Others

Power supply (rated)	7.4 V DC (battery pack), 8.4 V DC (compact power adapter)
Power consumption (SP mode)	2.3 W (viewfinder), 2.4 W (LCD screen, normal brightness)
Operating temperature	0 – 40 °C
Dimensions (W x H x D)	66 x 90 x 126 mm excluding the grip belt
Weight (camcorder body only)	380 g

CA-570 Compact Power Adapter

Power supply	100 – 240 V AC, 50/60 Hz
Rated output / consumption	8.4 V DC, 1.5 A / 29 VA (100 V) – 39 VA (240 V)
Operating temperature	0 – 40 °C
Dimensions	52 x 29 x 90 mm
Weight	135 g

NB-2LH Battery Pack

Battery type	Rechargeable Lithium Ion Battery
Rated voltage	7.4 V DC
Operating temperature	0 – 40 °C
Battery capacity	720 mAh
Dimensions	33.3 x 16.2 x 45.2 mm
Weight	43 g

Weight and dimensions are approximate. Errors and omissions excepted. Subject to change without notice.



Index

A

Abroad, using the camcorder	88
AEB - Auto exposure bracketing	55
Aspect ratio	
of a connected TV (TV Type)	75
of movies (Widescreen)	72
Auto slow shutter	72
Autofocus (AF): AF frame	
(9-point AiAF/Center point)	56
AV terminal	64

B

Battery pack	
Charging	17
Remaining charge indicator	16
Beach (recording program)	37
Beep	75
Built-in backup battery	86

C

Compact power adapter	17
Condensation	88
Connections	
to a computer	66
to a TV/VCR	64
Continuous shooting	55

D

Data code	35
Date and time	23
Date format	76
Daylight saving time	24
Time zone	24
Digital effects	43
Direct print	59
Direct transfer	66
Disc title	46
Disc types	
(DVD-R, DVD-R DL, DVD-RW)	3
Discs that have been tested	4
Drive mode	55

E

EASY (recording program)	29
Erasing still images	54
Error messages	80
Exposure	41

F

File numbers	75
Finalizing the disc	47
Fireworks (recording program)	37
Focus priority	56
FUNC. menu	21, 70

G

Grip belt	19
---------------------	----

I

Image effects	42
Image jump	52
Image stabilizer	72
Index screen	
Movies	33
Still images	53
Initialization	
Disc	46
Memory card	58

J

Joystick	20
Joystick guide	20

L

Language	23
LCD screen	24
LCD video light	39
LP mode	30

M

Magnifying a still image	54
Maintenance	87
Manual exposure adjustment	41
Manual focus	40
Markers	74
Memory card	27, 86

Mode switch	28
-------------------	----

N

Night (recording program)	37
---------------------------------	----

O

Onscreen display selection	35
Original recordings	44

P

P (recording program)	38
Playback	
Movies	33
Still images	52
Playlist	44
Portrait (recording program)	37
Power save	75
Print order	62
Printing still images	59
Protecting still images	57

Q

Quick Start function	32
----------------------------	----

R

Recording	
Movies	28
Still images	50
Recording mode	30
Recording programs	38
Recording reminder	16
Remote sensor	18
RESET	77
Reviewing	
Movies (Record review)	32
Still images (Review)	72

S

Scene editing	44
Screen icons	14
SD/SDHC card	27
Self timer	39
Serial number	11
Setup menus	22, 72
Shutter speed	38

Slideshow	53
Snow (recording program)	37
SP mode	30
Special scene (recording programs) ...	36
Sports (recording program)	37
Spotlight (recording program)	37
Still image quality	51
Still image size	51
Sunset (recording program)	37

T

Telephoto	31
Transfer order	68
Transferring to a computer	
Movies	66
Still images	66
Tripod	19
Troubleshooting	77
Tv (recording program)	38

U

USB terminal	66
--------------------	----

V

VIDEO mode (disc specification)	3
Viewfinder	29
Volume	34
VR mode (disc specification)	3

W

White balance	41
Wide angle	31
Widescreen 16:9	72, 73
Wind screen	73
Wireless controller	18

X

XP mode	30
---------------	----

Z

Zoom	
Advanced zoom	30
Zoom speed	31
Zoom type	30



DIE-303

Canon

Canon Europa N.V.

P.O. Box 2262, 1180 EG Amstelveen, The Netherlands

Canon UK Ltd.

CCI Service Centre, Unit 130

Centennial Park, Borehamwood, Hertfordshire, WD6 3SE, England

Telephone 0870-241-2161

Canon Australia Pty. Ltd.

Info-Line: 131383

www.canon.com.au

Canon New Zealand Ltd.

Customer Care: (09) 489 0470

www.canon.co.nz

Canon Singapore Pte. Ltd

1 HarbourFront Avenue, #04-01 Keppel Bay Tower, Singapore 098632

Tel: (65) 6799 8888

Fax: (65) 6799 8882

Canon Hongkong Company Ltd

19/F., The Metropolis Tower, 10 Metropolis Drive, Hunghom,

Kowloon, Hong Kong

Canon Latin America, Inc.

Sales & Enquiries: 703 Waterford Way Suite 400 Miami, FL 33126 USA

The information on this manual is verified as of 1 January 2008.