

Back



TOP

## Introduction Scanning a **Document** Machine Set-Up Software Installation Troubleshooting 3 Basic Features Maintenance Machine Settings Specifications Advanced Features Network and Remote User Interface • System Monitor • Reports and Lists Scanning Features Incorporated website. specification, please contact Canon. **Table of Contents** Index

## **Manuals for the Machine**

**Quick Start Guide** 

**Basic Operation Guide** 

**Advanced Operation Guide** 

Scanner Driver Guide (This Document)

• To view the manuals in PDF format, Adobe Reader/Adobe Acrobat Reader is required. If Adobe Reader/ Adobe Acrobat Reader is not installed on your system, please download it from the Adobe Systems

• Considerable effort has been made to make sure that the manuals for the machine are free of inaccuracies and omissions. However, as we are constantly improving our products, if you need an exact

• The machine illustration on the cover may differ slightly from your machine.





#### Back

TOP

#### Introduction

Scanning a **Document** 

Troubleshooting

## **Legal Notices**

#### Trademarks

Canon, the Canon logo and iR are trademarks of Canon Inc. Microsoft and Windows are registered trademarks of Microsoft Corporation. All other product and brand names are registered trademarks, trademarks or service marks of their respective owners.

#### Copyright

Copyright © 2006 by Canon Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Canon Inc.

#### Disclaimer

The information in this document is subject to change without notice.


CANON INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, EITHER EXPRESS OR IMPLIED, EXCEPT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION, THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE OR AGAINST INFRINGEMENT OF ANY PATENT. CANON INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MATERIAL.

**Table of Contents** 



TOP

Next

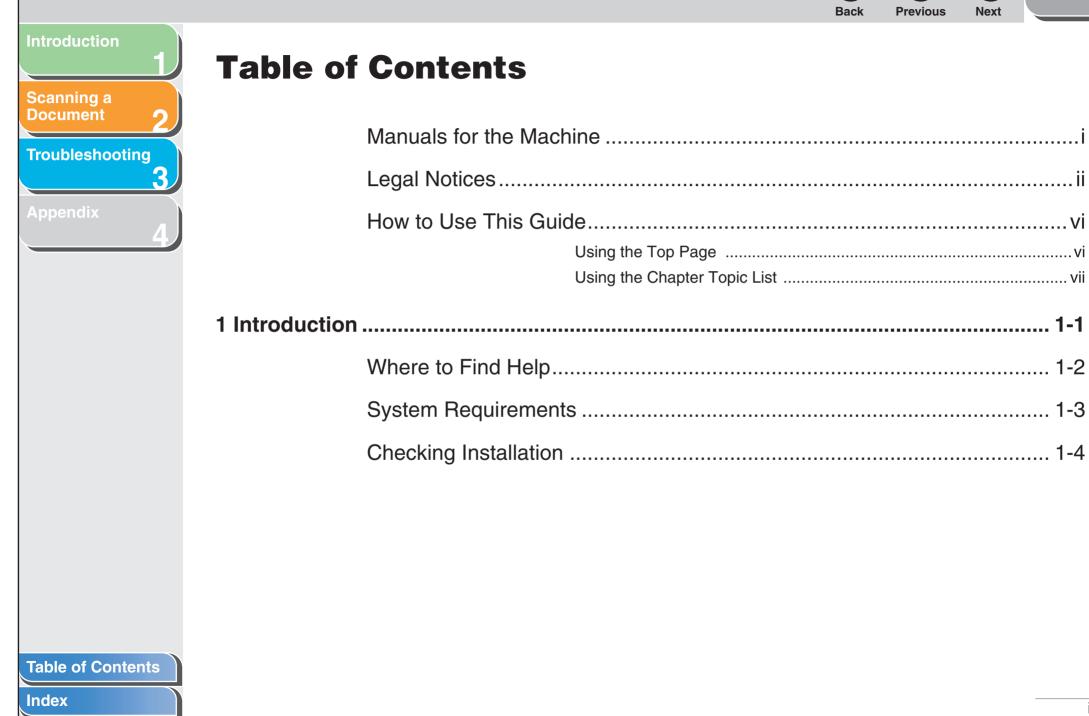

## Next Back Previous Introduction Scanning a Document Troubleshooting 3 Setting Up [Start] to Operate in a Different Way from [Save] ...... 2-4 Setting Up [Start] in the [Settings] Dialog Box......2-5 Setting Up [Start] in the [Scanners and Cameras] Folder ...... 2-5 Confirmation of the Scanned Image and Exif Settings Scanning an Image from an Application ...... 2-15

**Table of Contents** 


TOP


	_			Back	Previous	Next	ТОР
Introduction		Setting Preferences and S	Scanning with ScanGea				2-20
Scanning a Document 2		Swit Usin	ching between Simple Mode an Ig Simple Mode Ig Advanced Mode	ld Advar	nced Mode		2-20 2-20
Troubleshooting 3 Appendix		Spec Adva	cifying the Parameters of a Sca anced Mode Settings ermining Resolution	n			2-24 2-26
4			river (Windows XP Only nning from the [Scanner and Ca nning from an Application	amera W	izard] Dialo	og Box	2-42
	3 Troublesho	oting					3-1
		Scanning Problems					3-2
		Installing and Uninstalling	Problems				3-7
	4 Appendix						4-1
		Scanner Specifications					4-2
		Glossary					4-3
		Index					4-9
Table of Contents							

V





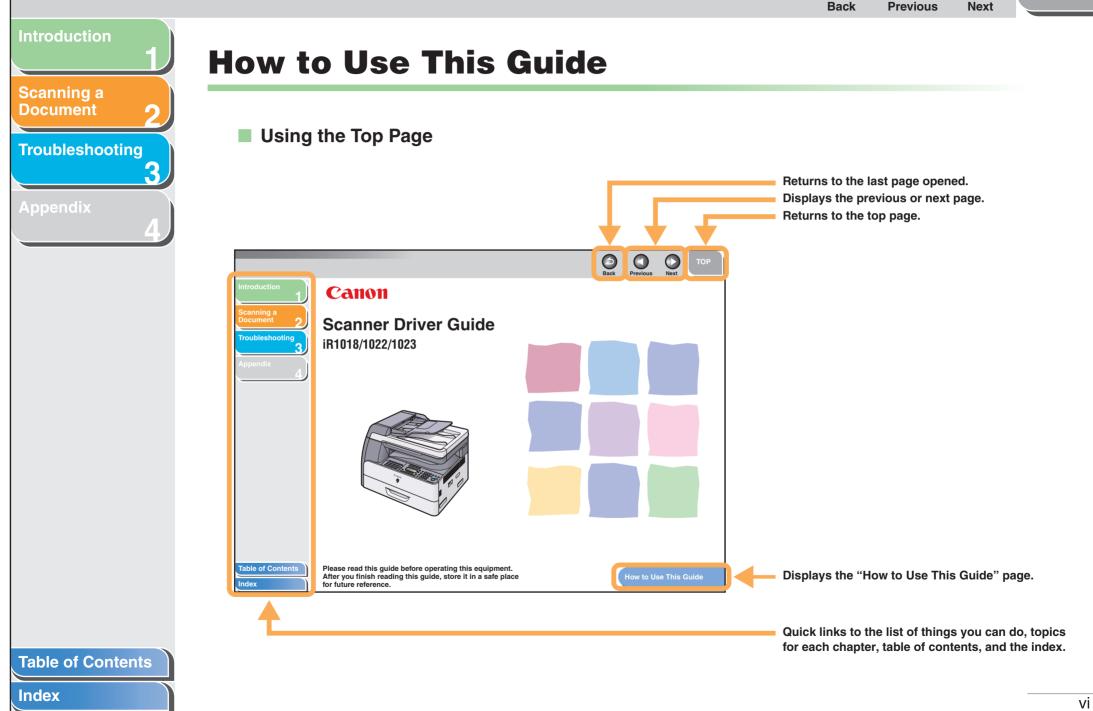

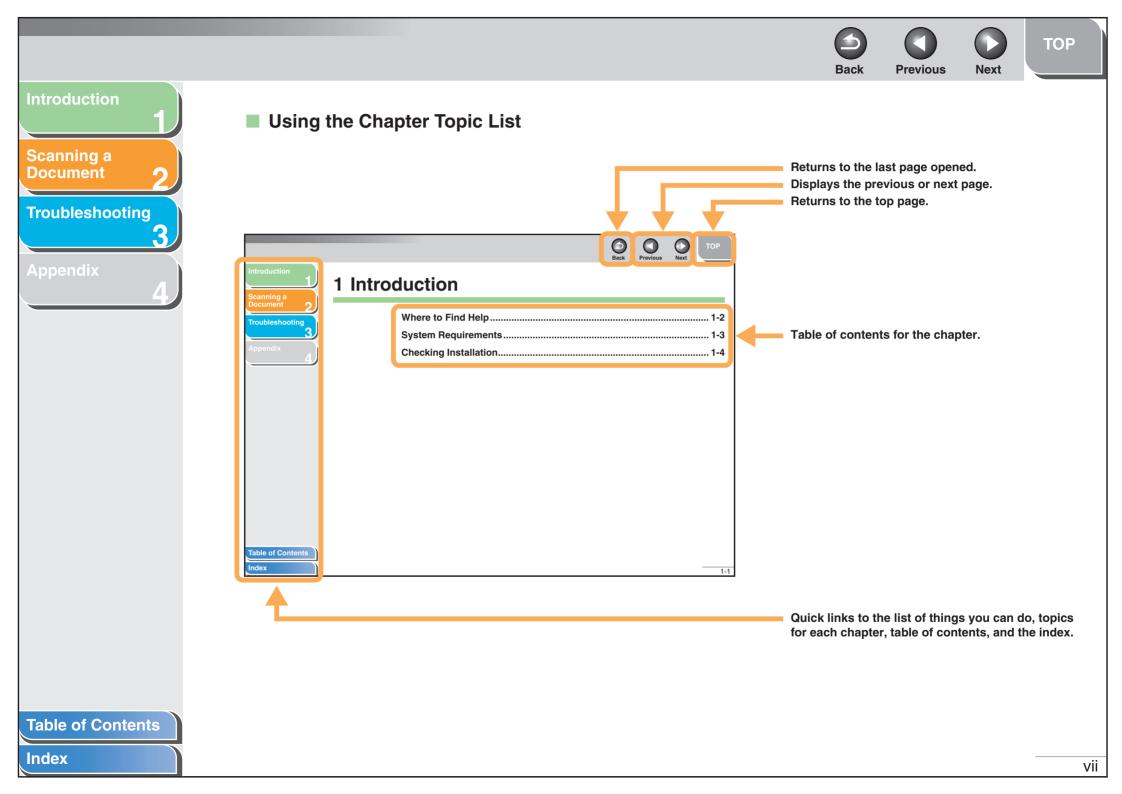



Scanning a Document

Troubleshooting

3

Appendix

The following symbols are used throughout the manuals for the machine and indicate the warnings, cautions and notes you should keep in mind when using the machine.

#### WARNING

Indicates a warning that may lead to death or serious injury if not observed.

#### 


Explains how to avoid actions that could injure you or damage your machine.

#### MOTE

Explains operating restrictions and how to avoid minor difficulties.

In addition, this guide uses a distinctive notation to identify buttons:

- Menu items you select and the buttons you press on the screen appear in square brackets: [Preferences].

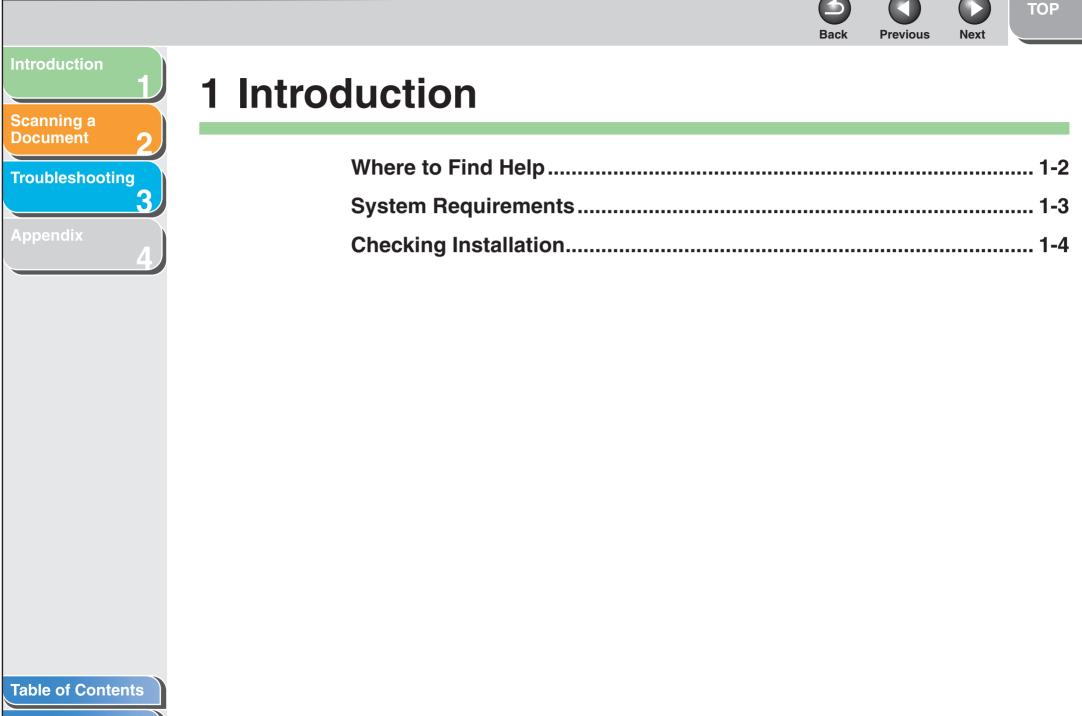



TOP

#### Introduction

Scanning a Document

Troubleshooting

3

Appendix

## **Where to Find Help**

When you encounter a problem during installation of the driver software or while operating your machine, consult the following:

#### In This Manual

See Chapter 3, "Troubleshooting."

#### In the Basic Operation Guide

See Chapter 12, "Troubleshooting."

### In the Advanced Operation Guide

See Chapter 8, "Troubleshooting."

### Readme.txt File

The hints, limitations, and restrictions you need to be aware of when using the ScanGear iR and iR Toolbox are included in the Readme.txt file provided with these programs.

#### **Table of Contents**





Next

## **System Requirements**

#### General

- IBM or IBM-compatible PC
- PC equipped with a USB port and the USB class driver installed

Microsoft Windows 98, 98SE CPU: Intel Pentium<sup>®</sup> 90 MHz processor or higher Memory: 128 MB or more

Microsoft Windows Me CPU: Intel Pentium<sup>®</sup> 150 MHz or higher Memory: 128 MB or more

#### Microsoft Windows 2000 Professional CPU: Intel Pentium<sup>®</sup> 133 MHz or higher (USB 1.1), Intel Pentium<sup>®</sup> II or higher (USB 2.0)

Memory: 128 MB or more

#### Microsoft Windows XP (32-bit version) CPU: Intel Pentium<sup>®</sup>/Celeron<sup>®</sup> 300 MHz or higher (USB 1.1), Intel Pentium<sup>®</sup> II or higher (USB 2.0) Memory: 128 MB or more

#### Ø NOTE

The USB 2.0 Hi Speed connection requires a PC equipped with a CPU faster than 300 MHz and more than 128 MB of RAM and with Windows XP SP1 installed, or with a CPU faster than 133 MHz and more than 128 MB of RAM and with Windows 2000 SP4 installed. If your PC meets all of these requirements and is preinstalled with USB 2.0 Host Controller, the USB 2.0 connection will be guaranteed.

#### **Table of Contents**

Introduction

Scanning a Document

**Troubleshooting** 





Next

Introduction

Scanning a Document

Troubleshooting

3

Appendix

## **Checking Installation**

Check if the driver is installed successfully.

1. Open the [Scanners and Cameras] folder (Windows 98/2000: the [Scanners and Cameras Properties] dialog box).


Click [start] on the Windows task bar  $\rightarrow$  select [Control Panel]  $\rightarrow$  [Scanners and Cameras] (Windows 98/Me/2000: [Start]  $\rightarrow$  [Settings]  $\rightarrow$  [Control Panel]  $\rightarrow$  double-click [Scanners and Cameras]). Make sure the corresponding scanner driver icon is displayed.

2. If the [Canon iR Toolbox 4.9] icon is displayed on the Windows desktop, installation of the iR Toolbox 4.9 has been successful.

**Table of Contents** 






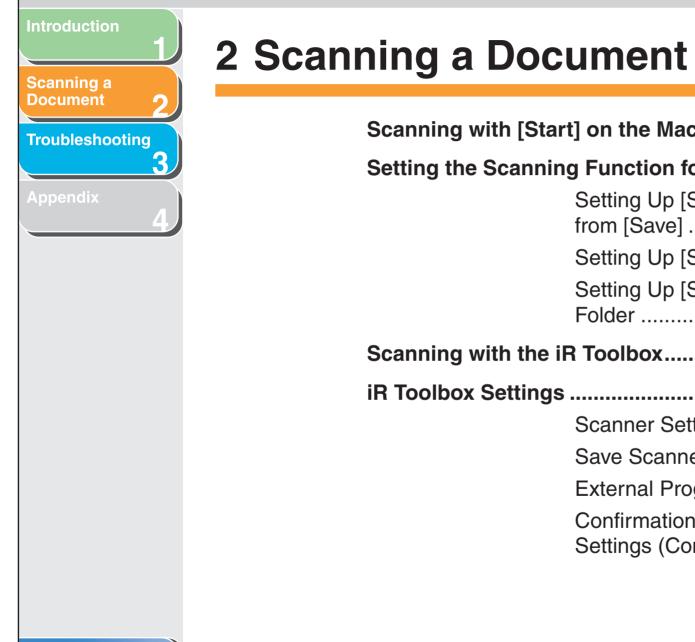

canning with [Start] on the Machine2-3					
etting the Scannir	g Function for [Start]	2-4			
	Setting Up [Start] to Operate in a Different Way from [Save]	2-4			
	Setting Up [Start] in the [Settings] Dialog Box	2-5			
	Setting Up [Start] in the [Scanners and Cameras Folder	-			
canning with the i	R Toolbox	2-7			
R Toolbox Settings	5	2-9			
	Scanner Settings	2-9			
	Save Scanned Image to	. 2-11			
	External Program (Mail Program)	. 2-13			



ΤΟΡ

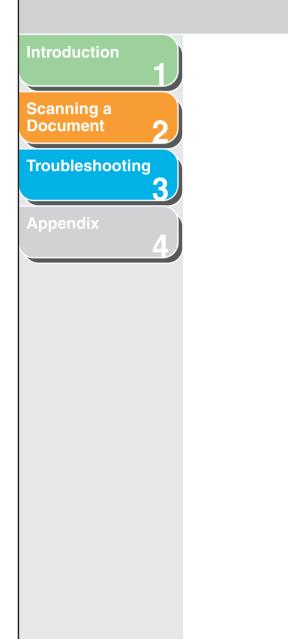

Scanning an Image from an Application 2-15					
Creating One PDF File from Two or More Pages					
Scanning a Large Do	ocument	2-18			
Setting Preferences	and Scanning with ScanGear iR	2-20			
	Switching between Simple Mode and Advanced				
	Mode	2-20			
	Using Simple Mode	2-20			
	Using Advanced Mode	2-23			
	Specifying the Parameters of a Scan	2-24			
	Advanced Mode Settings	2-26			
	Determining Resolution	2-41			
Scanning with the W	/IA Driver (Windows XP Only)	2-42			
	Scanning from the [Scanner and Camera Wizard] Dialog Box				
	Scanning from an Application	2-45			

Table of Contents



Scanning a **Document** 

#### **Troubleshooting**

3



## **Scanning with [Start] on the Machine**

You can scan documents and transmit the scanned data to your computer using the operation panel of the machine.

#### **NOTE**

Your machine must be connected via USB and the USB scanner driver must be loaded to scan. This machine does not support network scanning.

- Set documents. 1.
- 2. Press [SCAN] on the machine.
- **3.** Press [Start] on the machine.

If you are asked to select a program to launch, select "iR Toolbox Ver4.9." The scanned document will be processed according to your settings.

When scanning is completed, a folder with the scanning date will be created in the [My Pictures] folder in the [My Documents] folder, and your document will be saved in this folder.

**Table of Contents** 



Scanning a Document

#### Troubleshooting

Appendix

## **Setting the Scanning Function for [Start]**

When you scan for the first time using [Start] on the machine, scanning will occur in the same way as when you click [Save] in the iR Toolbox. You can change the scanning function set for [Start] on the machine.

### Setting Up [Start] to Operate in a Different Way from [Save]

1. On the Windows desktop, double-click the [Canon iR Toolbox 4.9] icon to open the iR Toolbox.

You can also open the iR Toolbox by clicking [start] on the Windows task bar  $\rightarrow$  [(All) Programs]  $\rightarrow$  [Canon]  $\rightarrow$  [iR Toolbox 4.9]  $\rightarrow$  [Toolbox 4.9].





The  $\diamondsuit$  mark will be displayed above the button you select.





## Introduction 1 Scanning a Document 2 Troubleshooting 3 Appendix 4

## Setting Up [Start] in the [Settings] Dialog Box

In the iR Toolbox, click [Settings] to open the [Settings] dialog box. From the drop-down list, select the scanning function you want to link [Start] to, then click [OK].

	[Settings] Configures scanner settings.	
Selec	t Scanner Canon iR1018/1022/1023	~
utton Settings	on of the Toolbox to be linked when the Sta	t key on the device is presse
Selects a butt		citoy off the device is presse

### Setting Up [Start] in the [Scanners and Cameras] Folder

#### 1. Open the [Scanners and Cameras] folder (Windows 98/2000: the [Scanners and Cameras Properties] dialog box).

Click [start] on the Windows task bar  $\rightarrow$  select [Control Panel]  $\rightarrow$  [Scanners and Cameras] (Windows 98/Me/2000: [Start]  $\rightarrow$  [Settings]  $\rightarrow$  [Control Panel]  $\rightarrow$  double-click [Scanners and Cameras]).

**2.** Click the corresponding scanner driver icon.

**3.** Select [Properties] from the [File] menu. (Windows 98/2000: Click [Properties].)

		18/1022/1023			
General	Events	Color Management			
>		31018/1022/1023 stured by Canon			
Scar	iner Status	ñ			
Statu	is:	Device Ready	On Port:	\\.\Usbscan0	
Optic	al resoluti	on: 600x600 DPI			
		<u>I</u> est Sc	anner		

Previous Next

TOP

## Introduction 1 Scanning a Document 2 Troubleshooting 3 Appendix 4

### 4. Specify an action for [Start].

#### On Windows XP:

Select the [Events] tab  $\rightarrow$  select the option corresponding to your machine from [Select an event]  $\rightarrow$  select the operation for [Start] in [Actions]  $\rightarrow$  click [OK].

	Events Color Management
	Choose an event below, then select the action to take when th event occurs.
Select	an <u>e</u> vent: 🐉 Canon iB1018/1022/1023 Start Key 💙
Actio	vns
0	itart this program: 🛛 💽 iR Toolbox Ver4.9
• <u>E</u>	frompt for which program to run
01	ake no action
Ös	ave all pictures to this folder:
	C:\Documents and Settings\My Documents\My Pi
	Create a subfolder using today's date
	Delete pictures from camera after saving them

#### On Windows 98/Me/2000:

Back

Select the [Events] tab  $\rightarrow$  select the option corresponding to your machine from [Scanner events]  $\rightarrow$  select the operation for [Start] in [Send to this application]  $\rightarrow$  click [OK].

#### Ø NOTE

If the settings you specified in the scanner property dialog box do not work immediately, disconnect and reconnect the USB cable, or restart your computer.

#### Table of Contents



TOP

#### Introduction

Scanning a Document

#### Troubleshooting

3

Appendix

## **Scanning with the iR Toolbox**

You can scan a document using the buttons on the iR Toolbox.

- 1. Set documents.
- 2. On the Windows desktop, double-click the [Canon iR Toolbox 4.9] icon to open the iR Toolbox.

You can also open the iR Toolbox by clicking [start] on the Windows task bar  $\rightarrow$  [(All) Programs]  $\rightarrow$  [Canon]  $\rightarrow$  [iR Toolbox 4.9]  $\rightarrow$  [Toolbox 4.9].



### **3.** Click one of the scanning buttons.

[Mail]: The document will be scanned and attached to an e-mail message in your e-mail application.

[OCR]: The text will be scanned and read by the OCR software.

[Save]: The document will be scanned and saved.

[PDF]: The text will be scanned and saved as a PDF file.

[Scan-1], [Scan-2]: The text will be scanned and appear in the registered application. You can change the button name by directly entering a new name (up to 8 characters long) over the button name.

A dialog box appears for each of the buttons.

ail		
	[Mail] Attaches the scanned image to an e-mai message.	1
Scanner Settings Select Source:	Auto Mode	
Input Method:	1-sided	
Paper Size:	Letter	
	Orientation	
<u>S</u> can Mode:	Color	
Upper Limit of Attached File:	150 KB	
Image <u>Q</u> uality:	75 dpi 🗸	
Display the Scanner Drive	ı	
Save Scanned Im	age to	
File Name:	Mail	
Save as <u>Type</u> :	JPEG/Exif	PDF Settings
Save Scanned Image to:	C:\Documents and Settings\My Documen	Browse
Save Pictures to a Subfol	der with Current Date	
Mail Program		
None (Attach Manually)		S <u>e</u> t
	ed Image and Exif Settings Reset Apply Cancel	Start

Example: [Mail] dialog box

Back Previous Next

## Introduction 1 Scanning a Document 2 Troubleshooting 3 Appendix 4


### 4. Specify the required settings.

For details, see "iR Toolbox Settings," on p. 2-9.

If you want to keep the same settings for future scans, click [Apply] before clicking [Start].

### 5. Click [Start].

If you select [Display the Scanner Driver] in step 4, the [ScanGear iR] dialog box will appear.

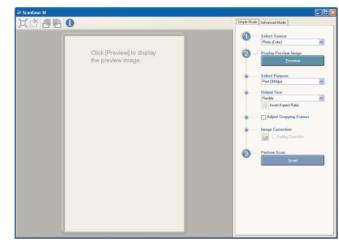

### **6.** Specify the required settings.

For details, see "Setting Preferences and Scanning with ScanGear iR," on p. 2-20.

### 7. Click [Scan].

When scanning is completed, a folder with the scanning date will be created in the [My Pictures] folder in the [My Documents] folder, and your document will be saved in this folder.

If you have applications registered to the [Mail], [OCR], [PDF], [Scan-1], or [Scan-2] buttons, the scanned image will be displayed in the application or attached to an e-mail message after scanning. For details, see "External Program (Mail Program)," on p. 2-13.





## Introduction Scanning a Document Troubleshooting

3

Appendix

## **iR Toolbox Settings**

ail		
<b>⊘</b> →@	[Mail] Attaches the scanned image to an e-mai message.	ļ
Scanner Settings		
Select S <u>o</u> urce:	Auto Mode 🗸 🗸 🗸	
Inp <u>u</u> t Method:	1-sided 💌	
Paper Size:	Letter	÷ 22
	Orientation	-
<u>S</u> can Mode:	Color	
Upper Limit of Attached File:	150 KB	
Image <u>Q</u> uality:	75 dpi 🔽	
Display the Scanner Drive	r	
Save Scanned Ima	age to	
<u>File Name:</u>	Mail	
Save as <u>T</u> ype:	JPEG/Exif	PDF Settings
Save Scanned Image to:	C:\Documents and Settings\My Documen	Browse
Save Pictures to a Subfold	der with Current Date	
Mail Program		
None (Attach Manually)		S <u>e</u> t
	ed Image and Exif Settings Reset <u>Apply</u> <u>C</u> ancel	Start

Example: [Mail] dialog box

### Scanner Settings

You can specify the scanning mode, resolution, document size, and file size of the scanned image.

[Select Source] Selects where the document is placed ([Platen Glass], [ADF], or [Auto Mode]).

#### MOTE

When [Auto Mode] is selected, the document in the ADF is automatically scanned. If there is no document in the ADF, the document on the platen glass will be scanned.

[Input Method]

Specifies if the document to be scanned is 1-sided or 2-sided. You cannot select this item when [Platen Glass] is selected in [Select Source].

MOTE

This setting is not available for models without ADF.


**Previous** Next Back Introduction [Paper Size] Selects the scan mode. The scan modes Selects the size of the document to be [Scan Mode] scanned. Selecting [Custom] opens the you can select differ depending on the iR Scanning a [Paper Size Settings] dialog box which Toolbox button you press. **Document** enables you to set the custom paper size. [Black and White]: When scanning using the [Save], [PDF], Scans document as a black and white **Troubleshooting** [Scan-1] or [Scan-2] buttons and [Platen image. Glass] is selected in [Select Source], you 3 [Black and White (OCR)]: can also scan large size documents by Scans document as a black and white image selecting [Stitch-assist (11"x17")], [Stitchfor OCR software. assist (A3)] or [Stitch-assist (Platen x 2)] (see "Scanning a Large Document," on [Gravscale]: p. 2-18). Scans document as a grayscale image (similar to a monochrome picture). [Orientation] Opens the [Orientation] dialog box. This dialog box enables you to specify the [Color]: orientation of the document. When [2-sided] Scans document as a color image. is selected in [Input Method], select also the [Color (Magazine)]: binding location of the document. Scans document as a color image with the This button is disabled when [Platen Glass] Descreen function, which enables you to is selected in [Select Source]. reduce the moire when scanning printed (Original Orientation) photographs and pictures. Shows the direction of scanning paper. The icon display varies depending on the settings for [Select Source], [Paper Size], and [Orientation]. This setting is not available for models without ADF. **Table of Contents** 

Index

TOP

Back Previous

ΤΟΡ

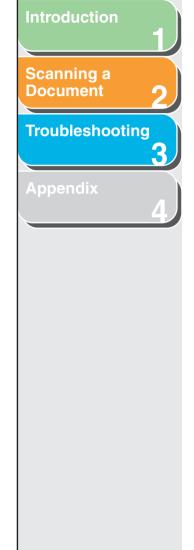

#### [Upper Limit of Attached File]

Selects an approximate upper size limit (after compression) for the image you will send. For an ordinary mail message, [150 KB] is recommended. You can specify this item when scanning using the [Mail] button and [JPEG/Exif] is selected in [Save as Type].

[Image Quality] Selects the scan quality (resolution). When scanning using the [Mail] button, the resolution you can select depends on the setting in [Upper Limit of Attached File].

[Display the Scanner Driver]

If you select this check box, all items in the [Scanner Settings] become invalid, and when [Start] is clicked the [ScanGear iR] dialog box appears and enables you to make advanced settings for scanning. This check box is not available when scanning using the [OCR] button.

### Save Scanned Image to

You can specify the file name, file format, and location to save the scanned image. If you select PDF as a file format, you can also specify the detailed settings for the PDF file.

[File Name] Enter a file name for the scanned image. If you save another file with the same name, four digits starting from 0001 will be attached after the file name.

## [Save as Type] Specifies the file type to save the scanned image.

#### [BMP]: Bitmap form

Bitmap format.

[JPEG/Exif]: JPEG/Exif format. This option is available when [Grayscale], [Color] or [Color (Magazine)] is selected in [Scan Mode].

Next

[TIFF]: TIFF format.

[PDF]: PDF format.

#### [PDF (Multiple Pages)]:

Creates one PDF file from two or more scanned pages (see "Creating One PDF File from Two or More Pages," on p. 2-16).

#### [PDF (Add Page)]:

Adds the scanned image to the last page of an existing PDF file that was created with the iR Toolbox.

#### **Table of Contents**



MOTE

 The type of file which can be saved with each button is shown below.

	BMP	JPEG/ Exif	TIFF	PDF	PDF (Multiple Pages)	PDF (Add Page)
[Mail]	_	٠	_	•	٠	•
[OCR]	•	٠	•	_	-	_
[Save]	•	•	•	•	•	•
[PDF]	_	_	_	•	•	•
[Scan-1], [Scan-2]	•	•	•	_	-	_

 When [PDF], [PDF (Multiple Pages)], or [PDF (Add Page)] is selected and if an error message appears indicating that the image size is too large, reduce the data size of the scanned image. For details, see "Output Settings," on p. 2-28. [PDF Settings] Opens the [PDF Settings] dialog box which enables you to make advanced settings of the PDF file (see "Creating One PDF File from Two or More Pages," on p. 2-16).

**Previous** 

Next

Back

[Save Scanned Image to]

Shows the location to save the scanned images. To change the location, click [Browse]  $\rightarrow$  select a folder  $\rightarrow$  click [OK].

TOP

[Add Scanned Image to]

This item appears instead of [Save Scanned Image to] when [PDF (Add Page)] is selected in [Save as Type]. You can select the PDF file to which you want to add the scanned image.

[Save Pictures to a Subfolder with Current Date]

Select this check box to create a folder with current date (e.g. 2006-12-31) in the specified location and save the scanned images in this folder.

Back Previous Next

# Introduction



Troub		1	
<b>HOUD</b>			

**Appendix** 

## External Program (Mail Program)

When scanning using the [OCR], [PDF], [Scan-1] or [Scan-2] buttons, you can specify an application to be used to display the scanned image. Click [Set]  $\rightarrow$  select the application to use  $\rightarrow$  click [Open]. You can also specify an application by dragging and dropping the application icon onto the dialog box.

When scanning using the [Mail] button, you can specify an e-mail software to which you want to attach the scanned image. The iR Toolbox is compatible with e-mail software such as Outlook Express, Microsoft Outlook, EUDORA and Netscape Messenger. Click [Set]  $\rightarrow$  select the application to use  $\rightarrow$  click [OK].

If [None (Attach Manually)] is displayed, you have to attach the image file manually.

### Confirmation of the Scanned Image and Exif Settings (Confirm the Scanned Image)

You can preview the scanned images as thumbnail images, and specify the file type and location to save them.

#### 

- You cannot use this function when scanning with the [OCR] button.
- For the [PDF] button, you can only confirm the scanned image and specify the location to save the image.

Select [Confirmation of the Scanned Image and Exif Settings] (for the [PDF] button, [Confirm the Scanned Image])  $\rightarrow$  click [Start]. When the scanning is complete, the thumbnail of the scanned image is displayed.

Confirm the thumbnail image  $\rightarrow$  specify the file type and location  $\rightarrow$  press [Save] or [Forward].

- [Save as Type] Specifies the file type to save the scanned image. The available file types are the same as those listed in "Save Scanned Image to," on p. 2-11.
   [Exif Settings] Opens the [Exif Settings] dialog box which
  - Settings] Opens the [Exif Settings] dialog box which enables you to set the Exif information when [JPEG/EXIF] is selected in [Save as Type] (see "Exif Settings," on p. 2-14).

				Back Previous Next	
Introduction					
Scanning a Document 2	[PDF Settings]	Opens the [PDF Settings] dialog box which enables you to make advanced settings of the PDF file (see "Creating One PDF File from Two or More Pages," on p. 2-16). This button appears when [PDF], [PDF (Multiple	[Forward]	This button appears instead of [Save] when an application is specified in the [Mail Program] or the [External Program] setting. You can forward the scanned images to the application.	
Troubleshooting 3		Pages)] or [PDF (Add Page)] is selected in [Save as Type].	[Cancel]	Cancels the operation and returns to the previous window. Deletes all the images	
nnondix	[Save Scanned I	mage to]		scanned in the operation.	
Appendix 4		Specifies the location to save the scanned image.	Exif Settin	igs	
	[Add Scanned Im	nage to]			
		This item appears instead of [Save Scanned Image to] when [PDF (Add Page)] is selected in [Save as Type]. You can select the PDF file to which you want to add the scanned image.	description of scanned, etc.,	n extra information in the EXIF format, such as the the image, the date when the image was to the JPEG files. Select a scanned image from list to view and add information for the image.	
	[Save Pictures to	a Subfolder with Current Date]		-	
	Select this check box to create a folder with	Select this check box to create a folder with		Displays the information automatically acquired by scanning.	
		current date in the specified location and save the scanned images in this folder.	[Advanced Information]		
		This check box is not available when [PDF		Displays the extra information you enter.	
		(Add Page)] is selected in [Save as Type].	[Apply the Sar	me Setting of Input Items Automatically]	
	[Save]	Press to save the scanned images in the specified location.		Select this check box to use the same values you have specified in the previous scanning operation.	

Table of Contents

Index

 $\bigcirc \bigcirc \bigcirc \bigcirc$ 

ΤΟΡ



Scanning a Document

#### Troubleshooting

3

Appendix

## **Scanning an Image from an Application**

You can scan an image from a TWAIN- or WIA- (Windows XP only) compliant application and use the image in that application. The following is an example of the procedure.

- 1. Set documents.
- **2.** Open the application you want to use.
- **3.** Select the command to scan.
- 4. Select the scanner driver to be used.

With Windows XP, you can use the ScanGear iR or the WIA driver as the scanner driver.

### 5. Specify the scanner settings $\rightarrow$ click [Scan].

For details, see "Setting Preferences and Scanning with ScanGear iR," on p. 2-20, or "Scanning with the WIA Driver (Windows XP Only)," on p. 2-42.

Table of Contents



Scanning a Document

#### Troubleshooting

3

Appendix

## **Creating One PDF File from Two or More Pages**

You can scan two or more pages and make them into one PDF file.

- 1. Set documents.
- 2. Double-click the [Canon iR Toolbox 4.9] icon on the Windows desktop to open the iR Toolbox.

You can also open the iR Toolbox by clicking [start] on the Windows task bar  $\rightarrow$  [(All) Programs]  $\rightarrow$  [Canon]  $\rightarrow$  [iR Toolbox 4.9]  $\rightarrow$  [Toolbox 4.9].

- 3. Click [PDF].
- **4.** Select [PDF (Multiple Pages)] in [Save as Type].

5. Specify other required settings  $\rightarrow$  click [PDF Settings].

The [PDF Settings] dialog box appears.

PDF Settings	
✓ Create Searchable PDF	
Text <u>L</u> anguage:	English 🔽
_ <u>P</u> DF Compression	
<ul> <li>Standard</li> </ul>	
🔵 High	
	<u>D</u> K <u>C</u> ancel

### 6. Specify the required settings $\rightarrow$ click [OK].

[Create Searchable PDF]: Converts the characters in the document to text data and makes the PDF document searchable with keywords.

[Text Language]: Select the language of the text to be scanned. The characters may be recognized more accurately if you select [English] from this drop-down list and set [Image Quality] to [300 dpi] or higher in [Scanner Settings] (see p. 2-11).

[PDF Compression]: Select [High] for color images such as photos or illustrations to be further compressed, reducing the file size.

Table of Contents

Back Previous

Next

4

ТОР

Introduction 1 Scanning a Document 2 Troubleshooting 3 Appendix 4

## 7. Click [Start].

When you set the document on the platen glass, the following dialog box appears as each page is scanned.

iR Toolbox	
Scanning of page 1 is finished. To scan another page, place the or Click [Finish] to quit.	iginal and click [Next].
	<u>N</u> ext <u>F</u> inish

To continue to scan, place the next page and click [Next]. When scanning is completed, click [Finish].

### Table of Contents



Scanning a Document

#### Troubleshooting

3

Appendix

## **Scanning a Large Document**

You can scan a document larger than the platen glass by combining pieces scanned separately.

#### 🥟 NOTE

This feature is available only when scanning using the [Save], [PDF], [Scan-1] or [Scan-2] buttons, and [Platen Grass] is selected in [Select Source].


- **1.** Set a document on the platen glass.
- 2. Double-click the [Canon iR Toolbox 4.9] icon on the Windows desktop to open the iR Toolbox.

You can also open the iR Toolbox by clicking [start] on the Windows task bar  $\rightarrow$  [(All) Programs]  $\rightarrow$  [Canon]  $\rightarrow$  [iR Toolbox 4.9]  $\rightarrow$  [Toolbox 4.9].

- **3.** Click [Save], [PDF], [Scan-1] or [Scan-2].
- 4. Select [Stitch-assist (11" x 17")], [Stitchassist (A3)] or [Stitch-assist (Platen x 2)] in [Paper Size].

5. Specify other required settings  $\rightarrow$  click [Start].

The [Stitch-assist] wizard dialog box appears.

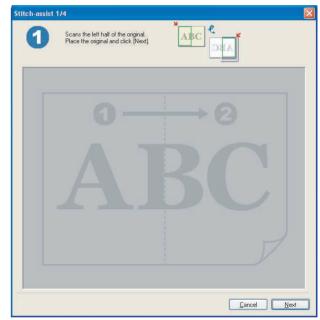

Back Previous



Next

## Introduction 1 Scanning a 2 Document 2 Troubleshooting 3 Appendix 4

- 6. Follow the on-screen instructions to scan the left side and the right side of the document separately.
- 7. Adjust the position of the right side of the scanned image for synthesis  $\rightarrow$  click [Next].

To make adjustment, click the image and move it using the arrow keys on the keyboard. You can also move the image by dragging it.

### **8.** Specify the scan area with a cropping frame.

Any blank areas inside the cropping frame will be saved as white background.

9. Click [OK], [Save] or [Forward].



Scanning a Document

Troubleshooting

3

Appendix

# Setting Preferences and Scanning with ScanGear iR

The ScanGear iR enables you to preview the image to be scanned and make detailed adjustments for the image. To use the ScanGear iR, select [Display the Scanner Driver] in the iR Toolbox, or scan from an application.

MOTE

You cannot preview the image when using the ADF.

### Switching between Simple Mode and Advanced Mode


The ScanGear iR has two modes: [Simple Mode] and [Advanced Mode]. With [Advanced Mode] you can perform detailed settings such as resolution and contrast.

To switch between two modes, click the corresponding tab.

#### Ø NOTE

2-sided scanning is available with [Advanced Mode] only.

### Using Simple Mode

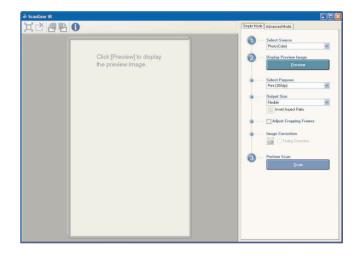

1. Set documents.

#### Table of Contents



## Introduction 1 Scanning a Document 2 Troubleshooting 3

### **2.** Select the document type in [Select Source].

[Photo (Color)]: To scan color photos.

[Magazine (Color)]: To scan color magazines with the Descreen function.

[Newspaper (B&W)]: To scan text and line drawings.

[Document (Grayscale)]: To scan color images or text in monochrome. Appropriate for scanning high-resolution monochrome images.

[Document (Color) ADF]: To scan color documents on the ADF.

[Document (Grayscale) ADF]: To scan Grayscale documents on the ADF.

If you select [Document (Color) ADF] or [Document (Grayscale) ADF], skip to step 4.

#### Ø NOTE

- On how to turn off the automatic color correction for the document type other than [Newspaper (B&W)], see "[Color Settings] Tab," on p. 2-39.
- [Document (Color) ADF] and [Document (Grayscale) ADF] are not available for models without ADF.

### 3. Click [Preview].

A preview of the scanned image appears in the preview window.

## 4. Select the use for the scanned image in [Select Purpose].

You can select from [Print (300 dpi)], [Image display (150 dpi)], or [OCR (300 dpi)], depending on the document type you selected in step 2. For details, see "Determining Resolution," on p. 2-41.

## 5. Select the output size of the scanned image in [Output Size].

The options you can select vary depending on what you selected in step 4.

Click 👜 to switch the orientation of the output size (landscape or portrait).

## 6. Adjust the cropping frame and select the [Fading Correction] check box as needed.

To adjust the cropping frame, click  $\bowtie$  (Auto Crop) or drag the corner or edge of the frame. For details, see "Specifying the Parameters of a Scan," on p. 2-24.

#### Ø NOTE

- The [Fading Correction] check box can be selected only when scanning color documents.
- When the preview image is not displayed, the [Fading Correction] check box is disabled.
- 7. Click [Scan].

## Introduction 1 Scanning a Document 2 Troubleshooting 3

the Output Size] dia and delete the custo	log box. This dialog box enables you to add
Add/Delete the Output Size	2 Output Size Name :
	New Setting
	Width : 6.00
	Height : 4.00
	Unit : Inches
Delete	Add
Save Cancel	
Purpose] Selects the use for the scanned image from	
[Print] or [Image Display]. This setting is	
	available with [Advanced Mode] only.
[Output Size Name]	]
	• ··· ·· · · · · · · · · · · · · · · ·

Selecting [Add/Delete] for [Output Size] opens the [Add/Delete

Add/Delete the Output Size

Specifies the output size name you want to register.

- [Width] Specifies the width of the output size.
- [Height] Specifies the height of the output size.
- [Unit] Selects the unit of measurement for the output size.

# [Add]Adds the specified output size to the [Output<br/>Size List].[Delete]Deletes the selected output size from the<br/>[Output Size List].

**Previous** 

Next

Back

### Simple Mode Toolbar



(Auto Crop) Crops the image automatically. For details, see "Specifying the Parameters of a Scan," on p. 2-24.

(Remove Cropping Frame)

Removes the selected cropping frames.

- (Left Rotate) Rotates the image 90 degrees left.
- Rotates the image 90 degrees right.
- (Information) Lists the scanning information.


#### **Table of Contents**

TOP

Previous Next

## Introduction Scanning a Document 2 Troubleshooting 3 Appendix 4

### Using Advanced Mode

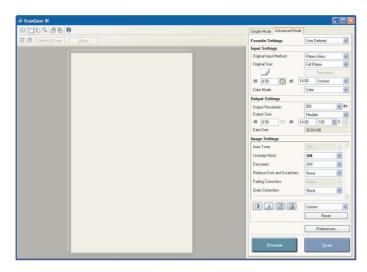

- 1. Set documents.
- 2. Select settings for [Favorite Settings], [Input Settings], [Output Settings] and [Image Settings], and adjust the color settings.

For details on the settings, see "Advanced Mode Settings," on p. 2-26.

If you select [ADF (1-sided)] or [ADF (2-sided)] in [Original Input Method], skip to step 4.

#### Ø NOTE

[ADF (1-sided)] and [ADF (2-sided)] are not available for models without ADF.

## 3. Click [Preview].

#### Ø NOTE

 Selecting the range in the preview window and clicking [Zoom] reloads the selected image to be enlarged.

To delete the displayed preview image, click

## 4. If you want to scan only part of the document, specify the parameters.

Back

For details, see "Specifying the Parameters of a Scan," on p. 2-24.

5. Click [Scan].

Scanning a **Document** 

Introduction

00006660 Ħ 🖄 Troubleshooting Select All Crops 3 (Clear) Deletes the preview image from the preview 尜 area. It also resets the toolbar settings and color settings.  $\square$ (Crop) Specifies the parameter of a scan. Moves the enlarged image on the screen. (Move) a (Zoom) Enlarges or reduces the preview image. 0 Click on the image to zoom in, and right-click on the image to zoom out.

- (Left Rotate) Rotates the image 90 degrees left. Ď
- (Right Rotate) Rotates the image 90 degrees right.
- (Information) Lists the scanning information.
- (Auto Crop) Crops the image automatically. For details, Ħ see "Specifying the Parameters of a Scan," on p. 2-24.

Zoom

(Remove Cropping Frame) : X

Advanced Mode Toolbar

Removes the selected cropping frames.

# [Select All Crops] When this button is used, all the cropping frames reflect the settings made on the [Advanced Mode] tab sheet. [Zoom]

Back

Click this button to rescan the focal cropping area of the preview image at a higher level of magnification.

Previous

Next

Once clicked, this button changes into [Undo]. The image retunes to its original size by clicking [Undo].

TOP

# Specifying the Parameters of a Scan

You can create scan areas (cropping areas) for images shown in the preview area. When you click [Scan], only the cropped area will be scanned.

# 

Crop feature is invalid when [ADF (2-sided)] is selected in [Original Input Method] on the [Advanced Mode] tab sheet.

# Selecting the Cropping Area Automatically

After previewing, click X (Auto Crop) on the toolbar. Clicking this button enables you to gradually crop off the image outside the borders detected in the preview image.



# Scanning a Document

Troubleshooting

**Appendix** 

# **Creating a Cropping Frame**

Select [] (Crop) on the toolbar, click on the preview image and drag over the area you wish to select. To make further adjustments, drag the corner or edge of the selected frame or enter the desired parameter values for 📅 (Width) and 11 (Height) in [Input Settings] on the [Advanced Mode] tab sheet. To move the cropping frame you have selected, click inside the cropping frame and drag.

# MOTE

- To maintain the current width and height proportion of the image, click in [Input Settings].
- When using the ADF, creating a new cropping frame will erase an existing one.

# Creating Multiple Cropping Frames (Only when Using the Platen Glass)

You can create another cropping frame even if there is already one in the preview area. Click and drag the mouse cursor outside the existing cropping frame to create a new cropping frame in that area.

You can create up to 10 cropping areas. By clicking [Scan] once, all the cropped areas will be scanned. (Scanning will continue until all selected areas have been scanned.)

The most recently created cropping frame will become the focal point. To make adjustments to previously created cropping frames, select the frame or frames by clicking on them.

# **Deleting Cropping Frames**

If you want to remove cropping frames, select the frame or frames and do one of the following:

Previous

- Click [Delete] on the keyboard.
- Click M (Remove Cropping Frame) on the toolbar.

Back

- Right-click on the cropped area and select [Delete].
- Hold down [Ctrl] on the keyboard, right-click outside the cropped area, and select [Delete].

# Table of Contents

Next

Previous

Next

ΤΟΡ

# Introduction Scanning a Document 2 Troubleshooting 3 Appendix 4

# Advanced Mode Settings

Simple Mode Advanced Mode	L	
Favorite Settings	User Defined	~
nput Settings		
Original Input Method:	Platen Glass	~
Original Size:	Full Platen	~
	Oriental	ion
ili 2.43 🚮 ili 1.	12 Inche	s 🗸
Color Mode:	Color	*
Output Settings		
Output Resolution:	300	🗸 dpi
Output Size:	Flexible	*
道 2.43 关 道 1.	12 100	* %
Data Size:	720 KB	
mage Settings		
Auto Tone:	ON	*
Unsharp Mask:	ON	~
Descreen:	OFF	~
Reduce Dust and Scratches:	None	~
Fading Correction:	None	~
Grain Correction:	None	~
	-	N
	Custom	~
	Res	et
	Prefere	nces
Preview	<u>S</u> c.	an

# **Favorite Settings**

Favorite Settings enables you to save a set of settings (Input Settings, Output Settings, Image Settings, Color Settings and Preferences) made for the focal cropping frame. If there are no cropping frames, settings for the whole preview area are saved. You can also recall the saved settings and apply them to the selected frames or the whole preview area.

# Ø NOTE

The following items cannot be saved in Favorite Settings:

Back

- Values of High (Width) and High (Height) in [Input Settings] and in [Output Settings]
- Activation of button (maintaining the proportion of width and height) in [Input Settings]

- Value of [%] (Scale) in [Output Settings]

[User Defined]	When this option is selected, specify a value for each setting.
[Default]	Restores the default settings. The preview image will be cleared.
[Add/Delete]	Opens the [Add/Delete Favorite Settings] dialog box. This dialog box enables you to name and register a set of settings for the current preview image. [Add/Delete] is not displayed when there is no preview image.

TOP

Next

# Introduction

Scanning a Document

Troubleshooting

**Appendix** 

# Input Settings

[Original Input Method]

Selects where the document is placed from [Platen Glass], [ADF (1-sided)] or [ADF (2-sided)].

### MOTE

- If you change this setting after previewing, the preview image will be deleted.
- [ADF (1-sided)] and [ADF (2-sided)] are not available for models without ADF.

[Original Size] Selects the size of the original document.

#### MOTE

- If you change this setting after previewing, the preview image will be deleted.
- When the document is loaded in the ADF, select the paper size from [A5 Portrait], [A5 Landscape], [A4], [Letter] and [Legal].
- When [ADF (2-sided)] is selected in [Original Input Method], if the size specified in [Original Size] is different from the actual paper size, the scanning results may differ between the two sides of the page.

### (Original Orientation)

Shows the direction of the document being scanned. The icon display varies depending on the settings for [Original Input Method], [Original Size], and [Orientation].

[Orientation]	Opens the [Orientation] dialog box. This dialog box enables you to specify the orientation of the original document. When [ADF (2-sided)] is selected in [Original Input Method], select also the binding location of the original document.
🛗 (Width)	Specifies the width of the input size.
📺 (Height)	Specifies the height of the input size.

Back

**Previous** 

# MOTE

- Some applications have a limit to the amount of image data they can receive. If the parameters of a scan contain more than 21,000 x 30,000 pixels, the image will not be received.
- When [Output Resolution] is set to [600] dpi, minimum parameters of an image are 96 x 96 pixels.
- To maintain the current width and height proportions of the image, click .
- [Orientation] is not available for models without ADF.

[Color Mode]

Selects the type of document and the way in which it is scanned.

#### [Black and White]:

To output documents to a monochrome printer. The contrast in the image is divided at certain levels (threshold values) into black and white and is displayed in two colors. For the threshold setting, see "Color Settings," on p. 2-31.

# Introduction

Scanning a Document

Troubleshooting

Appendix

# [Grayscale]:

To scan black and white photos or monochrome images. The image is expressed in a 0-255 scale of black and white.

[Color]: To scan colo

To scan color photos. The image is expressed in 256 levels (8 bit) of R(ed), G(reen) and B(lue).

#### [Color (Documents)]:

To scan color documents that include texts or charts in addition to color photos. The image is expressed in 256 levels (8 bit) of R(ed), G(reen) and B(lue).

[Text Enhanced]: To scan texts crisply, particularly to process it with OCR software. The image is displayed in black and white.

# **Output Settings**

# [Output Resolution]

Specifies the resolution for the scan. You can select a resolution from the drop-down list, or enter any value between 25-9600 dpi. If you are using the ADF, enter a resolution between 25-600 dpi. For details, see "Determining Resolution," on p. 2-41. [Output Size]

Selects the output size of the scanned image. If you select [Add/Delete], the [Add/ Delete the Output Size] dialog box will appear and you can add and delete the custom output size (see p. 2-22). If [Flexible] is selected, enter values in (Width), (Height) or [%] (Scale). The resolution when you actually scan will change in accordance with the value of [%]. The ratio of (Width) and (Height) is linked to (Width) and (Height) in [Input Settings]. You can enter the value for [%] between 25 and 38400, but the upper limit varies depending on the value of [Output Resolution].

**Previous** 

Back

Next


Click 🔛 to switch the orientation of the output size (landscape or portrait). This button is invalid when [Flexible] is selected.

[Data Size]

Shows the data size of the scanned image according to your settings.

Previous

ΤΟΡ

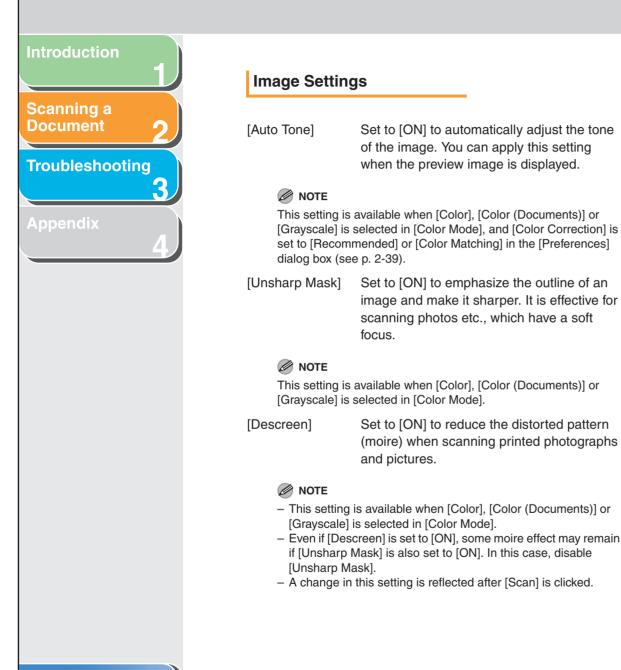

[Reduce Dust and Scratches]

Back

Reduces the dust and scratches on photos.

Next

[None]: No reduction of dust and scratches will be made.

[Low]: Reduces only small dust and scratch marks.

[Medium]: Normally this setting is recommended.

### [High]: Reduces large dust and scratch marks. This may remove delicate parts of the image.

# MOTE

This setting is available when [Color], [Color (Documents)] or [Grayscale] is selected in [Color Mode].

Back Previous

ΤΟΡ

Next



Appendix

### [Fading Correction]

Rebuilds the color quality that has faded over time. It also increases saturation of dullcolored originals to reproduce a vivid image. You can apply this setting when the preview image is displayed.

[None]: No fading correction will be made.

[Low]: Corrects slightly faded images.

[Medium]: Normally this setting is recommended.

[High]: Corrects highly faded images. This may change the tone of the image.

# Ø NOTE

This setting is available when [Color] or [Color (Documents)] is selected in [Color Mode], and [Color Correction] is set to [Recommended] in the [Preferences] dialog box (see p. 2-39). [Grain Correction] Smoothes out the film grain of the image recorded on fast film. The result is smoother tones and higher overall quality.

> [None]: No grain correction will be made.

[Low]: Select this setting when the grain in the picture is not so notable.

[Medium]: Normally this setting is recommended.

#### [High]:

Smoothes out even very notable grain in the picture. This may lower the image sharpness and tonal quality.

# Ø NOTE

 This setting is available when [Color], [Color (Documents)] or [Grayscale] is selected in [Color Mode].

- This setting is not reflected in the preview image.

Back Previous Next



# Introduction Scanning a Document Troubleshooting

3

# Color Settings

Using Color Settings buttons, you can adjust the brightness and contrast of the whole image, specify highlights and shadows, and adjust the contrast and balance in an image.

The buttons displayed differ depending on your selection in [Color Mode]. When [Text Enhanced] is selected, no Color Settings button is displayed.

When [Color], [Color (Documents)] or [Grayscale] is selected in [Color Mode]:

Custom	~
Reset	

When [Black and White] is selected in [Color Mode]:

Custom	*
Reset	

By selecting [Add/Delete] from the drop-down list, you can name and save a set of color settings. For details, see "Tone Curve/ Threshold Drop-Down List," on p. 2-36.


Clicking a button opens the dialog box for each color setting. If [Reset] is clicked, all color settings will be reset to the default values.

# Brightness/Contrast


This dialog box enables you to adjust the levels of brightness and contrast of the image.

Click 🗉 to adjust the brightness and contrast diagrammatically.



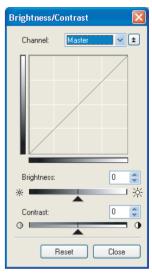

Back Previous Next

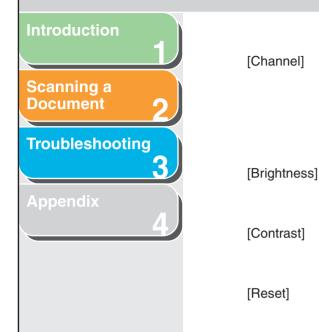

Select a color to adjust either [Red], [Green], or [Blue], or select [Master] to adjust all three colors together when [Color] or [Color (Documents)] is selected in [Color Mode]. Adjust the elements of grayscale when [Grayscale] is selected in [Color Mode].


Adjust the brightness of the image by moving the slider  $\blacktriangle$  or entering values (-127 to 127).

Adjust the contrast of the image by moving the slider  $\blacktriangle$  or entering values (-127 to 127).

Resets all the current settings to their default values.

# Histogram

This dialog box enables you to see the data concentration at each brightness level in an image. You can specify the darkest and brightest levels within an image, cut the levels and expand the middle of the tonal range of the image.

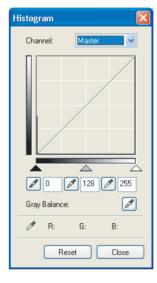

	_			Back	Previous	Next	ТОР
Introduction							
Scanning a Document 2 Troubleshooting	[Channel]	Select a color to adjust either [Red], [Green], or [Blue], or select [Master] to adjust all three colors together when [Color] or [Color (Documents)] is selected in [Color Mode]. Adjust the elements of grayscale when [Grayscale] is selected in [Color Mode].	🛃 (Gray Bala	button, th image (or point to e	er tool) justing a color en click a poin inside the foc xecute gray b elements with	nt in the pre al crop) to a alance adju	eview specify the ustment.
3	📝 (Black-poin	t eyedropper tool) Click this button, then click a point in the		elements	ar as a neutra within the ima		
Appendix 4		preview image (or inside the focal crop) to specify the darkest point. You can also enter a value (0 to 245) or move the slider $\blacktriangle$ to an appropriate level.	[Reset]		roduction. I the current s	ettings to th	neir default
	🖉 (Mid-point e	eyedropper tool)					
		Click this button, then click a point in the preview image (or inside the focal crop) to specify the midtone point. You can also enter a value (5 to 250) or move the slider $\triangle$ to an appropriate level.					
	🖉 (White-poir	nt eyedropper tool)					
		Click this button, then click a point in the preview image (or inside the focal crop) to specify the highlighted point. You can also enter a value (10 to 255) or move the slider $\triangle$ to an appropriate level.					

TOP Back **Previous** Next [Channel] Select a color to adjust either [Red], [Green], or [Blue], or select [Master] to adjust all three colors together when [Color] or [Color (Documents)] is selected in [Color Mode]. Adjust the elements of grayscale when [Grayscale] is selected in [Color Mode]. [Select Tone Curve] Select the tone curve from [No Correction], [Over Exposure], [Under Exposure], [High Contrast] or [Invert the Negative/Positive Image]. [Reset] Resets all the current settings to their default values.

This dialog box enables you to adjust the brightness of a specific area of an image by selecting the type of the tone curve. The tone curve is a graph showing the balance of tone input and output.

# Table of Contents

Introduction

Scanning a

Troubleshooting

3


**Document** 

Back Previous Next TOP

# Introduction 1 Scanning a Document 2 Troubleshooting 3 Appendix


# Final Review

This dialog box enables you to confirm the color settings.

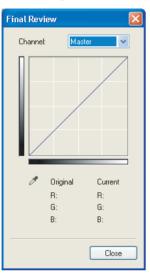

# Threshold

This dialog box enables you to adjust the threshold. By adjusting the threshold, you can sharpen characters in a text document and reduce back-printing such as in newspapers.

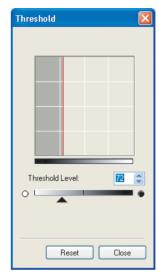

# **Table of Contents**

Previous Next





[Threshold Level]	Adjust the threshold by moving the slider <b>A</b> or entering a value (0 to 255).
[Reset]	Resets the current setting to the default value.

### MOTE

The brightness of color and grayscale images are expressed as a value between 0 and 255 but the brightness of black and white images is expressed in terms of either black or white, including the parts of an image which are a color between the two. The boundary at which black and white is divided is called "threshold".

### • Tone Curve/Threshold Drop-Down List

Back

This drop-down list enables you to save a set of color settings made for the focal cropping frame. If there are no cropping frames, settings for the whole preview area are saved. You can also recall the saved settings and apply them to the selected frames or the whole preview area.

[Custom]	When this option is selected, specify a value for each color setting. Even after the registered settings are applied, [Custom] resumes automatically if you change any setting or make adjustments to the selected cropping frame.
[Add/Delete]	Opens the [Add/Delete Tone Curve Settings] dialog box ([Add/Delete Threshold Settings] dialog box, when [Black and White] is selected in [Color Mode]). This dialog box enables you to name and register a set of

color settings.

Scanning a Document

Introduction

Troubleshooting

3

Appendix

# [Preferences] Dialog Box

Clicking [Preferences] on the [Advanced Mode] tab sheet opens the [Preferences] dialog box. This dialog box enables you to adjust settings for scanning and previewing.

# • [Preview] Tab

#### [Preview at the Start of ScanGear]

Selects the preview operation when you open the ScanGear iR.

[Automatically Execute Preview]: The preview scan starts automatically when you open the ScanGear iR.

[Display Saved Preview Image]: Displays the image last previewed.

[None]: Nothing is displayed.

[Cropping Frame on Previewed Images]

Sets how the cropping frame is displayed when you preview images.

[Execute Auto Cropping on Previewed Images]:

The image will be automatically cropped to match the document size.

[Display the Last Frame on Previewed Images]: Displays the last frame.


[None]: No frame will be displayed.





TOP



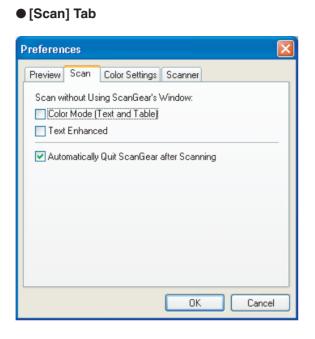

[Scan without Using ScanGear's Window]

Enables you to scan in a specific color mode when using an application that will not display the [ScanGear iR] dialog box (such as OCR software), overriding the application settings. [Color Mode (Text and Table)]: The document is scanned in a mode equivalent to [Color (Documents)] of [Color Mode], regardless of the application settings.

[Text Enhanced]:

The document is scanned in a mode equivalent to [Text Enhanced] of [Color Mode], regardless of the application settings.

[Automatically Quit ScanGear after Scanning]

If selected, the [ScanGear iR] dialog box quits automatically after the image is scanned.

Some applications will automatically quit ScanGear iR after scanning irrespective of this setting.

Previous



# Introduction Scanning a **Document** Troubleshooting 3

# • [Color Settings] Tab

references					×
Preview Scan (	Color Settings	Scar	nner		
Color Correction Recommend Color Matchi					
Source (Sca	anner):				~
Target:					~
Monitor				Re	set
🔘 None					
🗹 Always Execute	e the Auto Ton	е			
Monitor Gamma:	[1	.80	*	R	eset
			OK		Cancel

[Color Correction] Selects the type of color correction.

[Recommended]: Vividly reproduces the tone of a document on the screen.

#### [Color Matching]:

Back

Select to automatically match the scanner, monitor and color printer colors. If selected, the Color Settings buttons are invalid in the [Advanced Mode] tab sheet. This setting is available when [Color] or [Color (Documents)] is selected in [Color Mode].

Next

#### [None]:

No color matching is made. This setting is available when [Color], [Color (Documents)] or [Grayscale] is selected in [Color Mode].


[Always Execute the Auto Tone]

If selected, the image color will always be automatically corrected. This setting is available when [Color], [Color (Documents)] or [Grayscale] is selected in [Color Mode].

[Monitor Gamma] Enables you to perform gamma correction. Specify the gamma value (0.10 to 10.00) of the monitor for viewing the scanned image. This setting is not reflected in the scanning result when [Black and White] is selected in [Color Mode].

MOTE

[Monitor Gamma] value will be fixed to 1.80 when [Color Matching] is selected in [Color Correction].

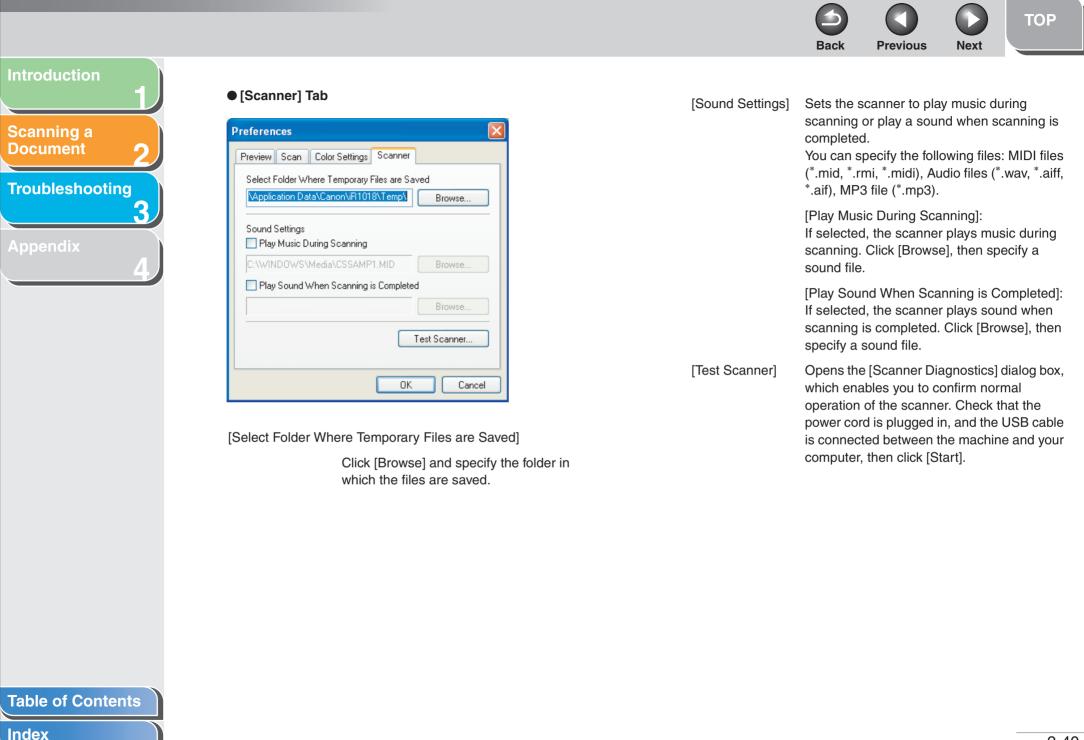

Introduction

Scanning a Document

Troubleshooting

3

Appendix

# Determining Resolution

The data in the image you scan is a collection of dots carrying information about brightness and color. The density of these dots is called "resolution" and "dpi" (dots per inch) refers to the number of dots in one inch.

You can specify a resolution in [Image Quality] in the iR Toolbox settings dialog box, or in [Output Resolution] in the ScanGear iR.

#### • Images for Display on a Monitor

Images for display on a monitor in general should be scanned at a resolution of 75 dpi.

#### Images for Printing

Images to be printed should be scanned at a resolution which corresponds to the resolution of the printer.

#### MOTE

With a color printer, the colors are expressed as a certain percentage of ink pigment so scanning your document at half the resolution of the printer should be fine.

#### Printing Scale

For example, if you want to print a document which is twice the original size both vertically and horizontally, the resolution of your document will be reduced by half. In such a case, scan the original document at double the resolution so that you can print the document with sufficient quality, even if you double the size of the document. Conversely, if you want to print a document at a reduced size, it should be sufficient to scan at half the resolution.

#### • Resolution and Data Size

Back

If you double the resolution, the image data will be four times greater. If the data is too large, processing speed will slow down significantly, and you may experience malfunctions such as lack of memory. Make sure the resolution corresponds to the planned use of the image and set it at the lowest level possible.

Previous

# **Table of Contents**

TOP

Next



# Introduction

Scanning a Document

### Troubleshooting

3

Appendix

# Scanning with the WIA Driver (Windows XP Only)

NOTE The WIA driver does not support 2-sided scanning.

# Scanning from the [Scanner and Camera Wizard] Dialog Box

- **1.** Open the [Scanners and Cameras] folder. Click [start] on the Windows task bar  $\rightarrow$  select [Control Panel]  $\rightarrow$  [Scanners and Cameras].
- **2.** Double-click the corresponding WIA driver icon.
- **3.** Click [Next >].

# **4.** Select a picture type.

Scanner and Camera Wizard		×
Choose Scanning Preferences Choose your scanning preferences, and then cli the picture.	ick Preview to see how your preferences affect	?
Picture type:		
Color picture		
Grayscale picture		
Black and white picture or text		
Custom		
Custom settings		
Paper source:		
Flatbed		
Page size:		
Legal 8.5 x 14 inches (216 x 356 mm) 🛛 👻	Preview (#) 👘	
	< <u>B</u> ack <u>N</u> ext > Cancel	

You can select from [Color picture], [Grayscale picture], [Black and white picture or text], and [Custom]. When selecting [Custom], click [Custom settings] to make detailed settings in the [Properties] dialog box.





Properties	? 🛛
Advanced Properties	
Appearance	Brightness: Contrast:
Resolution (DPI):	Picture type: Color picture
	Reset
	OK Cancel

# 5. Select the paper source.

You can select from [Flatbed] or [Document Feeder]. [Paper source] is not available for models without ADF.

# **6.** Specify the scanned area.

If you have selected [Flatbed] as the paper source, click [Preview]  $\rightarrow$  drag  $\blacksquare$  to specify the scanned area. If you have selected [Document Feeder] as the paper source, select the page size from the drop-down list.

# **7.** Click [Next >].

8. Specify a name, a file format, and the location for saving the group of pictures.

➢ Scanner and Camera Wizard	
Picture Name and Destination Select a name and destination for your pictures.	<b>B</b>
1. Type a name for this group of pictures:	
Picture	
2. Select a file format:	
💼 JPG (JPEG Image)	
3. Choose a place to save this group of pictures:	
🕘 My Pictures \Picture	Browse
< <u>B</u> ack Next>	Cancel

# Ø NOTE

- When you save more than one picture in the same location, sequential numbers are automatically added at the ends of file names.
- You can select a file format from [BMP (Bitmap Image)], [JPG (JPEG Image)], [TIF (TIF Image)], and [PNG (PNG Image)].



# Introduction Scanning a Document 2 Troubleshooting 3 Appendix 4

# 9. Click [Next >] to start scanning.

Scanning Picture Please wait while the wizard scans your picture.	E.
Location:	
My Pictures\Picture	
Picture:	
Picture 001.jpg	
To stop copying, click Cancel.	

# **10.** Click [Next >].

Scanner and Camera Wizard	
Other Options You can choose to keep working with your pictures.	E.
Your pictures have been successfully copied to your computer or network. You can also publish these pictures to a Web site or order prints online.	
What do you want to do?	
Publish these pictures to a Web site	
O Order prints of these pictures from a photo printing Web site	
Nothing. I'm finished working with these pictures	
Learn more about <u>working with pictures</u> .	
< <u>B</u> ack	Next > Cancel

If you want to publish these pictures to a Web site or order printouts online, select the corresponding option.

# 11. Click [Finish].





# Scanning from an Application

With the WIA driver dialog box open, follow the procedure below. On how to display the WIA driver, see "Scanning an Image from an Application," on p. 2-15.

Paper source	
Flatbed	
Select an option below for the type of picture you vant to scan.	
<ul> <li>Color picture</li> </ul>	
Grayscale picture	
Black and white picture or text	
Custom Settings	
'ou can also:	
'ou can also: Adjust the quality of the scanned picture	

# **1.** Select the paper source.

You can select from [Flatbed] or [Document Feeder]. [Paper source] is not available for models without ADF.

# **2.** Select the picture type.

You can select from [Color picture], [Grayscale picture], [Black and white picture or text], and [Custom Settings].

**3.** If necessary, click [Adjust the quality of the scanned picture].

The [Advanced Properties] dialog box appears.

4. Adjust the quality of the image  $\rightarrow$  click [OK].

For details on the settings, see "Advanced Properties," on p. 2-46.

# **5.** Specify the scanned area.

If you have selected [Flatbed] as the paper source, click [Preview]  $\rightarrow$  drag  $\blacksquare$  to specify the scanned area. If you have selected [Document Feeder] as the paper source,

select the page size in [Page size].

# 6. Click [Scan].

### **Table of Contents**

Introduction 1 Scanning a Document 2 Troubleshooting 3

# Advanced Properties

Advanced Properties	? 🗵
Advanced Properties	Dishara
	Brightness: Contrast:
Resolution (DPI):	Picture type:
150	Color picture
	Reset

Appearance	Shows the preview of sample image.
[Brightness]	Specifies the brightness (-127 to 127).
[Contrast]	Specifies the contrast (-127 to 127) (only for color or grayscale scanning).
[Resolution (DPI)]	Selects the scanning resolution in dot per inch (50 to 600).

[Picture type]	Selects the scanning color type ([Color picture], [Grayscale picture], or [Black and white picture or text]).
[Reset]	Resets all the current settings to their default values.

Previous

4

Back

Next

TOP

# Ø NOTE

The setting items and default values in the [Advanced Properties] tab vary depending on the type of picture you select.





# Back Introduction **3 Troubleshooting** Scanning a **Document** Troubleshooting 3 Table of Contents






Next

# Introduction Scanning a **Document Troubleshooting** Q 3 Α Q Α Q Α Q Α **Table of Contents** Index

# **Scanning Problems**

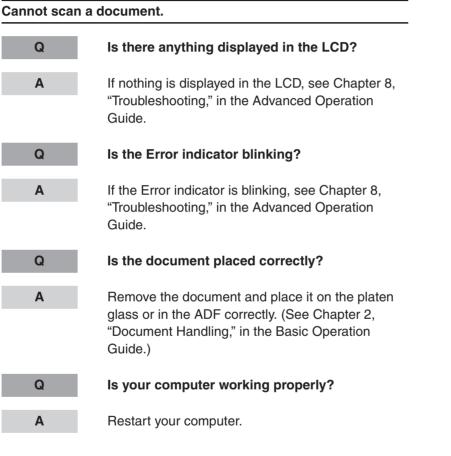

Is a USB hub or repeater working properly?

Q

Α


Q

Α

When using a USB hub or repeater, try connecting a USB cable directly to the computer to check if it works properly. If you can scan the document successfully after connecting a USB cable directly to the computer, check your USB hub or repeater if it is working properly.

Are you using a USB 2.0-compatible USB hub?

If you connect the machine to a USB 2.0-equipped computer using a USB 2.0-compatible USB hub, you may not be able to scan. In this case, connect a USB cable directly to the computer.

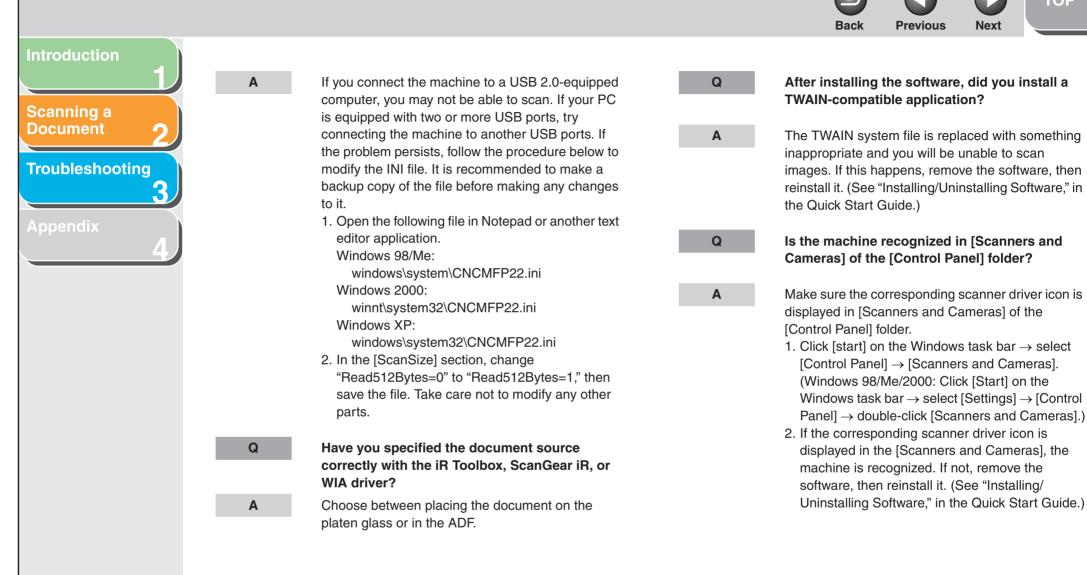


# **Table of Contents**

Index

TOP

Next

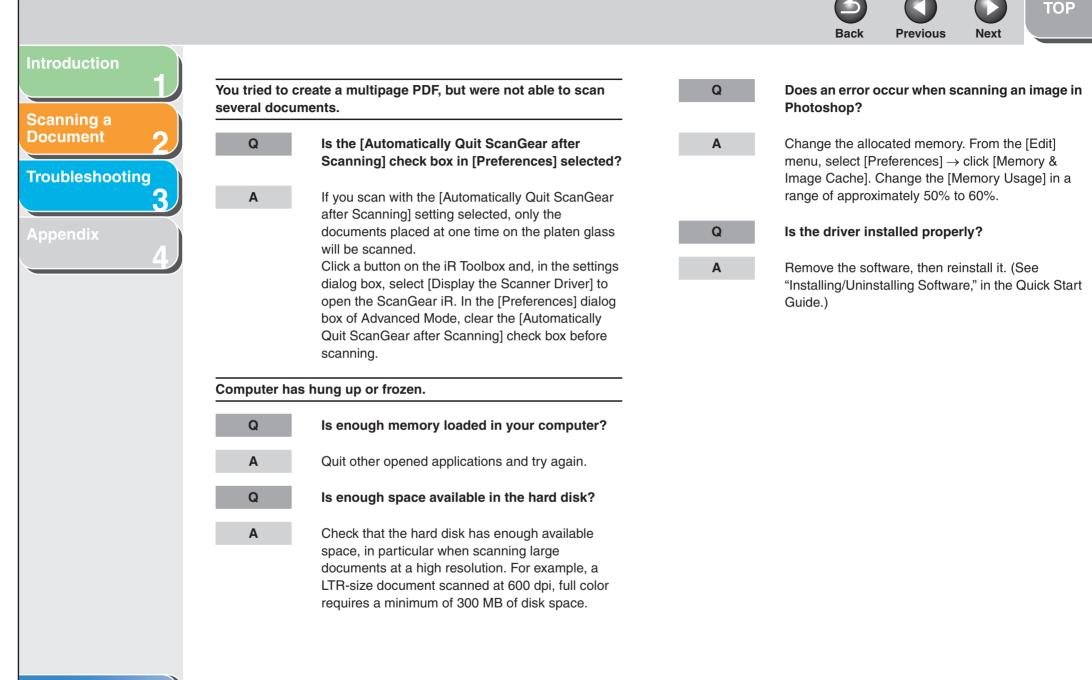



# Introduction

Scanning a Document



3



You installed the applications in the CD-ROM supplied with the machine but they are not registered in the iR Toolbox.

Have you installed the applications with the iR Toolbox open?

Α

Q

If you install the applications with the iR Toolbox open, the applications will not be registered in the iR Toolbox. On the iR Toolbox dialog box, click [Set] to register the application manually. (See "External Program (Mail Program)," on p. 2-13.)

When you click a button on the iR Toolbox, another application opens.

Q

Α

Is the application selected correctly for that button?

Click a button on the iR Toolbox and select the application you want to open for that button. (See "External Program (Mail Program)," on p. 2-13.)

### Changed settings in a dialog box are not activated.

Q


Α

Did you restart your computer after changing the settings?

If you open [Scanners and Cameras] in the [Control Panel] folder and change the settings in the [Events] tab, the changes may not be reflected. In this case, restart your computer.





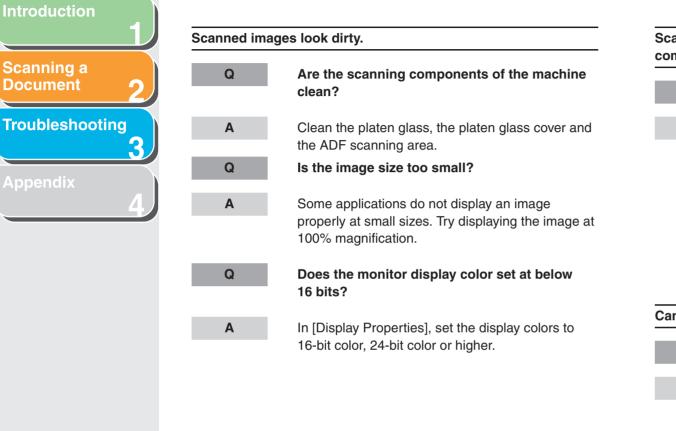

Scanned image is displayed at a larger (smaller) size on the computer screen.

Q	Is the resolution setting correct?
А	Do one of the following:
	<ul> <li>Enlarge or reduce the image display in the application. If you open the image in Paint or Imaging, it may display at a large size and you will not be able to reduce it.</li> </ul>
	<ul> <li>Change the resolution and scan again.</li> <li>The image will be large if the resolution is high. It will be small if the resolution is low. (See "Determining Resolution," on p. 2-41.)</li> </ul>
Cannot scan highlighted marks.	
Q	Is [Color Correction] set to [Color Matching] ?
Α	In [Advanced Mode] in ScanGear iR, set [Color Correction] to [Color Matching]. (See "[Color

Settings] Tab," on p. 2-39.)

Table of Contents

# **Installing and Uninstalling Problems**

Document

Scanning a

Introduction

Troubleshooting

3

Appendix

Q	Have you followed the instructions to install the software?
A	Try reinstalling the software. If an error occurred and installation was not complete, restart your computer and try reinstalling the software.
Q	Are any other applications open?
Α	Quit all of these and try reinstalling the software.
Removal of t	he drivers takes too long (Windows XP).
Q	Is any application such as an anti-virus open when removing the software?
Α	Quit any applications (including anti-virus) before removing the software.
Removal of t	he software was completed, but [Canon] remains.

If you remove the iR drivers first, the [Canon] folder may remain even after the iR Toolbox is uninstalled. In this case, perform the following steps to remove the folder.

**Previous** 

Next

TOP

In Windows XP, right-click the [start] menu to open the Windows Explorer  $\rightarrow$  select [Start Menu] in [All Users]  $\rightarrow$  [Programs]  $\rightarrow$  delete the [Canon] folder. In Windows 2000, open [Settings] from the [Start] menu  $\rightarrow$  click [Taskbar & Start Menu]  $\rightarrow$  [Advanced]  $\rightarrow$  [Advanced]  $\rightarrow$  select [Start Menu] in [All Users]  $\rightarrow$ [Programs]  $\rightarrow$  delete the [Canon] folder. In Windows 98/Me, open [Settings] from the [Start] menu  $\rightarrow$  click [Taskbar & Start Menu]  $\rightarrow$  [Start Menu Programs]  $\rightarrow$  [Remove]  $\rightarrow$  select the [Canon] folder

Back

Α

 $<sup>\</sup>rightarrow$  click [Remove].

TOP **Previous** Next Back The message <Version conflict> appears on your computer (Windows 98). Is Photoshop installed on your computer? Q If the message <Version conflict> or <Windows 98 Α file language or ...> appears during installation, click [Yes] or [No]. Whichever you click, installation thereafter will continue trouble-free. Cannot use the software after upgrading to Windows XP. Have you upgraded Windows 98/Me/2000 to Q Windows XP without removing the software? Remove the software, then reinstall it. (See Α "Installing/Uninstalling Software," in the Quick Start Guide.) In [Device Manager], green mark "?" is displayed (Windows Me). Is green mark "?" displayed on [USB Q Composite Device] in [USB (Universal Serial Bus) Controller] in [Device Manager] in Windows Me?

As this is not a problem, you can continue to use it as is.

# **Table of Contents**


Introduction

Scanning a Document

Troubleshooting

3

Α

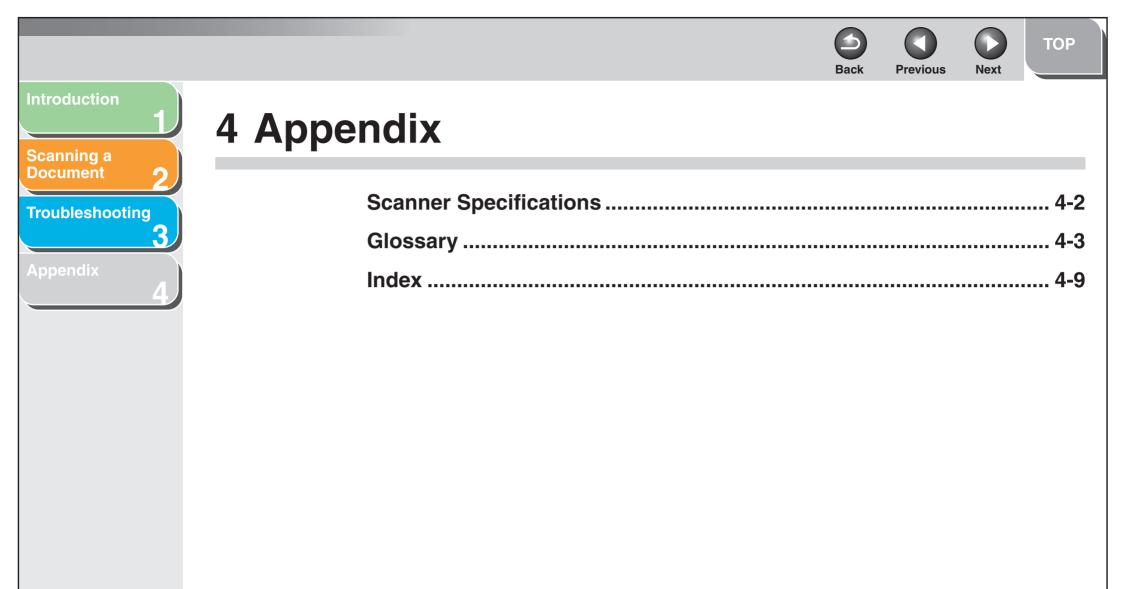



TOP

Next

# **Scanner Specifications**

Color scanner
8 ½" x 14" (216 mm x 356 mm)
25–9600 dpi (ScanGear iR)
Color: 2.56 msec/line (600 dpi) Grayscale: 2.56 msec/line (600 dpi)
USB 1.1, USB 2.0
Windows 98/98SE/Me/ 2000 Professional/XP (32-bit version)
TWAIN and WIA (Windows XP only) compliant

**NOTE** Specifications are subject to change without notice.

Table of Contents

Scanning a Document

Troubleshooting

3

# Back Previous

Next

### Introduction

# Scanning a Document

Troubleshooting

Appendix

3

### Application

Glossary

Abbreviation of the phrase "application software." Software designed for a specific purpose such as word processing software, spreadsheet software, database software, or a combination of these.

# В

Α

Bit

An indication of the volume of data used to describe points in an image. A 1-bit image assigns image data black or white color values depending on whether the brightness value is above or below a particular threshold value. The result is a two-color image. An 8-bit grayscale image expresses an image in 256 shades of gray ranging from white to black. A 24-bit color image assigns 8 bits to each RGB color channel, expressing each pixel in approximately 16.8 million colors.

#### **Brightness**

The relative proportion of light and dark areas. Decreasing brightness darkens the overall image; increasing brightness lightens it.

# С

#### **Color Matching**

In some cases, the range of colors captured by a scanner exceeds the range that can be displayed by a particular monitor. In addition, the colors displayed for an image on the monitor may be slightly different than those output by a printer. Color Matching is the process used to make the colors captured by a scanner consistent with those shown on a display or printed on a printer.

#### Contrast

The degree of difference between the lightest and darkest areas of an image. Decreasing contrast lightens the dark areas and darkens the light areas; increasing it darkens the dark areas and lightens the light areas.

#### **Control Panel**

The set of Windows programs you can use to change system, hardware, software, and Windows settings.

#### Crop

The action of selecting only part of an image for use. Using the Crop button on the ScanGear iR toolbar, a portion of the preview image can be selected and only that portion is then re-previewed or included in the final scan.

# Table of Contents

Previous Next

TOP

# Introduction

# Scanning a Document

Troubleshooting

Appendix

# D

### Default setting

A setting that is automatically used if no other setting is specified.

#### Descreen

A function that reduces the occurrence of moire in the scan of a printed item. Moire is the patterns or stripes that are visible in a low-resolution scan of a picture or photo in a book or magazine due to the interference patterns between the dots that comprise the image.

#### Desktop

The entire Windows screen that represents your work area in Windows. Icons, windows, and the taskbar are displayed on the Windows desktop.

#### Dot

Images are reproduced as rows and columns of dots. When an item is scanned with a scanner, the resolution, or dot density, of the scanned image is measured as the number of dots per inch (dpi).

### dpi

Dots per inch. A unit of measurement for indicating a machine's resolution.

#### Driver

A program that controls how the computer and an external device interact. For example, the scanner driver supplies OS with information and features of the installed scanner. See also Scanner driver.

# Ε

# Exif

The Exchangeable Image File (Exif) format is a Japan Electronic Industry Development Association (JEIDA) standard used by most digital cameras to store images. The Exif compressed files use the baseline JPEG format, so they can be read by any application supporting "JPEG." EXIF supports the storage of extra information, such as the date & time the image was taken, exposure information, etc., within the header of each JPEG file.

Back

# F


#### Folder

A container in which documents, program files, and other folders are stored on your disks. Formerly referred to as a directory.

Previous

Next

ΤΟΡ

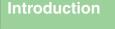

Scanning a Document

Troubleshooting

Appendix

G

### Gamma Correction

Method for changing the brightness of an image. With gamma correction, the brightness of parts of an image in the middle of the tonal range is changed without changing the lightest or darkest areas of the image, which means you can change the brightness of an image while maintaining contrast.

### Grayscale image

A bitmap image that stores data for each dot as a shade of gray, rather than as black or white.

#### Install

To copy software to a designated location on a computer's hard disk so that it can be used at any time.

#### Interface

The connection between two devices through which they communicate with each other. The machine features a USB interface, which makes it compatible with IBM and similar personal computers.

# Κ

#### Kilobyte (KB)

A unit of measurement, representing the binary number 1024, used to describe machine or computer memory size in thousandbyte units.

# L

#### Landscape

A horizontal scanning orientation. Documents are scanned across the longer axis of the page.

Back

### Μ

#### Megabyte (MB)

A unit of measurement, representing one million bytes, used to describe machine or computer memory size.

### Multipage PDF

Several scanned documents saved as one PDF. Each document will become one page of the PDF.

#### My Computer

The Windows program that you can use to browse through your computer's filing system, and to open drives, folders, and files. You can also use [My Computer] to manage your files and your filing system, by moving, copying, renaming, and deleting items.

# Ν

#### Network

A group of computers connected by cables or other means and using software that enables them to share equipment (such as printers) and exchange information.

# **Table of Contents**

TOP

**Previous** Back

Next

# Introduction

Scanning a **Document** 

# Troubleshooting

3

#### **OCR (Optical Character Reader)**

Device for reading characters optically. System for extracting information in a text format from information in the form of a graphic such as hand-written or printed characters which have been scanned with a scanner. You cannot edit text scanned with a scanner because it is in a graphic format, but with OCR software you can convert to a text file and then edit the text with wordprocessing software.

#### Orientation

The direction in which a document is fed, either along the width (portrait) or length (landscape) of the page.

# Ρ

0

#### PDF

Stands for Portable Document Format. A widely used format for transmitting and viewing documents on computers. PDF documents can be read or printed out with Adobe's Acrobat Reader program.

#### **Pixel**

Short for picture element, a pixel is the smallest unit used to measure a display image.

#### Platen

The document scanning unit.

#### Portrait

A vertical scanning orientation. Documents are scanned across the shorter axis of the page.

#### Preview

Provisional scanning and display of the document you are about to scan before you actually scan it. If the preview scan looks different from what you want, you can change the settings, display the preview again and confirm before scanning.

#### **Preview** area

The area at the left of the ScanGear iR main window. When the Preview button is clicked, the item(s) on the platen glass of the scanner are scanned, and the results are displayed as the preview image in this area. At this stage, the scanned image is not passed on to the host application program.

#### **Properties dialog box**

The dialog box that contains information about a particular device, such as a scanner.

# **Table of Contents**



# Introduction

Scanning a Document

Troubleshooting

3

Appendix

# R

### Random Access Memory (RAM)

The working memory of the computer in which programs and data are temporarily stored while you use them. Resetting or shutting off the computer clears all information from RAM. Printing very complicated documents might require closing other running programs or adding more RAM to the computer.

#### Reinstall

To remove installed software and install again.

#### Resolution

The density of dots for any given output device, expressed in terms of dots per inch (dpi). Low resolution causes font characters and graphics to have a jagged appearance, but prints faster than higher resolutions. Higher resolution provides smoother curves and angles as well as a better match to traditional typeface designs, but prints more slowly. Resolution values are represented by horizontal data and vertical data, for example, 600 x 600 dpi.

# S

#### Scanner driver

A program that controls how the computer and scanner interact. The scanner driver is provided with two drivers: The TWAIN and the WIA driver (for use with Windows XP).

# Scanners and Cameras folder (Scanners and Cameras Properties dialog box)

The folder or dialog box that contains information about your imaging devices, such as scanners or cameras.

# Т

# TWAIN (Technology Without Any Interested Name)

Industry-standard protocol for transferring information from devices such as scanners and digital cameras to a computer.

Industry-standard protocol for an application programming interface (API) for input devices such as scanners. If both the device and the application comply with the standard, they will be compatible regardless of differences in manufacturer or model.

For example, with TWAIN-compatible image-processing software, you can start the scanner's TWAIN driver from the software's menu, scan the document and return the scanned image to its original image-processing software.

# Table of Contents

Back **Previous**  TOP

Next

Uninstall Scanning a **Document** 

3

Troubleshooting

Introduction

W

U

To remove software installed on a computer and return the computer to its condition before the software was installed.

# Universal Serial Bus (USB) interface

These are new serial interface standards. This bus automatically recognizes connections (Plug and Play) to allow plugging and unplugging connectors with the power still turned on to the PC or peripheral equipment.

### WIA (Windows Image Acquisition)

Standard for downloading images from scanners or digital cameras. The machine includes a TWAIN-compliant driver and a WIA-compliant driver. The WIA driver can only be used with Windows XP. With either driver, you can scan documents with the machine in applications which support the TWAIN interface (Photoshop etc.).

### Windows Explorer

The Windows program you can use to browse through, open, and manage the disk drives, folders, and files on your computer in a network system. You can also use Windows Explorer to view and open shared folders on other computers on the network. You can use Windows Explorer to manage your files by moving, copying, renaming, and deleting files.

**Table of Contents** 

Next

**Previous** 



### Introduction

# Scanning a **Document**

# Troubleshooting

3

Index

### Α

Add/Delete the Output Size dialog box 2-22 Advanced Mode settings 2-26 switching 2-20 toolbar 2-24 using 2-23 Advanced Properties dialog box 2-46 Application 2-15 Auto Tone 2-29

# В

Brightness 2-31

# С

Cannot install 3-7 Color Matching 2-39 Color Settings 2-31 Color Settings tab 2-39 Contrast 2-31 Crop 2-24

# D

Descreen 2-29 Driver checking installation 1-4

# Ε

Exif settings 2-13

# F

Fading Correction 2-30 Favorite Settings 2-26 Final Review 2-35

# G

Gamma 2-39 Grain Correction 2-30

# Н

Histogram 2-32

Image Settings 2-29 Input Settings 2-27 Installing and uninstalling problems 3-7 iR Toolbox Save Scanned Image to 2-11 scanner settings 2-9 settings 2-9 using 2-7

# Μ

Back

Multiple PDF 2-16

# 0

Orientation 2-10 **Output Settings 2-28** 

# Ρ

Parameters of a scan specifying 2-24 PDF Setting dialog box 2-16 Preferences dialog box 2-37 Preview tab 2-37 Problems installing and uninstalling 3-7 scanning 3-2

# R

Reduce Dust and Scratches 2-29 Resolution determining 2-41 DPI 2-46 output 2-28

# Table of Contents

Back

TOP

Next

**Previous** 

# Introduction

Scanning a **Document** 

Troubleshooting

3

S Scan tab 2-38 ScanGear iR Advanced Mode 2-23 setting 2-20 Simple Mode 2-20 Scanner and Camera Wizard 2-42 Scanner tab 2-40 Scanning 2-1 a large document 2-18 from an application 2-15, 2-45 problems 3-2 setting 2-5 using iR Toolbox 2-7 with [Start] on the machine 2-3 Setting the scanning function for [Start] in the [Scanners and Cameras] folder 2-5 in the [Settings] dialog box 2-5 on the iR Toolbox main window 2-4 Simple Mode switching 2-20 toolbar 2-22 using 2-20 Software checking installation 1-4 problems during installing and uninstalling 3-7

Specifications scanner 4-2 Stitch-assist 2-18 System requirements 1-3

# Т

Threshold 2-35 Tone Curve 2-34 Tone Curve/Threshold drop-down list 2-36 **Troubleshooting 3-1** TWAIN driver 2-15

# U

Unsharp Mask 2-29

# V

Version conflict 3-8

# W

WIA driver 2-15, 2-42

Back Previous

# Scanning a Document

Troubleshooting

Introduction

Appendix

# Canon

CANON INC. 30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

CANON U.S.A., INC. One Canon Plaza, Lake Success, NY 11042, U.S.A.

CANON CANADA INC. 6390 Dixie Road Mississauga, Ontario L5T 1P7, Canada

**CANON EUROPA N.V.** Bovenkerkerweg 59-61 1185 XB Amstelveen, The Netherlands

CANON FRANCE S.A.S. 17, quai du Président Paul Doumer 92414 Courbevoie Cedex, France

CANON COMMUNICATION & IMAGE FRANCE S.A.S. 12, rue de l'Industrie 92414 Courbevoie Cedex, France

CANON (U.K.) LTD. Woodhatch, Reigate, Surrey, RH2 8BF, United Kingdom

**CANON DEUTSCHLAND GmbH** Europark Fichtenhain A10, 47807 Krefeld, Germany

CANON ITALIA S.p.A. Via Milano, 8 20097 San Donato Milanese (MI) Italy

**CANON ESPAÑA, S.A.** c/ Joaquín Costa 41, 28002 Madrid, Spain

**CANON LATIN AMERICA, INC.** 703 Waterford Way Suite 400, Miami, Florida 33126 U.S.A.

CANON AUSTRALIA PTY. LTD 1 Thomas Holt Drive, North Ryde, Sydney, N.S.W. 2113, Australia

CANON CHINA CO., LTD 15F, North Tower, Beijing Kerry Centre, 1 Guang Hua Road, Chao Yang District, 100020, Beijing, China

CANON SINGAPORE PTE. LTD.

1 HarbourFront Avenue #04-01 Keppel Bay Tower, Singapore 098632

**Table of Contents** 

Index

USRM1-0001-00

© CANON INC. 2006

